

Installation and Operation Manual

IP-DECT Base Station and IP-DECT Gateway (software version 3.0.x)

Contents

1 Introduction.....	1
1.1 Abbreviations and Glossary	2
2 Description.....	3
2.1 IPBS	3
2.1.1 IPBS with Internal Antenna	3
2.1.2 IPBS with External Antennas	5
2.2 IPBL	6
2.2.1 Overview	6
2.2.2 Power Supply	6
2.2.3 LED indication	6
2.3 DECT Base Station (BS3x0)	8
2.3.1 DECT Base Station	8
2.4 AC-adapter	9
3 Safety Instructions	10
3.1 Safety Symbols	10
3.2 Protection Against Electrostatic Discharge (ESD)	11
3.2.1 ESD Handling	11
3.3 Safety Aspects	11
3.3.1 IP-DECT Base Station	11
3.3.2 BS3x0 Base Station	11
3.3.3 IP-DECT Gateway	11
3.4 Regulatory Compliance Statements (EU/EFTA only)	12
3.5 Regulatory Compliance Statements (USA and Canada only)	12
4 IP Security	14
4.1 IP Security Terminology	14
4.1.1 SSL/TLS	14
4.1.2 Public Key Infrastructure	14
4.1.3 Cryptography	15
4.2 Introduction to IP Security in IP-DECT	16
4.2.1 Secure Web Access (https)	16
4.2.2 TLS Certificates	16
4.3 IP-DECT Administrative functions	17
4.3.1 Configuration - HTTP	17
4.3.2 Configuration - Certificates	17
5 Installation of the Base Station.....	18
5.1 Base Station Cabling	18
5.2 Install the Base Station	18

5.2.1 Fix the Mounting Bracket to a Wall	18
5.2.2 Fix the Mounting Bracket to a Ceiling	19
5.2.3 Fix the Mounting Bracket to a Pole or Beam	19
5.2.4 Use the Cable Ducts	20
5.2.5 Secure the Cable	21
5.2.6 Pinning	21
5.2.7 Connect the Base Station Cables	23
5.2.8 Mount the Base Station	23
5.3 Power the Base Station	24
5.3.1 Power the IPBS over Ethernet	24
5.3.2 Power the BS3x0 over Express Powering Pair (EPP) and data pairs	24
5.3.3 Power the Base Station with a Local Power Supply	24
6 Installation of the IPBL.....	25
6.1 Install the IPBL	25
6.2 Pin the IPBL Cable	26
6.2.1 Synchronization Cable	26
6.2.2 RFP Cable	27
6.2.3 LAN Cable	27
6.3 Power the IPBL	29
6.3.1 110/230 VAC	29
6.3.2 48 VDC	30
7 Configuration	31
7.1 Requirements	31
7.1.1 Web Browser Requirements	31
7.2 Access the GUI	31
7.2.1 Determine the IP Address	31
7.2.2 Change the Default Password	33
7.3 GUI Web Access	34
7.3.1 Login Page	34
7.3.2 Access Levels	34
7.3.3 Auditors	34
7.3.4 User Administrators	34
7.3.5 System Administrators	35
7.4 Configure the Mobility Master	38
7.5 Configure the Standby Mobility Master	39
7.6 Configure the Pari Master	39
7.7 Configure the Standby Pari Master	40
7.8 Configure the Master	41
7.9 Configure the Standby Master	41
7.10 Plug and Play Configuration	42

7.11 Configure the Radio	42
7.12 Add Users	43
7.12.1 Anonymous Registration	43
7.12.2 Individual Registration	44
7.13 Logout/Login Users	44
7.13.1 Logout Users	44
7.13.2 Login Users	45
8 Operation.....	46
8.1 General	46
8.1.1 Change User Name and Password	46
8.1.2 Name the IPBS/IPBL	46
8.1.3 Configure Automatic Firmware Update	47
8.1.4 Configure the NTP Settings	48
8.1.5 Configure Logging	49
8.1.6 Configure the HTTP settings	50
8.1.7 Configure the HTTP Client settings	51
8.1.8 SNMP	51
8.1.9 Certificates	52
8.2 LAN	57
8.2.1 Set DHCP Mode	57
8.2.2 Set a Static IP Address	57
8.2.3 Dynamic IP address via DHCP	58
8.2.4 Link	58
8.2.5 Configure VLAN	58
8.2.6 View LAN Statistics	58
8.3 IP	59
8.3.1 Configure IP Settings	59
8.3.2 Routing	59
8.4 LDAP	59
8.4.1 Configure LDAP Server	60
8.4.2 Check LDAP Server Status	60
8.4.3 Configure LDAP Replicator	61
8.4.4 Check LDAP Replicator Status	65
8.4.5 Expert tool	65
8.5 DECT	66
8.5.1 Change System Name and Password	66
8.5.2 Change Subscription Method	67
8.5.3 Configure Authentication Code	67
8.5.4 Select Tones	67
8.5.5 Set Default Language	67

8.5.6 Set Frequency Band	68
8.5.7 Enable Carriers	68
8.5.8 Local R-Key Handling	68
8.5.9 No Transfer on Hangup	68
8.5.10 Configure Coder	69
8.5.11 Configure Supplementary Services	69
8.5.12 Select Mode	70
8.5.13 Set Master Id	71
8.5.14 Enable Pari Function	71
8.5.15 Configure Gatekeeper	71
8.5.16 Registration for Anonymous Devices	72
8.5.17 Select Mobility Master Mode	73
8.5.18 Connect Mobilty Master to other Mobility Master(s)	73
8.5.19 Connect Master to a Mobility Master	73
8.5.20 Enable the Radio	74
8.5.21 Enter IP Address to the Pari Master and the Standby Pari Master	74
8.5.22 Multiple Radio Configuration	74
8.5.23 PARI	74
8.5.24 SARI	75
8.5.25 Configure Air Synchronization	75
8.6 VoIP	80
8.6.1 Add instance id to the user registration with the IP-PBX	80
8.6.2 Session Timer (initial value)	80
8.7 UNITE	80
8.7.1 Configure Messaging	80
8.7.2 Device Management	81
8.7.3 Service Discovery	81
8.7.4 Send Status Log	81
8.8 Users	81
8.8.1 Add a User	82
8.8.2 Search for User Information	82
8.8.3 Show all Registered Users in the IP-DECT System	82
8.8.4 Show Anonymous	82
8.9 Device Overview	83
8.9.1 Radios	83
8.9.2 Air Sync	84
8.9.3 RFPs	84
8.9.4 Sync Ring	87
8.9.5 Sync Ports	87
8.10 Traffic	88
8.10.1 Display All Ongoing Calls in the System	88

8.10.2 Display Calls	88
8.10.3 Handover	88
8.11 Gateway	89
8.11.1 General	89
8.11.2 Interfaces	90
8.11.3 SIP Interfaces	91
8.11.4 Gatekeeper Interfaces	96
8.11.5 Routes – Configuration	98
8.11.6 Show Active Calls	101
8.12 Backup	103
8.13 Upgrade from IPBS/IPBL software version 2.x.x to 3.x.x	104
8.13.1 IPBS Upgrade	104
8.13.2 IPBL Upgrade	104
8.13.3 Configuration	104
8.13.4 Downgrade from software version 3.x.x to 2.x.x	105
8.14 Update	106
8.14.1 Update Configuration	106
8.14.2 Update Firmware	106
8.14.3 Update the Boot File	107
8.14.4 Update the RFPs	107
8.15 Diagnostics	108
8.15.1 Logging	108
8.15.2 Tracing	108
8.15.3 Alarms	108
8.15.4 Events	109
8.15.5 Performance	110
8.15.6 Config Show	110
8.15.7 Ping	111
8.15.8 Traceroute	111
8.15.9 Environment	112
8.15.10 RFP Scan	112
8.15.11 Service Report	112
8.16 Reset	113
8.16.1 Idle Reset	113
8.16.2 Immediate Reset	113
8.16.3 TFTP Mode	113
8.16.4 Boot	113
8.17 Reset Using the Reset Button	113
9 Commissioning.....	114
9.1 Radio coverage verification tests	114

9.1.1 Base Station Operation Test	114
9.1.2 Coverage Area Test	114
9.1.3 Evaluation	114
9.2 Cordless Extension Number Test	114
10 Troubleshooting	116
10.1 Load Firmware Using the Gwload Tool	116
10.2 Fault Code Descriptions	116
11 Related Documents	119
Appendix A: How to Use the Update Server	121
Appendix B: RFP Power Consumption.....	126
Appendix C: Local R-Key Handling	128
Appendix D: Database Maintenance	129
Appendix E: Load Balancing.....	131

1 Introduction

This document describes how to install and operate the following equipment:

- IPBS Base Station (IPBS) ¹
- IPBL ²

The document is intended as a guide for installation, troubleshooting and maintenance purposes and are relevant for the following personnel:

- System administrator
- Service technician

For information on the IP-DECT system, see *System Description, Ascom IP-DECT System, TD 92375GB*.

For information about supported PBXs contact your supplier.

1. In previous documentation, *IPBS Base Station* (or *IPBS*) was sometimes referred to as *IP-DECT Base Station*.

2. In previous documentation, *IPBL* was sometimes referred to as *IP-DECT Gateway*.

1.1 Abbreviations and Glossary

Base Station	Common name for IPBS and DECT Base Station (BS3x0)
DECT	Digital Enhanced Cordless Telecommunications: global standard for cordless telecommunication.
DECT Base Station	Another name for <i>BS3x0</i>
DHCP	Dynamic Host Configuration Protocol
DTMF	Dual Tone Multiple-Frequency
FER	Frame Error Rate
GUI	Graphical User Interface
IP	Internet Protocol: global standard that defines how to send data from one computer to another through the Internet
IPBL	Previously called <i>IP-DECT Gateway</i> or, more commonly, as "the Blade"
IPBS	Also referred to as <i>IPBS Base Station</i> . Previously called <i>IP-DECT Base Station</i>
LAN	Local Area Network: a group of computers and associated devices that share a common communication line.
LDAP	Lightweight Directory Access Protocol
PBX	Private Branch Exchange: telephone system within an enterprise that switches calls between local lines and allows all users to share a certain number of external lines.
PSCN	Primary receiver Scan Carrier Number: defines the RF carrier on which one receiver will be listening on the next frame.
RFP	Radio Fixed Part. DECT base Station part of the DECT Infrastructure.
RFPI	Radio Fixed Part Identity
RSSI	Radio Signal Strength Information
RTP	Real-Time Transport Protocol
SST	Site Survey Tool
ToS	Type of Service
VLAN	Virirtual Local Area Network

2 Description

This section gives a general description of the following devices:


- IPBS, see [2.1 IPBS](#)
- IPBL, see [2.2 IPBL](#) on page 6
- DECT Base Station, see [2.3 DECT Base Station \(BS3x0\)](#) on page 8.

2.1 IPBS

The following versions of the IPBS are available:

- IPBS with Internal antenna
- IPBS with External antennas

2.1.1 IPBS with Internal Antenna

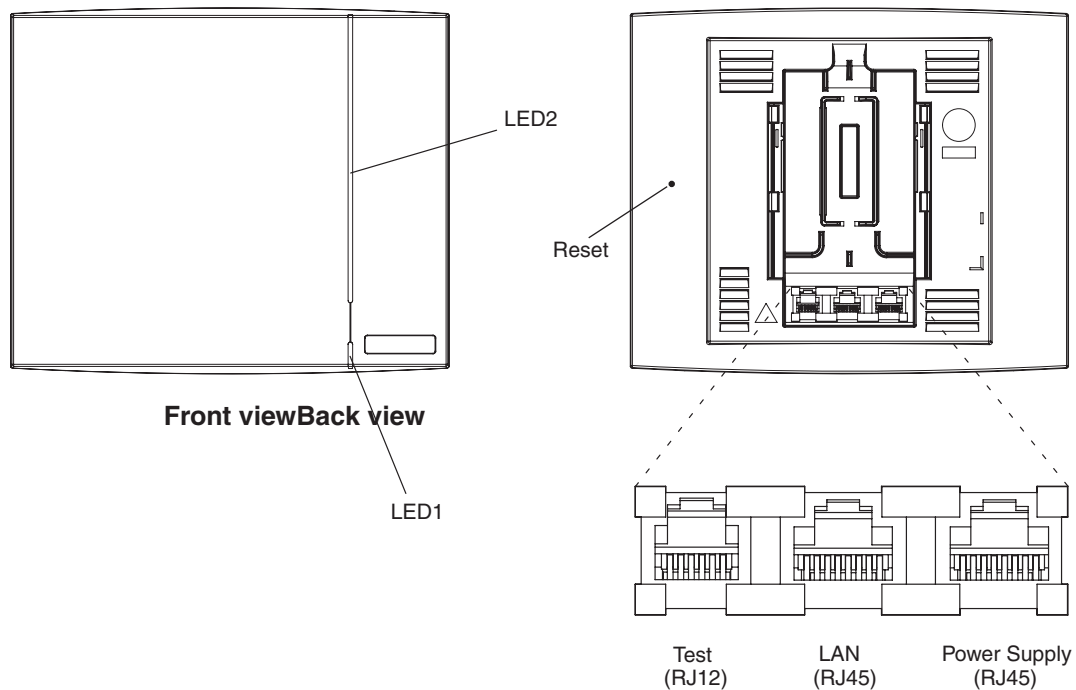

005

Figure 1. IPBS Overview

Contents of the Box

The box in which the IPBS is packed contains:

- An IPBS with integrated antennas
- A mounting bracket
- Two screws with wall plugs

Power Distribution

The IPBS can be powered using the following methods:

- Power over Ethernet, IEEE 802.3af
- A local AC-adaptor

Note: For more information about power distribution, see [5.3 Power the Base Station](#) on page 24.

Software

The software in the IPBS can be updated by downloading new software without disconnecting the equipment. The new software is stored in flash memory. See [8.14 Update](#) on page 106 for information.

Connectors

- Two 8-pin RJ45 modular jacks for LAN/PoE and powering
- A 6-pin RJ12 modular jack for factory testing

LEDs

Status of LED1 (lower LED)	Description
Steady Green	Operational
Quick flashing amber	Download of firmware in progress.
Steady Amber	TFTP mode
Alternating red/green	No Ethernet connection

Status of LED2 (upper LED)	Description
Not lit	IPBS operational and no traffic Air synchronization OK
Steady green	IPBS operational and traffic Air synchronization OK
Slow flashing green	Air synchronization OK and fully occupied with traffic
Flashing amber	Air synchronization adequate and no traffic
Slow flashing amber	Air synchronization adequate and fully occupied with traffic
Steady amber	Air synchronization adequate and traffic
Flashing red	No air synchronization - searching for air sync candidates
Quick flashing red	Download of RFP software in progress

Note: All amber statuses are warnings that Air synchronization, although still adequate, is fading and might be lost. A flashing red indicates lost Air synchronization.

2.1.2 IPBS with External Antennas

The IPBS is available with two omni-directional external antennas. Other external antennas can be mounted as well. This section contains the differences between the IPBS with internal and external antennas. For all other information see [2.1.1 IPBS with Internal Antenna](#) on page 3.

Contents of the Box

The box in which the IPBS is packed contains:

- An IPBS for external antennas
- Two antennas
- A mounting bracket
- Two screws with wall plugs

Note: The IPBS cannot be mounted with the antennas pointing downwards as the mounting bracket does not support it.

Insert the antennas into the IPBS before following the installation instructions in [5.2 Install the Base Station](#) on page 18.

2.2 IPBL

The following versions of the IPBL are available:

- IPBL IP-DECT Gateway VAC/VDC (for 110/230 VAC or 48 VDC)
- IPBL IP-DECT Gateway VDC (for 48 VDC)

2.2.1 Overview

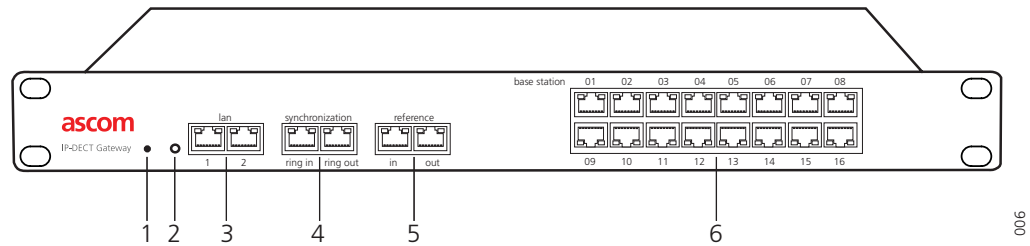


Figure 2. Overview of the IPBL

Pos.	Name	Function
1	Reset	Resets the IPBL, see 8.17 Reset Using the Reset Button on page 113 for more information.
2	Status LED	Indicates the status on the IPBL.
3	Lan	10BASE-T/100BASE-T Ethernet interface. LAN1 port must be used in the IP-DECT system (LAN2 port is for administration only).
4	Synchronization	Sync ring in and sync ring out interfaces.
5	Reference	Reference sync in and reference sync out interfaces.
6	Base station 01-16	ISDN U _{PN} DECT base station interfaces.

2.2.2 Power Supply

The power supply are located at the rear of the IPBL. The IPBL can be powered using the following alternatives:

- 110/230 VAC (*only IPBL IP-DECT Gateway VAC/VDC*)
- 48 VDC

Note: For more information, see [6.3 Power the IPBL](#) on page 29.


Software


The software in the IPBL can be updated by downloading new software without disconnecting the equipment. The new software is stored in flash memory. See [8.14 Update](#) on page 106 for information.


2.2.3 LED indication


Status LED	Description
Not lit	Not powered, status is not defined.
Flashing slow green	When pressing the reset button.
Flashing fast green	Firmware update or clear config after long reset.


Steady green	Status OK, system is fully operational.
Steady red	Status Fail, system error condition.
Steady amber	System is in TFTP server mode.


Base station LED 	Description
Not lit	No U _{PN} link established.
Flashing	U _{PN} link established (activated state), RFP is not operational.
Steady	RFP is fully initialised and operational.

Base station LED 	Description
Not lit	No speech activity in RFP.
Flashing	All speech channels occupied in RFP.
Steady	Speech activity in RFP.

Sync/Ref sync LED 	Description
Not lit	No sync communication established.
Steady	Communication established.

Sync/Ref sync LED 	Description
Not lit	Sync port not selected as input sync source.
Flashing	Sync port selected as input sync source but the sync signal is not in sync.
Steady	Sync port selected as input sync source and the sync signal is in sync.

Lan LED 	Description
Not lit	No link.
Flashing	Link present and network activity.
Steady	Link present, but no network activity.

Lan LED 	Description
Not lit	10 Mbps operation.
Steady	100 Mbps operation.


2.3 DECT Base Station (BS3x0)

The following versions are available:

- BS330 with Internal antenna
- BS340 with External antennas

Note: BS370 cannot be used in an IP-DECT system with IPBS.

2.3.1 DECT Base Station

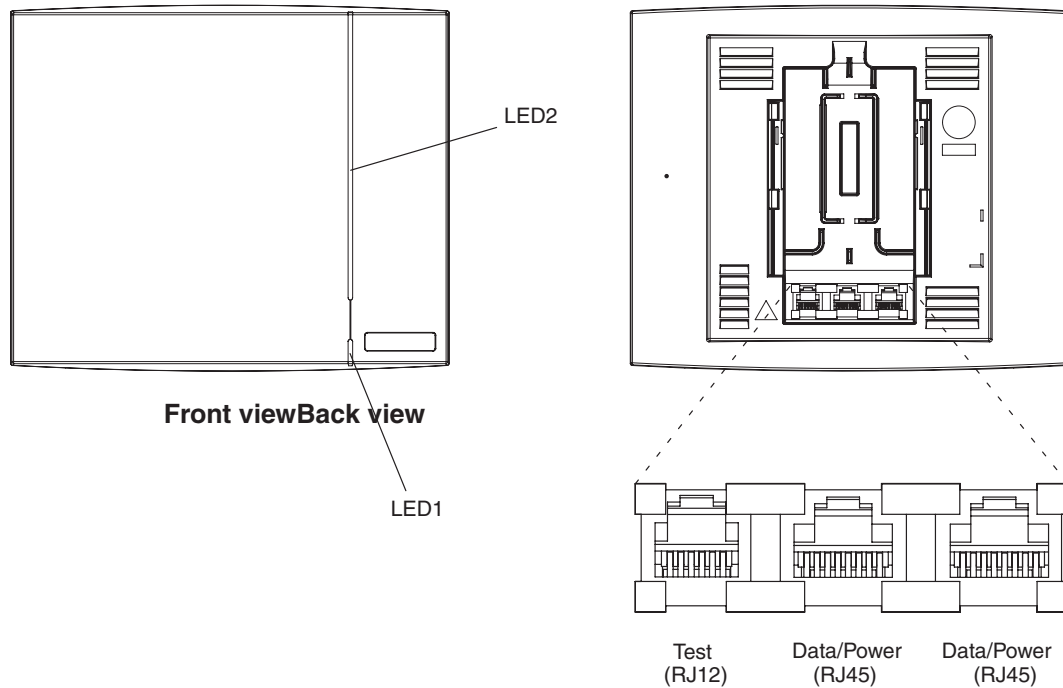

007

Figure 3. BS3x0 Overview

Contents of the Box

The box in which the base station is packed contains:

- A base station
- Two antennas (only base station with external antenna)
- A mounting bracket
- Two screws with wall plugs

Power Distribution

The base station can be powered using the following methods:

- From the IPBL via the Express Powering Pair (EPP) and data pairs
- With a local AC-adaptor

Note: For more information about power distribution, see [5.3 Power the Base Station](#) on page 24.

Software

The software in the BS3x0 can be updated by downloading new software without disconnecting the equipment. The new software is stored in flash memory. See [8.14 Update](#) on page 106 for information.

Connectors

- Two 8-pin RJ45 modular jacks for data and powering
- A 6-pin RJ12 modular jack for factory testing

LEDs

Status of LED1 (lower LED)	Description
Steady Green	Power LED

Status of LED2 (upper LED)	Description
Not lit	Base station operational and no traffic on the base station.
Flashing green	All 8 speech channels are in use.
Steady green	Base station operational and traffic on the base station.
Flashing amber	Software is being downloaded to the base station
Steady amber	Base station is OK, but not available (self-test, not initialized, no communication with IPBL)

2.4 AC-adapter

The AC-adapter is used to power a base station locally.

Note: The maximum length of cable from adapter must not exceed 10 meters.

Versions (different type of mains plug)

BSX-0013	For European countries except U.K.
BSX-0014	For U.K.
BSX-0015	For US/Canada
BSX-0016	For Australia

IMPORTANT: If local power supply is used for the RFPs, the EPP cable pair must **not** be connected.

3 Safety Instructions

For safe and efficient operation, observe the guidelines given in this manual and all necessary safety precautions. Follow the operating instructions and adhere to all warnings and safety precautions located on the product and this manual.

- Installation and service is to be performed by service persons only.
- IPBL must be connected to a mains socket outlet with a protective earthing connection.
- IPBL must be permanently connected to protective earth when powered by 48 VDC.
- IPBL must be mounted in a Restricted Area Location (RAL) in Sweden, Finland and Norway.
- Ensure that the voltage and frequency of the mains power socket matches the voltage and frequency inscribed on the equipment's electrical rating label.
- Never install telephone wiring during a thunderstorm.

Note: Avoid touching or punching down the IPBS/RFP signal and power pairs as there is 48Vdc or 24Vdc present on these wires at all times.

- Always install the base station conforming to relevant national installation rules.
- Disconnect all power sources before servicing the equipment.
- Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may cause damage or danger.
- Only approved power supplies according to valid editions of EN/IEC/CSA/UL/AU/NZS 60950 are to be used when the IPBS/RFPs are powered by local power supplies.

3.1 Safety Symbols

For protection and to avoid damage to the IP-DECT system you will find stickers where applicable. The stickers have the following symbols and meaning:



Caution

Read and follow the safety rules and warning messages in this manual. If the instructions are not followed, there is risk of damage to the equipment.



Caution ESD

Read and follow the handling instructions described in chapter [3.2.1 ESD Handling](#) on page 11.

Boards which contain Electrostatic Sensitive Devices (ESD) are indicated by this sign.

If the instructions are not followed, there is risk of damage to the equipment. For handling these boards see [3.2 Protection Against Electrostatic Discharge \(ESD\)](#) on page 11.



Warning

Read and follow the safety rules and warning messages in this manual. Hazardous voltages are present.

If the instructions are not followed, there is risk of electrical shock and danger to personal health.

3.2 Protection Against Electrostatic Discharge (ESD)

Integrated circuits are sensitive to ESD. To avoid damage caused by ESD, service engineers and other people must handle equipment and boards carefully.

Electronic equipment has become more resistive to ESD, but we see an increase of situations where static electricity can build up. This is caused by an increasing application of man-made fibres like nylon, acrylic, etc. which are capable of generating ESD of 10,000 Volts and more.

Walking across a nylon carpet, even for a few feet, could cause a person to be charged up to more than 10,000 Volts.

Under these conditions, if a system board or a (C)MOS device is touched it could easily be damaged. Although the device may not be totally defective, it is often degraded, causing it to fail at a later date without apparent reason.

To make sure that equipment and parts are well protected during shipment, special packaging materials are utilized. System boards will be shipped in anti-static bags and (C)MOS devices and other sensitive parts in small shielded boxes.

3.2.1 ESD Handling

In the interest of quality and reliability, it is advisable to observe the following rules when handling system parts:

- Keep parts in their protective packaging until they are needed.
- When returning system parts like EEPROMS to the factory, use the protective packaging as described.
- Never underestimate the damaging power ESD can have and be especially careful when temperatures are below freezing point and during very warm weather in combination with low humidity. Make sure that the environmental conditions remain within the limits specified in the components' data sheets.

IMPORTANT: In the interest of quality and reliability system boards and other parts returned for exchange or credit may be refused if the proper protective packaging is omitted!

3.3 Safety Aspects

3.3.1 IP-DECT Base Station

The IP-DECT Base Station meets the valid editions of safety standard EN/IEC/CSA/UL/AU/NZS 60950-1. The system is a class III equipment for stationary wall mounting.

3.3.2 BS3x0 Base Station

The IP-DECT Base Station meets the valid editions of safety standard EN/IEC/CSA/UL/AU/NZS 60950-1. The system is a class III equipment for stationary wall mounting.

3.3.3 IP-DECT Gateway


The IP-DECT Gateway meets the valid editions of safety standard EN/IEC/CSA/UL/AU/NZS 60950-1.

3.4 Regulatory Compliance Statements (EU/EFTA only)

The equipment are intended to be used in the whole EU&EFTA.

The equipment are in compliance with the essential requirements and other relevant provisions of R&TTE Directive 1999/55/EC. The Declarations of Conformity may be consulted at:

http://www.ascom.com/ws/products_ws.htm

The IP-DECT Base Station, BS3x0 Base Station and IP-DECT Gateway are marked with the label .

3.5 Regulatory Compliance Statements (USA and Canada only)

FCC compliance statements

The equipment have been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/tv technician for help.

Information to user

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Requirements for Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe B conforme à la norme NMB-003 du Canada.

Modifications

Any modifications not expressly approved by Ascom could void the user's authority to operate the equipment.

Exposure to radio frequency signals

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

4 IP Security

4.1 IP Security Terminology

4.1.1 SSL/TLS

Note: Secure Socket Layer (SSL) has been renamed Transport Layer Security (TLS). TLS 1.0 is based on SSL 3.0/3.1. This document hereafter uses the term TLS.

TLS is a security mechanism based on cryptography (see [4.1.3 Cryptography](#)) and is used for encrypting communications between users and TLS-based Websites. The encryption prevents eavesdropping and tampering with any transmitted data.

TLS operates on the OSI Model Level 5 and uses PKI (see [4.1.2 Public Key Infrastructure](#)).

4.1.2 Public Key Infrastructure

Public Key Infrastructure (PKI) is a component of Public Key Cryptography (PKC) that uses:

- Public Key Certificates, see [Public Key Certificates \(Digital Certificates\)](#)
- Certificate Authorities, see [Certificate Authorities](#)

Public Key Certificates (Digital Certificates)

Public Key Certificates are used for key exchange and authentication. They are simply electronic documents (files) that incorporate a digital *signature* to bind together a *public key* with an *identity* (information such as the name or a person or organization, their address, and so forth).

The signature may be signed by a trusted entity called a Certificate Authority (CA), see [Certificate Authorities](#).

The most common use of public key certificates is for TLS certificates (https websites).

Certificate Authorities

A Certificate Authority or Certification Authority (CA) is a trusted entity which issues public key certificates. The certificates contain a public key and the identity of the owner. The CA asserts that the public key belongs to the owner, so that users and relying parties can trust the information in the certificate.

Certificate Signing Request (CSR) or Certification Request is a message that is generated and sent to a CA in order to apply for a TLS certificate. Before the CSR is created a key pair is generated, the private key kept secret. The CSR will contain the corresponding public key and information identifying the applicant (such as distinguished name). The private key is not part of the CSR but is used to digitally sign the entire request. Other credentials may accompany the CSR.

If the request is successful, the CA will send back an identity certificate that has been digitally signed with the CA's private key.

A CSR is valid for the server where the certificate will be installed.

4.1.3 Cryptography

Cryptography is the encoding of messages to render them unreadable by anyone other than their intended recipient(s). Modern cryptography uses complex algorithms implemented on modern computer systems.

Cryptography tasks can be divided into the two general categories Encryption and Authentication.

Encryption

Encryption is the scrambling of information so that the original message cannot be determined by unauthorized recipients by applying an *encryption algorithm* to the message *plaintext* producing *ciphertext* (apparently random bits). A *decryption algorithm*, if given the correct key, converts the ciphertext back into plaintext. Public key algorithms use paired keys, one for encryption and another for decryption.

Authentication

Authentication is the verification of a message's sender. This requires the message to be protected so it cannot be altered, usually by generating a *digital signature* formed by a hash of the message. Only the correct key can generate a valid signature.

4.2 Introduction to IP Security in IP-DECT

A secure system requires more planning than an unsecured system.

4.2.1 Secure Web Access (https)

For IP-DECT devices

- https access should be enabled
- http access should preferably be disabled

For more information see [8.1.6 Configure the HTTP settings](#) on page 50 .

4.2.2 TLS Certificates

Security in Web-based applications rely on cryptography. Cryptographical systems are only as secure as their *keys*. This makes *Key Management* a critical and often neglected concern. *TLS Certificates* have emerged as a clever way of managing large scale key distribution.

Certificate Handling Options

There are three certificate handling options:

1 Default Device certificate

The default certificate is supplied with the device. It is a self-signed certificate. Self-signed certificates provide only encryption, not authentication.

For more information see [Default Device Certificate](#) on page 53.

2 Self-signed certificates

This option is for customers not planning on having their certificates signed by public or private CAs. Self-signed certificates **provide encryption but do in most cases not provide authentication**.

For more information see [Self-signed Certificates](#) on page 54.

3 Certificates signed by a Certificate Authority (CA).

Two options are possible:

- **A) Certificates signed by the customer's own CA.** Customers possessing the knowledge and infrastructure to house their own CA could build an internal enterprise CA, enabling them to sign (approve) their own certificate requests. This would make the customer a private CA.
- **B) Certificates signed by a trusted public third party entity/organization.** There are only about a dozen issuers who have the authority to sign certificates for servers worldwide. An example is VeriSign. To use a public CA for certificate approvals the IP-DECT system would in most cases need to be connected to the Internet and hold a fully qualified domain name.

For more information see [Certificate Signing Request \(CSR\)](#) on page 55.

4.3 IP-DECT Administrative functions

4.3.1 Configuration - HTTP

The HTTP Tab is used to configure the type of web access that should be allowed for the device, includes a field for configuring https access.

For more information see [8.1.6 Configure the HTTP settings](#) on page 50.

4.3.2 Configuration - Certificates

The *Certificates* tab lists the certificate used by web browsers to authenticate the identity of the device (Web server).

For more information see [8.1.9 Certificates](#) on page 52.

5 Installation of the Base Station

This section describes how to install the IPBS and BS3x0. Both base stations can be fixed to a wall, a ceiling, a pole or a beam, by means of the mounting bracket included. When fixing the base station to a wall or ceiling the included plugs and screws must be used. When fixing it to a pole or beam a strap or a flexible metal band must be used, this is not included.

Note: Fixing the base station to metal surfaces requires special consideration and is not recommended for several reasons. If this is unavoidable try to ensure a distance between the base station and the metal surface of, preferably, 1 meter. If this is not possible to achieve the best option to use is base station with internal antennas/BS330.

5.1 Base Station Cabling

Recommended base station cable is a standard CAT5 unshielded ethernet cable with minimum 26 AWG copper conductors, this cable is also used for powering the base station. It is assumed that installation personnel know how to crimp RJ45 connectors to a cable.

Note: Since the distance between the base station and the wall is limited, a RJ45 modular jack without cable retention must be used.

Note: Ensure that during the installation of an base station, each base station is given an extra length (5-10 metres) of cable because it is possible that it will have to be moved for one reason or another.

5.2 Install the Base Station

The base station can be mounted vertically or horizontally. Mount the base station at places and positions as determined in the base station plan, see *System Planning, Ascom IP-DECT, TD 92422GB*. The base station must be placed in a way that it is not facing large metal objects such as large heating pipes.

5.2.1 Fix the Mounting Bracket to a Wall

Fix the mounting bracket (see [figure 4](#) on page 19) to the wall as follows:

- 1 Hold the mounting bracket with its flat side against the wall with the text 'TOP' upwards and mark the two holes. The minimum distance between the upper hole and the ceiling or any object above the base station must be at least 65 mm, see [Figure 4](#). If the distance is less than 65 mm, the base station cannot be slid onto the bracket.
- 2 When using wall plugs: Drill the two holes using a Ø 6 mm drill and insert the included wall plugs.
- 3 Position the mounting bracket with its flat side to the wall and fasten it with the two included Ø 3.5 mm screws.

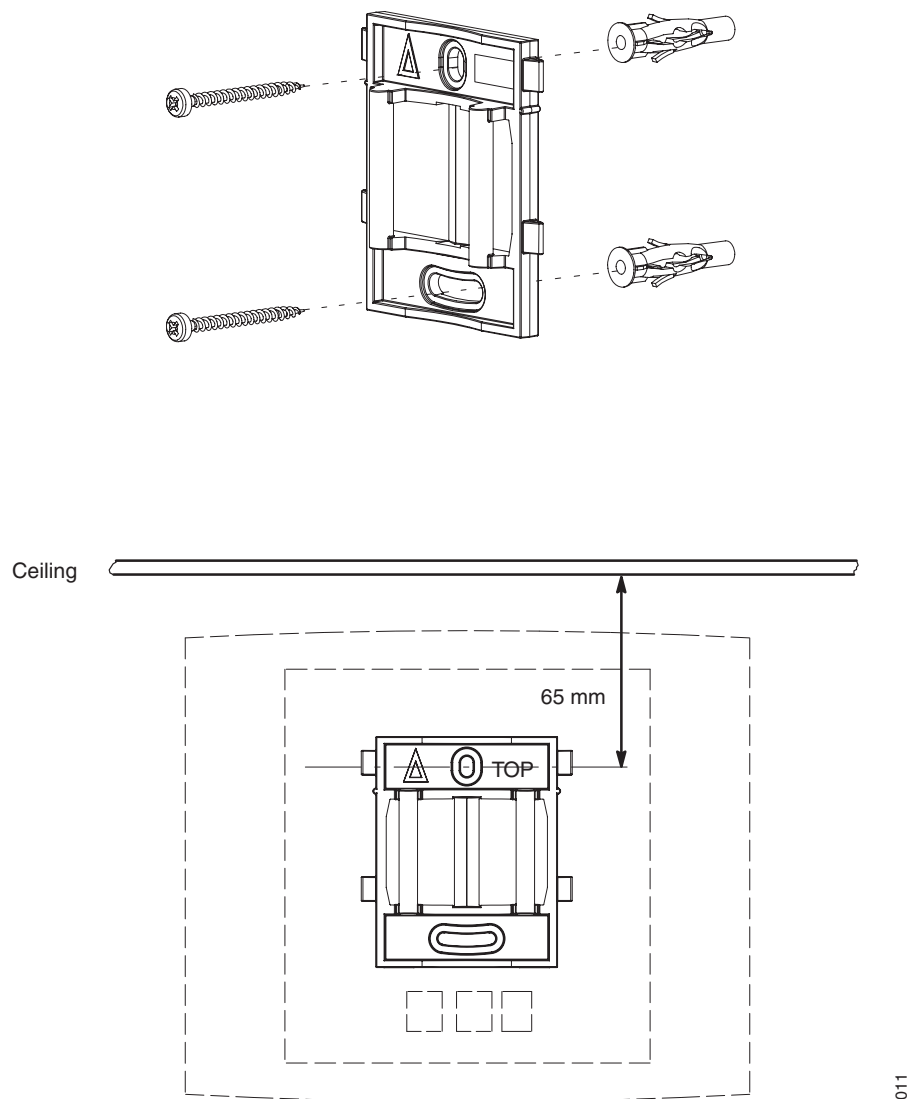


Figure 4. Fixing the mounting bracket to a wall

5.2.2 Fix the Mounting Bracket to a Ceiling

Fixing to a ceiling is done in the same way as the a wall, see [5.2.1 Fix the Mounting Bracket to a Wall](#). When the base station has to be positioned above a suspended ceiling, make sure that the front of the base station points downwards.

5.2.3 Fix the Mounting Bracket to a Pole or Beam

The mounting bracket can be fixed to a pole (diameter ≥ 45 mm) or a beam (wider than 50 mm) by means of a strap or flexible metal band less than 30 mm wide. The strap or flexible metal band is not included in the box.

- 1 Fix the mounting bracket to a pole or beam using the metal band, see [Figure 5](#).

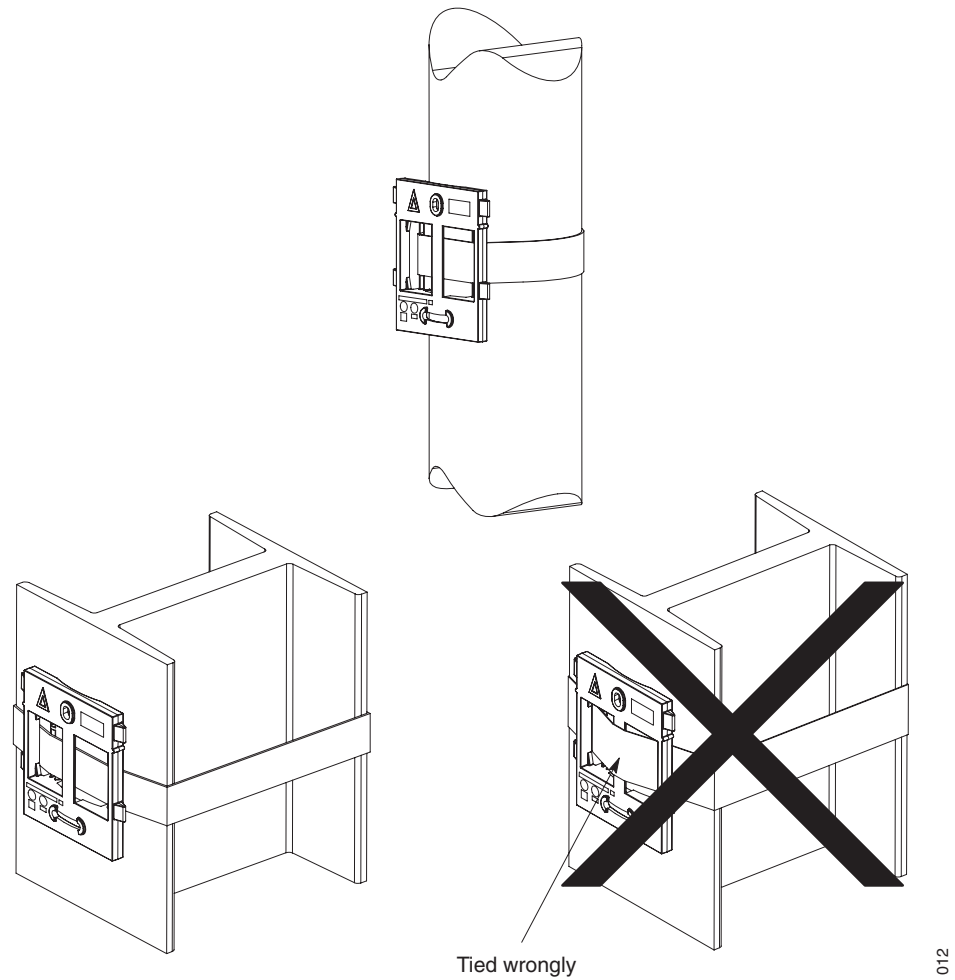


Figure 5. Fixing the mounting bracket to a pole or beam

5.2.4 Use the Cable Ducts

When the base station is mounted to the wall, cable ducts can be used to route the wiring through.

- 1 Fix the cable duct to the wall in one of the positions shown in [figure 6](#) on page 21.

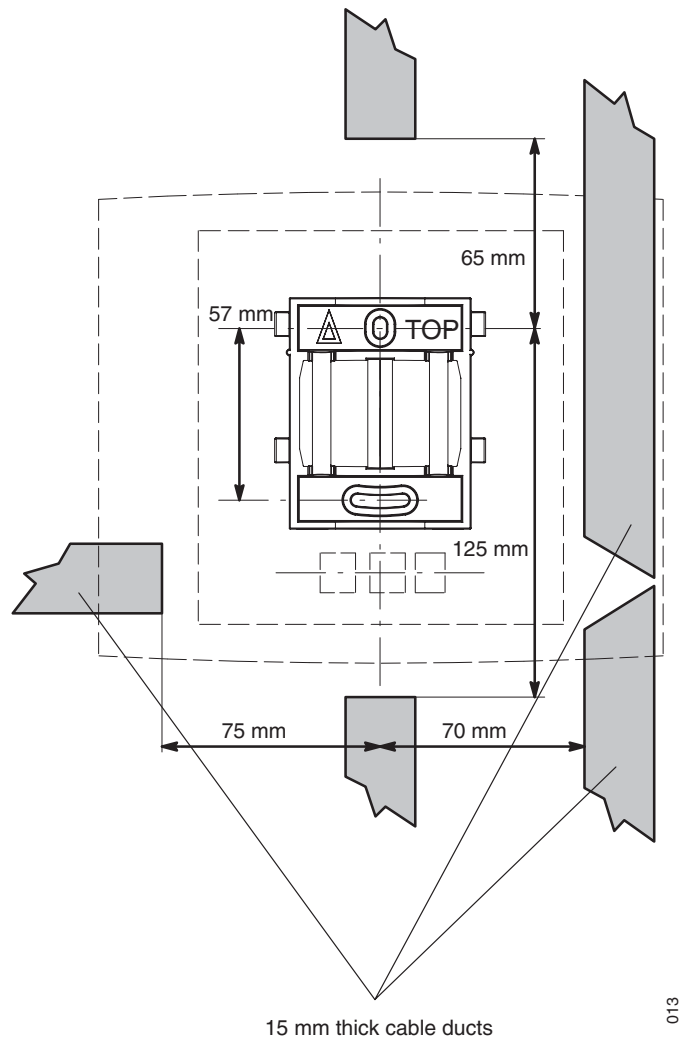


Figure 6. Minimum distances between a cable duct and the mounting bracket

5.2.5 Secure the Cable

- 1 For safety reasons secure the base station cable to a convenient point at about 30 cm from the base station.

If for some reason the base station drops, it is secured by the cable.

5.2.6 Pinning

- 1 Cut the cable to the correct length and connect the cable to a RJ45 modular jack.
- 2 For information on the pinning of the data jack see the following:
 - IPBS, [Pin the IPBS Cable](#) on page 22.
 - BS3x0, [Pin the BS3x0 Cable](#) on page 22.

Do **not** plug the connector in the base station yet!

Note: Since the distance between the base station and the wall is limited, a RJ45 modular jack without cable retention must be used.

Pin the IPBS Cable

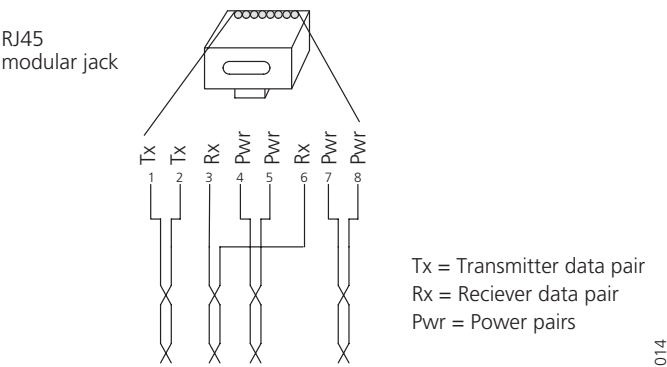


Figure 7. Connector pinning of the LAN/PoE connector, power feed over the spare cable pairs.

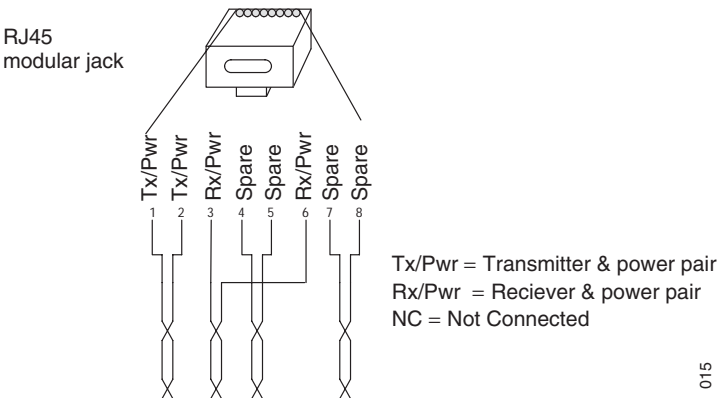


Figure 8. Connector pinning of the LAN/PoE connector, power feed over the Rx/Tx data cable pairs.

Pin the BS3x0 Cable

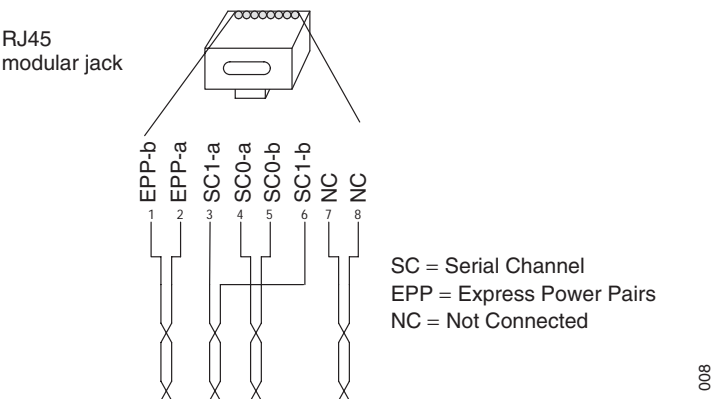


Figure 9. Connector pinning of the Data connector

IMPORTANT: If local power supply is used, the EPP cable pair must **not** be connected.

5.2.7 Connect the Base Station Cables

- 1 If it is required that the cables enter the base station centrally from above, guide the cables through the recess in the middle of the base station as shown in [figure 10](#) on page 23.

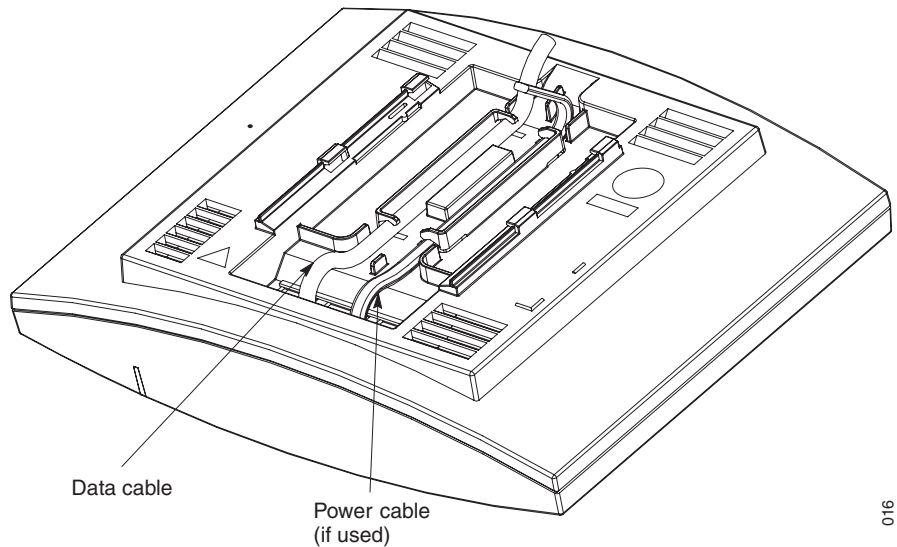


Figure 10. Cables entering centrally from above

- 2 Plug the modular jack of the data cable into one of the data/power connectors.
- 3 When an AC-adapter is used:
 - Plug the modular jack of the AC-adapter in one of the data/power connectors.
 - Plug the AC-adapter into a wall-outlet.

5.2.8 Mount the Base Station

- 1 Hold the base station flat against the mounting bracket and move it downwards until it clicks, see [Figure 11](#).

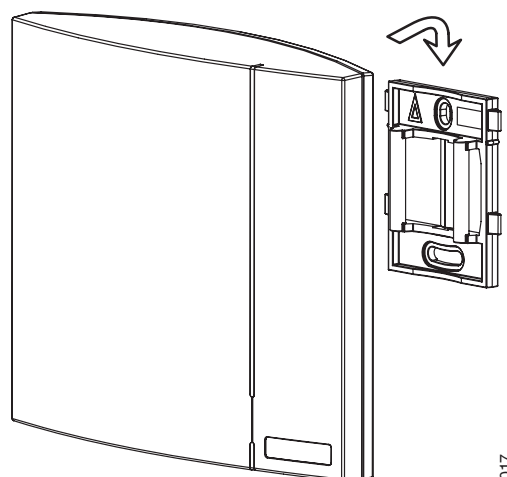


Figure 11. Mounting the base station

5.3 Power the Base Station

The base station is powered the following ways:

- Power over Ethernet (only IPBS).
- Power over Express Powering Pairs (EPP) and data pairs (only BS3x0)
- By a local power supply.

Note: Do not power the base station using both power supplies. Parallel powering will not harm the base station but it can disturb the signalling.

5.3.1 Power the IPBS over Ethernet

The IPBS supports Power over Ethernet, IEEE 802.3af, class 2. The IPBS power consumption is maximum 5W. But according to the PoE standard for class 2 the PoE power source will allocate 7W to the IPBS. This must be regarded when planning the powering of the IPBSs so that the power limit of the PoE power source is not exceeded.

The PoE standard supports two ways of feeding the power:

- 1 Power over the Rx/Tx data pairs.
- 2 Power over the spare cable pairs.

Both power feed methods are supported in the IPBS, it is also insensitive to change of the polarity.

5.3.2 Power the BS3x0 over Express Powering Pair (EPP) and data pairs

When a base station is powered remotely via the IPBL, the maximum length between the base station and the IPBL depends on the supply voltage, the number of twisted pairs used and the wire size. The length of the cable should never exceed "data-limited" length of the cable, see [Appendix B: RFP Power Consumption](#) on page 126.

5.3.3 Power the Base Station with a Local Power Supply

Powering the base station with a local power supply can be done using the second data/power inlet on the base station. The base station can be powered individually by an AC-adaptor. The AC-adaptor is provided with an 8-pin RJ45 plug that can be plugged into the *Power Supply* jack. For specification see [2.4 AC-adapter](#) on page 9.

Note: Only approved power supply according to valid editions of EN/IEC/CSA/UL/AU/NZS 60950 is to be used when the base station is powered by a local power supply.

6 Installation of the IPBL

This section describes how to install the IPBL.

6.1 Install the IPBL

IMPORTANT: To keep the same functionality of the system, do not mix different RFPs, Core (KRCNB 201) and Worf (KRCNB 30x and BS3x0), on the same IPBL. The reason this will not work is prolonged preamble and multicast are supported by Worf RFPs but not by Core RFPs. When the handset receive capacity information from the RFPs, including prolonged preamble and multicast, it assumes that all RFPs are of the same type as the first RFP it receives data from.

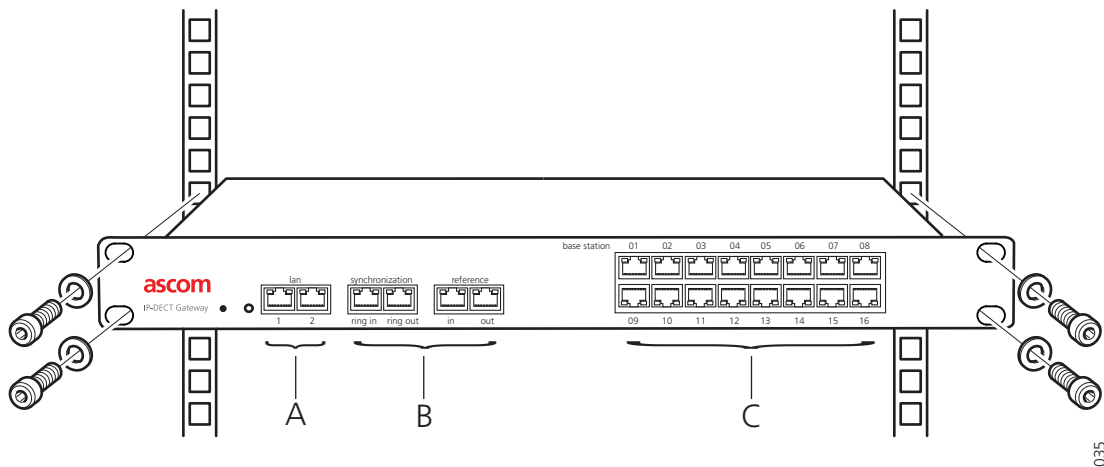


Figure 12. Install the IPBL

The main steps of the installation is described below:

- 1 Install the IPBL in a standard 19" rack.
- 2 Pin the cables, see [6.2 Pin the IPBL Cable](#) on page 26.
- 3 Attach the power cable, see [6.3 Power the IPBL](#) on page 29.
- 4 Connect the cables in the following order:
 - Ethernet cable (A) LAN1 port must be used in the IP-DECT system (LAN2 port is for administration only).
 - Synchronization cable (ring sync, reference sync) (B)
 - Base station cable (RFP cable) (C)

IMPORTANT: The connected RFPs must not be connected to protective earth.

- 5 Monitor the total current consumption from the GUI. See [8.15.9 Environment](#) on page 112. Make sure it not exceeds the following values:
 - Max current consumption is 4,0 A when supplied with 110/230 VAC.
 - Max current consumption is 5,2 A when supplied with 48 VDC.

Note: The IPBL current consumption is 0,3 A and is included in max current consumption.

For more information of power consumption of the RFPs, see [Appendix B: RFP Power Consumption](#) on page 126.

6.2 Pin the IPBL Cable

All data cables used for the IPBL is standard CAT5 unshielded cable. It is assumed that installation personnel know how to crimp these connectors to a cable.

6.2.1 Synchronization Cable

The maximum cable length between two IPBLs must not exceed 2000 meters.

- 1 Cut the cable to the correct length.
- 2 Connect the cable to a RJ45 modular jack. For information on pinning, see [Figure 13](#) and [Figure 14](#).
- 3 Label the cable.

Sync IN

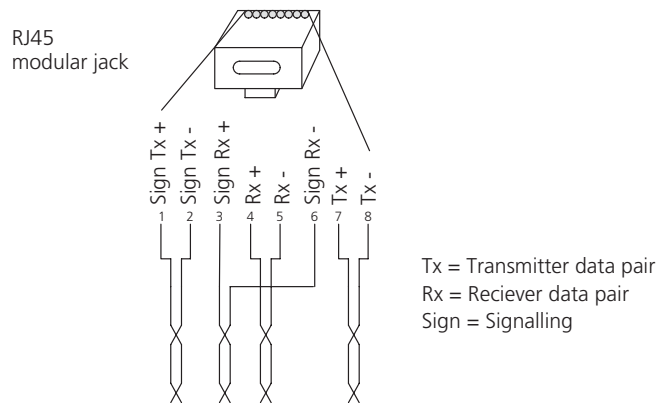


Figure 13. Connector pinning of the Sync IN cable

Sync OUT

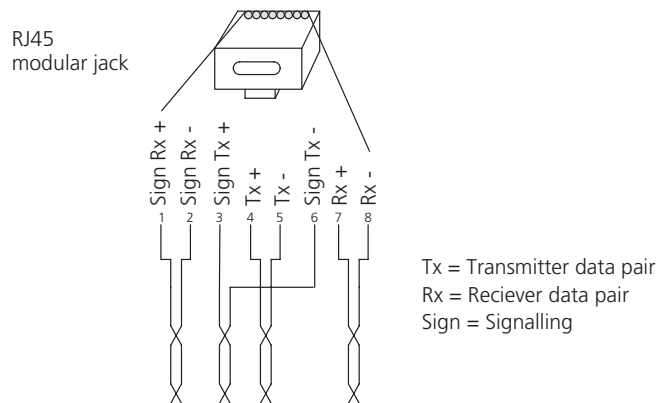


Figure 14. Connector pinning of the Sync OUT cable

6.2.2 RFP Cable

The RFP cable connects the IPBL with the RFPs. The maximum cable length between IPBL and a single RFP must not exceed 1500 meters.

Note: Ensure that during the installation, each RFP is given an extra length (5-10 metres) of cable because it is possible that it will have to be moved for one reason or another.

- 1 Cut the cable to the correct length.
- 2 Connect the cable to a RJ45 modular jack. For information on the pinning, see [Figure 15](#).

IMPORTANT: If local power supply is used for the RFP, the EPP cable pairs must **not** be connected.

- 3 Label the cable.

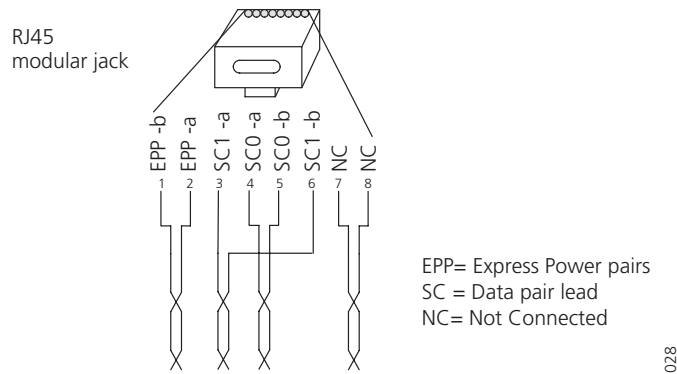


Figure 15. Connector pinning of the RFP cable.

6.2.3 LAN Cable

Note: The TX/RX crossover/straight cable feature does not work in the IPBL. It must be a straight cable between the IPBL and the switch port.

- 1 Cut the cable to the correct length.
- 2 Connect the cable to a RJ45 modular jack. For information on the pinning, see [Figure 16](#).
- 3 Label the cable.

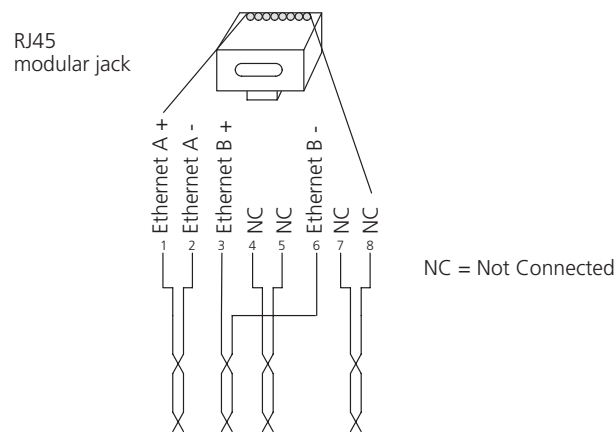


Figure 16. Connector pinning of the Ethernet cable.

6.3 Power the IPBL

The IPBL power supply connectors are located at the rear. The power supply feeds both the IPBL and the connected RFPs. There are two alternatives to power the IPBL:

- 110/230 VAC, 60/50 Hz
- 48 VDC

6.3.1 110/230 VAC

The 110/230VAC (100 – 240 VAC) power input is protected against overload by a 4A fuse. The IEC 60320 type C14 (male) connector consists of:

- live lead (1)
- neutral lead (2)
- protective earth (3)

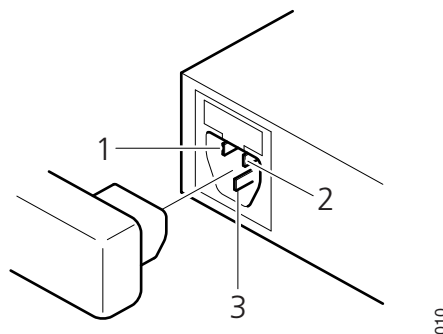


Figure 17. Pinning of the 110/230 VAC power supply

- 1 Connect the power cable on the IPBL.
- 2 Connect the power cable in a wall socket with protected earth.
The IPBL is switched on.

6.3.2 48 VDC

The 48 VDC (42 – 56 VDC) power input includes a fuse on the 48 VDC input to protect against overload. The IPBL also has a protection circuit to protect both the IPBL and the external power supply from damages caused by the user reversing the input terminals during installation.

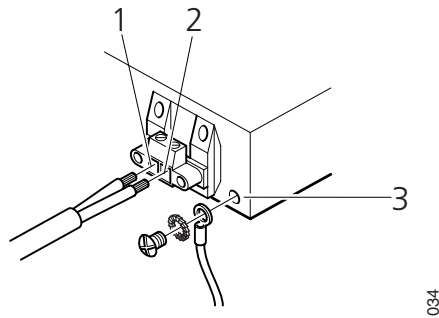


Figure 18. Pinning of the 48 VDC power supply

Note: A ground cable must be fastened to the protective earth (3) when 48 VDC is used as power source.

- 1 Fasten the ground cable to the protective earth (3) using the attached M4 screw (Philips) and washer.
- 2 Cut the power cable to the correct length.
The recommended wire size diameter is 1 mm (18 AWG).
- 3 Attach the positive lead to (1).
- 4 Attach the negative lead to (2).
- 5 Connect the power cable to 48 VDC power source.
The IPBL is switched on.

7 Configuration

This section describes how to configure the IPBS and IPBL using the web interface. The recommended order to configure the equipment in the IP-DECT system is as follows:

- 1 Configure the Mobility Master, see [7.4 Configure the Mobility Master](#) on page 38.
- 2 Configure the Standby Mobility Master, see [7.5 Configure the Standby Mobility Master](#) on page 39.
- 3 Configure the Pari Master, see [7.6 Configure the Pari Master](#) on page 39.
- 4 Configure the Standby Pari Master, see [7.7 Configure the Standby Pari Master](#) on page 40.
- 5 Configure the Master, see [7.8 Configure the Master](#) on page 41.
- 6 Configure the Standby Master, see [7.9 Configure the Standby Master](#) on page 41.
- 7 Configure the Radios, see [7.11 Configure the Radio](#) on page 42.

7.1 Requirements

The following is required in order to configure the IP-DECT system:

- PC
- 10/100base-T Ethernet connection

7.1.1 Web Browser Requirements

To use the interface properly, the web browser has to meet the following requirements:

- HTTP 1.1 protocol
- HTML 4.0 protocol
- XML/XSL Version 1.0

The GUI has been tested with Internet Explorer 7.x and Firefox 3.x, but can also be operated with other browsers in compliance with the requirements above.

7.2 Access the GUI

The GUI interface is accessed through a standard web browser. It is possible to use the name, ipbs-xx-xx-xx and ipbl-xx-xx-xx, where xx-xx-xx is the end of the MAC address.

Note: The IPBL name is always ipbl-xx-xx-xx regardless if LAN1 (MAC xx-xx-xx-xx-xx) or LAN2 (MAC yy-yy-yy-yy-yy) is used.

It is also accessed by entering `http://xxx.xxx.xxx.xxx` in the browser address field. In this address, `xxx.xxx.xxx.xxx` should be replaced with the IP address determined in [7.2.1 Determine the IP Address](#) on page 31.

Access the GUI and change the default password as described in [7.2.2 Change the Default Password](#) on page 33.

7.2.1 Determine the IP Address

The factory setting of the DHCP mode for the LAN1 port is "automatic", at first power up it will act as a DHCP client. If the network has a DHCP server, it will assign an IP address to the IPBS/IPBL.

Note: After the first startup the DHCP mode should be changed from "automatic" to either "client" or "off", see [8.2.1 Set DHCP Mode](#) on page 57.

This section describes how to determine the dynamically allocated IP address. The address is used to access the IPBS/IPBL using a web browser. Two methods are described:

- [In a Network without a DHCP Server](#) on page 32.
- [In a Network with a DHCP Server](#) on page 32.

In a Network without a DHCP Server

If the network does not have a DHCP server, and the DHCP mode is set to "automatic" (factory default), follow the steps below.

Note: If the IPBS/IPBL has been used before, it must be restored to factory default settings by performing a long hardware reset, see [8.17 Reset Using the Reset Button](#) on page 113.

- 1 Connect a ethernet cable between the IPBS/IPBL and the computer.
Note: For IPBS, a power adapter must be used.
Note: For IPBL, make sure to use the LAN1 port.
- 2 Perform a hardware reset by shortly pressing the reset button.
- 3 The IPBS/IPBL will be assigned the IP address 192.168.0.1 and the netmask 255.255.255.0.
- 4 Enter `http://192.168.0.1` in the browser address field to access the IPBS/IPBL GUI.
- 5 After the first startup the DHCP mode should be changed from "automatic" to either "client" or "off", see [8.2.1 Set DHCP Mode](#) on page 57.

In a Network with a DHCP Server

If the network has a DHCP server the IP address is determined following the steps below.

The IPBS/IPBL MAC address can be found on the label on the box and on the label on the backside. The hexadecimal numbers (xx-xx-xx-xx-xx-xx) represent the MAC address.

Note: Make sure to use the LAN1 port for the IPBL.

Note: In order to determine the IP address using this method it is necessary to have a PC with MS Windows. It must be connected to the same LAN (broadcast domain) as the IPBS/IPBL.


Determine the IP address following the steps below:

Note: If the IPBS/IPBL has been used before, it must be restored to factory default settings by performing a long hardware reset, see [8.17 Reset Using the Reset Button](#) on page 113. Then remove the power supply cable and connect it again.

- 1 Open a command window in windows by selecting Start > Run and enter "cmd" in the *Open:* text field.
- 2 Enter the following commands:
C:\ nbtstat -R
C:\ nbtstat -a ipbs-xx-xx-xx (ipbl-xx-xx-xx)

Where xx-xx-xx should be replaced with the last 6 hexadecimal digits of the MAC-address.

- 3
- The IP address is displayed in the command window, see the white frame in [Figure 19](#).

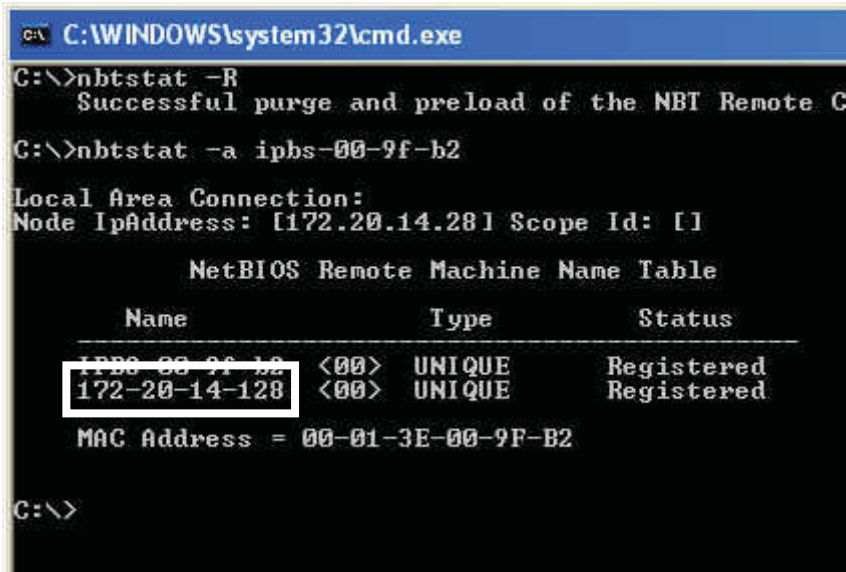

810

Figure 19. Determine the IP address

- 4
- Enter `http://xxx.xxx.xxx.xxx` (where `xxx.xxx.xxx.xxx` is the determined IP address) in the browser address field to access the GUI.
- 5
- After the first startup of the IPBS/IPBL the DHCP mode should be changed from "automatic" to either "client" or "off", see [8.2.1 Set DHCP Mode](#) on page 57.

7.2.2 Change the Default Password

- 1
- Enter the IP address determined in [7.2.1 Determine the IP Address](#) in the web browser address field.
- 2
- Select General > Admin.
- 3
- Enter user name and password in the dialogue box.
Default user name is: admin.
Default password is: changeme.
- 4
- Enter a user name in the *User Name* text field.
- 5
- Enter a password in the *Password* text field. Repeat the password in the second text field.
- 6
- Click "OK".

7.3 GUI Web Access

7.3.1 Login Page

When accessing IPBS/IPBL through a web browser the initial page is the login page. This page has two hyperlinks: *System Administration* and *User Administration*.

7.3.2 Access Levels

Three types of web users (or *Access Levels*) are authorized to access IPBS/IPBL:

- Auditors
- User Administrators
- System Administrators

The different types of access levels are described in the following table.

Access Level	Authorization	Login hyperlink on login page ^a	Described in section
Auditors	<ul style="list-style-type: none">• Read access to device parameter settings• Can generate Service Reports	System Administration	7.3.3 Auditors
User Administrators	<ul style="list-style-type: none">• Add, update and remove users	User Administration	7.3.4 User Administrators on page 34
System Administrators	<ul style="list-style-type: none">• Write access to all device parameter settings (for example IP addresses, software upgrades)• Assign and modify access to other System Administrator and User Administrator account settings• Add, update and remove users	System Administration	7.3.5 System Administrators on page 35

^a Different users should use the hyperlink related to their access level. The system does not allow login by a link not related to the user's access level.

7.3.3 Auditors

Auditors have read access to device parameter settings but are not authorized to update those settings. Auditors are also allowed to generate Service Reports (Administration > Diagnostics > Service Reports).

The login steps for an auditor follow the steps of a normal system administrator login. See [7.3.5 System Administrators](#) on page 35 for more information.

7.3.4 User Administrators

IPBS/IPBL is not supplied with preinstalled user administration accounts. Therefore, the first user administration account must be created by a system administrator (see [7.3.5 System Administrators](#) on page 35). If additional user administration accounts are needed they must also be created by a system administrator. Refer to [Managing User Administrators](#) on page 37 for more information.

User administrators can only administer users. They can view but not create or manage other user administrator accounts.

Login as User Administrator

To login as a user administrator:

- 1 Follow [7.2 Access the GUI](#) on page 31 and access the device using a web browser.
- 2 Click the link labelled *User Administration*.
A login window is opened.
- 3 Enter user name and password for a user administrator.
- 4 Click "OK" to login.
- 5 Click the show link.
- 6 The User Administration page is displayed.

See the figure below for a sample.

Long Name	Name
UserAdmin	UserAdmin
UserAdmin2	UserAdmin2

User Administrators: 2

Long Name	Name	No	Fty	Display	IPEI	AC	Registration
First Last Name	Name	1234		Display Name			Not Subscribed
User 2	User 2	1235		User 2			Not Subscribed

Users: 2, Registrations: 0

Figure 20. User Administration Page Sample

The right side of the page consists of two list sections:

- *User Administrators* in the upper right section. **Note:** this section is read-only since a user administrator cannot manage other user administrators. See [Managing User Administrators](#) on page 37.
- *Users* in the lower right section. Refer to [7.12 Add Users](#) on page 43.

7.3.5 System Administrators

IPBS/IPBL devices are factory delivered with a default system administrator account.

Login as System Administrator

To login as a system administrator:

- 1 Follow [7.2 Access the GUI](#) on page 31 and access the device using a web browser.
- 2 Click the link labelled *System Administration*.
A login window is opened.
- 3 Enter user name and password for a system administrator.
- 4 Click "OK" to login.

- 5 Click on the *Admin* tab.

The Administration page is displayed. See the figure below for a sample

Figure 21. System Administrator Admin Page

This page is used for the following tasks.

- Managing the default System Administrator account, see [Admin Section](#) on page 36.
- Managing additional System Administrator accounts, see [Additional Administrator Accounts](#) on page 36.

Admin Section

The *Admin* section (the upper part of the page) displays the default System Administrator account. This account can be modified (see the following section) but cannot be deleted.

Modify Admin Account

- 1 Login as system administrator (see [Login as System Administrator](#)).
- 1 Select Configuration > Admin.
- 2 Select/Enter the following settings:

Field name	Description
• Device Name	Enter a description for the device.
• User Name	Enter a login user name.
• Password	Enter a password.
• Confirm Password	Confirm the password.

Note: Only changing the password will not result in the settings being saved. For the settings to be saved, both user name and password must be updated at the same time!

- 3 Click "OK".

Additional Administrator Accounts

The *Additional Administrator Account* section (the lower part of the page) displays a list of existing additional system administrator accounts.

Create An Additional Account

To create an additional administrator account do the following:

- 1 Login as system administrator (see [Login as System Administrator](#) on page 35).
- 2 Select Configuration > Admin.

- 3 On the next free account row:
 - Enter User Name
 - Enter Password
 - Enter Password again
 - Select *Administrator* (for System Administrator) or *Auditor* in the drop-down list (See [7.3.2 Access Levels](#) on page 34 for a description of access levels.)
- 4 Click "OK".

The account row is created.

Modify An Additional Account

To modify an additional administrator account do the following:

- 1 Login as system administrator (see [Login as System Administrator](#) on page 35).
- 2 Select Configuration > Admin.
- 3 On an existing account row:
 - Enter a new user name
 - Enter a new password
 - Enter the password again
 - Select *Administrator* (for System Administrator) or *Auditor* in the drop-down list (See [7.3.2 Access Levels](#) on page 34 for a description of access levels.)
- 4 Click "OK".

The account row is updated.

Delete An Additional Account

To delete an additional administrator account do the following:

- 1 Login as system administrator (see [Login as System Administrator](#) on page 35).
- 2 Select Configuration > Admin.
- 3 On the row to be deleted, select the *Delete* check box.
- 4 Click "OK".

The account row is deleted.

Managing User Administrators

Create a User Administrator

IPBS/IPBL is not supplied with preinstalled user administration accounts. Therefore, the first user administration account must be created by a system administrator. If additional user administration accounts are needed they must also be created by a system administrator.

- 1 Login as System Administrator (see [Login as System Administrator](#) on page 35).
- 2 Select Administration > Users.
- 3 Click the *show* hyperlink.

The User Administration page (see [figure 20](#) on page 35 for a sample) is displayed.
- 4 Click the *new* hyperlink. A window is opened.
- 5 Select the *User Administrator* radio box. The window layout transforms.
- 6 Enter a long name.
- 7 Enter a name (**Note:** This field is used for login).

- 8 Enter a password.
- 9 Confirm the password.
- 10 Select "Administration of All Users" in the *Rights* drop-down list.
- 11 Click "OK".

View and Modify a User Administrator

- 1 Login as System Administrator (see [7.3.5 System Administrators](#) on page 35).
- 2 Select Administration > Users.
- 3 Click on *show*.

A two-part list page is displayed. At the top are the user administrator accounts and below the user administrators are the user accounts, both listed in alphabetical order.
- 4 In the *User Administrators* section, click on a hyperlink below the *Long Name* heading. A detail window is opened.
- 5 Select/Edit any of the following settings:
 - Long Name
 - Name (**Note:** This field is used for login)
 - Password
 - Confirm Password
 - Rights
- 6 Click "OK".

Delete a User Administrator

- 1 Login as System Administrator (see [7.3.5 System Administrators](#) on page 35).
- 2 Select Administration > Users.
- 3 Click on *show*.
- 4 In the *User Administrators* section, click on a hyperlink below the *Long Name* heading. A detail window details for is opened.
- 5 Click on "Delete".

The User Administrator is deleted and the windows is closed.

7.4 Configure the Mobility Master

In a system with two or more Masters (Multiple Master system), a Mobility Master must be configured. For more information on Multiple Master Systems, see the document *System Planning, Ascotel IP-DECT System, TD 92422GB*.

This section describes how to configure the Mobility Master. Each configuration step is briefly described in the step list below. For more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31.
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.
- 3 Set a static IP address and set DHCP to off, see [8.2.2 Set a Static IP Address](#) on page 57.
- 4 Set the mode to Mobility Master, see [8.5.17 Select Mobility Master Mode](#) on page 73.

- 5 Write a login name and enter a password, see [8.5.17 Select Mobility Master Mode](#) on page 73.
- 6 Connect to other Mobility Master(s), see [8.5.18 Connect Mobilty Master to other Mobility Master\(s\)](#) on page 73.
- 7 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 8 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.

7.5 Configure the Standby Mobility Master

It is recommended to have a Standby Mobility Master in a Multiple Master IP-DECT system. This section describes how to configure the Standby Mobility Master. Each configuration step is briefly described in the step list below. For more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31.
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.
- 3 Set a static IP address and set DHCP to off, see [8.2.2 Set a Static IP Address](#) on page 57.
- 4 Set the mode to Standby Mobility Master, see [8.5.17 Select Mobility Master Mode](#) on page 73.
- 5 Enter the primary Mobility Master IP address, see [8.5.17 Select Mobility Master Mode](#) on page 73.
- 6 Write a login name and enter a password, this must be the same as in the primary Mobility Master. See [8.5.17 Select Mobility Master Mode](#) on page 73.
- 7 Connect to other Mobility Master(s). This should be the same Mobility Master(s) as in the primary Mobility Master, see [8.5.18 Connect Mobilty Master to other Mobility Master\(s\)](#) on page 73.
- 8 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 9 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.

7.6 Configure the Pari Master

This section describes how to configure the Pari Master. Each configuration step is briefly described in the step list below. For more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31.
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.
- 3 Configure LDAP user name and password, select the *Write Access* check box, see [8.4.1 Configure LDAP Server](#) on page 60.
- 4 Set a static IP address and set DHCP to off, see [8.2.2 Set a Static IP Address](#) on page 57.
- 5 Set the mode to Master, see [8.5.12 Select Mode](#) on page 70.
- 6 Perform a reset to restart the IPBS/IPBL in Master mode, see [8.16 Reset](#) on page 113.
- 7 Select system name and password, see [8.5.1 Change System Name and Password](#) on page 66.

- 8 Change subscription method, see [8.5.2 Change Subscription Method](#) on page 67.
- 9 Configure authentication code, see [8.5.3 Configure Authentication Code](#) on page 67.
- 10 Select tones, see [8.5.4 Select Tones](#) on page 67.
- 11 Set default language, see [8.5.5 Set Default Language](#) on page 67.
- 12 Set frequency band, see [8.5.6 Set Frequency Band](#) on page 68.
- 13 Enable carriers, see [8.5.7 Enable Carriers](#) on page 68.
- 14 Enable local R-key handling, see [8.5.8 Local R-Key Handling](#) on page 68.
- 15 Enable No transfer on hangup, see [8.5.9 No Transfer on Hangup](#) on page 68.
- 16 Configure coder, see [8.5.10 Configure Coder](#) on page 69.
- 17 Select supplementary services, see [8.5.11 Configure Supplementary Services](#) on page 69.
- 18 Set Master Id, see [8.5.13 Set Master Id](#) on page 71.
- 19 Enable Pari function, see [8.5.14 Enable Pari Function](#) on page 71.
- 20 Enter gatekeeper IP address or ID, see [8.5.15 Configure Gatekeeper](#) on page 71.
- 21 Connect to a Mobility Master, see [8.5.19 Connect Master to a Mobility Master](#) on page 73.
- 22 Assign PARI, see [8.5.23 PARI](#) on page 74.
- 23 Enter SARI, see [8.5.24 SARI](#) on page 75.
- 24 Enter IMS IP address, see [8.7.1 Configure Messaging](#) on page 80.
- 25 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 26 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.

7.7 Configure the Standby Pari Master

It is recommended to have a Standby Pari Master in the IP-DECT system. This section describes how to configure a Standby Pari Master. Each configuration step is briefly described in the step list below, for more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.
- 3 Configure LDAP replicator, enter the IP address, user name and password to the LDAP server (Pari Master). Alternative LDAP server must not be entered. Select the *Enable* check box, see [8.4.3 Configure LDAP Replicator](#) on page 61.
- 4 Set a static IP address and set DHCP to off, see [8.2.2 Set a Static IP Address](#) on page 57.
- 5 Set the mode to Standby Master, see [8.5.12 Select Mode](#) on page 70.
- 6 Perform a reset to restart the IPBS/IPBL in Standby Master mode, see [8.16 Reset](#) on page 113.
- 7 Enter system name and password, this should be the same system name and password as in the Pari Master. see [8.5.1 Change System Name and Password](#) on page 66.
- 8 Select supplementary services, see [8.5.11 Configure Supplementary Services](#) on page 69.

- 9 Set Master Id, see [8.5.13 Set Master Id](#) on page 71.
- 10 Enable Pari function, see [8.5.14 Enable Pari Function](#) on page 71.
- 11 Enter gatekeeper address, see [8.5.15 Configure Gatekeeper](#) on page 71.
- 12 Connect to a Mobility Master, see [8.5.19 Connect Master to a Mobility Master](#) on page 73.
- 13 Enter IMS IP address, see [8.7.1 Configure Messaging](#) on page 80.
- 14 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 15 Reset in order to make the configuration changes take effect, [8.16 Reset](#) on page 113.

7.8 Configure the Master

This section describes how to configure the Master. Each configuration step is briefly described in the step list below. For more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31.
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.
- 3 Configure LDAP user name and password, select the *Write Access* check box, see [8.4.1 Configure LDAP Server](#) on page 60.
- 4 Set a static IP address and set DHCP to off, see [8.2.2 Set a Static IP Address](#) on page 57.
- 5 Set the mode to Master, see [8.5.12 Select Mode](#) on page 70.
- 6 Perform a reset to restart the IPBS/IPBL in Master mode, see [8.16 Reset](#) on page 113.
- 7 Select system name and password, see [8.5.1 Change System Name and Password](#) on page 66.
- 8 Set default language, see [8.5.5 Set Default Language](#) on page 67.
- 9 Select supplementary services, see [8.5.11 Configure Supplementary Services](#) on page 69.
- 10 Set Master id, see [8.5.13 Set Master Id](#) on page 71.
- 11 Enter gatekeeper IP address or ID, see [8.5.15 Configure Gatekeeper](#) on page 71.
- 12 Connect to a Mobility Master, see [8.5.19 Connect Master to a Mobility Master](#) on page 73.
- 13 Enter IMS IP address, see [8.7.1 Configure Messaging](#) on page 80.
- 14 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 15 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.

7.9 Configure the Standby Master

It is recommended to have a Standby Master in the IP-DECT system. This section describes how to configure a Standby Master. Each configuration step is briefly described in the step list below, for more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31.
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.

- 3 Configure LDAP replicator, enter the IP address, user name and password to the LDAP server. Alternative LDAP server must not be entered. Select the *Enable* check box, see [8.4.3 Configure LDAP Replicator](#) on page 61.
- 4 Set a static IP address and set DHCP to off, see [8.2.2 Set a Static IP Address](#) on page 57.
- 5 Set the mode to Standby Master, see [8.5.12 Select Mode](#) on page 70.
- 6 Perform a reset to restart the IPBS/IPBL in Standby Master mode, see [8.16 Reset](#) on page 113.
- 7 Enter system name and password, this should be the same system name and password as in the Master. See [8.5.1 Change System Name and Password](#) on page 66.
- 8 Select supplementary services, see [8.5.11 Configure Supplementary Services](#) on page 69.
- 9 Set Master Id, see [8.5.13 Set Master Id](#) on page 71.
- 10 Enter gatekeeper address, see [8.5.15 Configure Gatekeeper](#) on page 71.
- 11 Connect to a Mobility Master, see [8.5.19 Connect Master to a Mobility Master](#) on page 73.
- 12 Enter IMS IP address, see [8.7.1 Configure Messaging](#) on page 80.
- 13 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 14 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.

7.10 Plug and Play Configuration

Radios can be configured from the relevant Pari Master. When a new Radio is connected to the system, it automatically registers itself as an uninitialized registration to all Pari Masters in the system. It is possible to assign the Radio to one Pari Master. See [Add Radios](#) on page 83.

7.11 Configure the Radio

This section describes how to configure the Radio. Each configuration step is briefly described in the step list below, for more detailed information see the corresponding subsection in [8 Operation](#) on page 46.

Note: When one Radio is configured, the configuration can be saved and uploaded to the other Radios in the system.

- 1 Determine the address and access the GUI, see [7.2 Access the GUI](#) on page 31.
- 2 Change the default password, see [7.2.2 Change the Default Password](#) on page 33.
- 3 Set DHCP mode to "Client", see [8.2.3 Dynamic IP address via DHCP](#) on page 58.
- 4 Enable the Radio in the IPBS/IPBL, see
- 5 Enter Pari Master and Standby Pari Master IP addresses, see [8.5.21 Enter IP Address to the Pari Master and the Standby Pari Master](#) on page 74.
- 6 Configure air synchronization, see [8.5.25 Configure Air Synchronization](#) on page 75.
- 7 Enter the Time Server address, see [8.1.4 Configure the NTP Settings](#) on page 48.

- 8 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.
- 9 Save the configuration of the Radio, see [8.12 Backup](#) on page 103.

Configure the rest of the IPBS/IPBLs following the steps below:

Note: Uploading the same configuration to all Radios can only be done if the DHCP is set to client.

- 1 Determine the address.
- 2 Select Update > Config and browse to the previously saved configuration. Click "OK".
- 3 Reset in order to make the configuration changes take effect, see [8.16 Reset](#) on page 113.
- 4 Repeat step 1 to 3 for all Radios.

7.12 Add Users

This section describes how to add users to the IP-DECT system. There are two ways to register Portable Devices:

- Using the Portable Device to automatically associate the IPEI number to a user, see [7.12.1 Anonymous Registration](#) on page 43.
- Entering the IPEI number of the Portable Device manually, see [7.12.2 Individual Registration](#) on page 44.

7.12.1 Anonymous Registration

The IPEI, which is the unique identification number of the Portable Device, can be assigned automatically to a user. This is used to avoid having to enter the IPEI number manually.

Add users in the IP-DECT System

- 1 Under the Administration menu, select Users.
- 2 Click "New".
- 3 Enter the following information in the corresponding text fields, leave the *IPEI* and the *Auth. Code* text fields empty:
 - Long Name - The name of the user, need to be unique throughout the system. This is the name presented in a called party's display, unless this is configured in the IP-PBX.
 - Name - The user name.
 - Number - The phone number extension, need to be unique throughout the system.
 - Password - Optional, is used for registration towards the gatekeeper.
 - Display Name - Will be showed in the Portable Device display when the Portable Device is idle.
- 4 Click "OK".
- 5 Repeat step 2 to 4 for all users.

Assign Portable Devices to Users

- 1 Select DECT > System.

- 2 Enable anonymous registration by selecting "With System AC" in the *Subscriptions* drop-down list.
- 3 Click "OK".
- 4 Perform an "over air subscription" using the system Authentication Code. For information on how this is done, see the reference guide of the Portable Device. The Portable Devices' IPEI number appears in the Anonymous list. To view the list: Select Users > Anonymous.
- 5 Assign the Portable Device to any user, subscribed or unsubscribed, on any Master defined in the system by calling the desired Master id & extension & optional individual AC code and hang up.
Example where **0** is the Master id, **200** is the extension and **1234** is the AC code:
*0*200*1234#
Note: When using AC code, start with * and end with # character. Otherwise skip the *# characters. If the user is already assigned to a Portable Device, it will be moved to the anonymous list when logging in a new Portable Device.
- 6 Repeat step 4 to 6 for all Portable Devices.
- 7 Under the Configuration menu, select DECT > System.
- 8 Disable anonymous registration by selecting "Disable" in the *Subscription* drop-down list.
- 9 Click "OK".

7.12.2 Individual Registration

- 1 Select Users.
- 2 Click "New".
- 3 Enter the following information in the corresponding text fields:
 - Long Name - The name of the user, need to be unique throughout the system. This is the name presented in a called party's display, unless this is configured in the IP-PBX.
 - Name - The user name.
 - Number - The phone number extension, need to be unique throughout the system.
 - Password - Optional, is used for registration towards the gatekeeper.
 - Display Name - Will be showed in the Portable Device display when the Portable Device is idle.
 - IPEI - The unique identification number of the Portable Device.
 - Auth. Code - The individual authentication code for this user.
- 4 Perform an "over air subscription" using the individual authentication code. For information on how this is done, see the reference guide of the Portable Device.
- 5 Click "OK".

7.13 Logout/Login Users

This section describes how to logout and login users to the Ascom IP-DECT system. For example, when using a shared Portable Device for shift workers.

7.13.1 Logout Users

Logout the Portable Device for any subscribed user in the system by calling the supplementary services feature for logout (see [8.5.11 Configure Supplementary Services](#))

on page 69) & optional individual AC code and hang up.

Example where **#11*\$#** is the feature for logout and **1234** is the AC code: #11*1234#.

7.13.2 Login Users

To login a user, see [Assign Portable Devices to Users](#) on page 43.

8 Operation

This section describes the settings in the Configuration and Administration menu, each subsection represents a sub menu to the Configuration and Administration menu.

Some changes require a reset in order to take effect. It is possible to do several changes before resetting the IPBS/IPBL.

The GUI for the IPBS and IPBL are similar. Screen shots from the IPBS are used as default.

8.1 General

This section describes how to do the following configurations and settings.

- Change User Name and Password
- Name the equipment
- Configure automatic firmware update
- Configure the NTP settings
- Configure Logging
- Configure the HTTP settings

The screenshot shows the web interface of an Ascom IP-DECT Base Station. The title bar reads 'Ascom IP-DECT Base Station'. Below the title bar is a navigation menu with tabs: 'Info', 'Admin', 'Update', 'NTP', 'Logging', 'HTTP', and 'HTTP Client'. The 'Admin' tab is selected. On the left side, there is a sidebar menu with categories: 'Configuration' (containing General, LAN, IP, LDAP, DECT, VoIP) and 'Administration' (containing Users, Device Overview, Traffic, Backup, Update, Diagnostics, and Reset). The 'General' option under 'Configuration' is selected. The main content area is titled 'Admin' and contains the following fields: 'Device Name' (with the value 'DECT_A (Swyx) - Master'), 'User Name' (with the value 'admin'), and 'Password' (with two rows of masked characters '*****'). An 'OK' button is located at the bottom left of the form.

Figure 22. Assigning a name, username, and password.

8.1.1 Change User Name and Password

The user name and password are used to access the IPBS/IPBL through the web GUI.

- 1 Select General > Admin.
- 2 Write a user name in the *User Name* text field.
- 3 Enter a new password in the *Password* text field. Repeat the password in the second text field.
- 4 Click "OK".

8.1.2 Name the IPBS/IPBL

Each IPBS/IPBL can be assigned a name. It is recommended to assign a descriptive name for example IPBS/IPBL location.

- 1 Select General > Admin.
- 2 Enter a name in the *Device Name* text field.
- 3 Click "OK".

8.1.3 Configure Automatic Firmware Update

The IPBS/IPBL can be configured to automatically update its firmware. A script file must be uploaded to a suitable directory on an internal web server. For information on the script file syntax, see [Appendix A: How to Use the Update Server](#) on page 121.

- 1 Select General > Update
- 2 Enter the URL of the script file in the *URL* text field.
- 3 Enter the poll interval, in minutes, in the *Interval (min)* text field
- 4 Click "OK".

The *Current Update Serials* section shows the values of the variables set after the last execution of the associated command.

8.1.4 Configure the NTP Settings

Since the IPBS/IPBL does not have a battery-backed real-time clock, the internal time will be set to 0:00 hrs, 1.1.1970 in the case of a restart.

In order to get the correct time in the system, specify the IP address of a NTP time server. The IPBS/IPBL will synchronize its internal clock to the time server at startup and at the specified intervals. The clock is, for example, used by the handsets and log files.

The screenshot shows the 'Ascom IP-DECT Base Station' configuration window. On the left is a sidebar with a 'Configuration' menu containing 'General', 'LAN', 'IP', 'LDAP', 'DECT', 'VoIP', 'Administration', 'Users', 'Device Overview', 'Traffic', 'Backup', 'Update', 'Diagnostics', and 'Reset'. The 'NTP' tab is selected in the top navigation bar. The main area displays the following settings: 'Time Server' (172.20.10.135), 'Interval [min]' (5), 'Timezone' (Europe - Central European Time (UTC+1)), 'String' (CET-1CEST-2,M3.5.0/2,M10.5.0/3), and 'Last sync' (23.10.2007 13:31). An 'OK' button is at the bottom left of the settings area.

Figure 23. Configure NTP settings

- 1 Select General > NTP.
- 2 Enter the IP address to the NTP server.
- 3 Enter a time interval in the *Interval (min)* text field.
- 4 Select time zone in *Time zone* drop-down list. If the desired time zone is not in the list, select "Other" and edit the *String* text field following the instructions in the next step.
- 5 Enter the timezone string if automatically updates summer/winter is desired.

<String = StdOffset [Dst[Offset], Date/Time, Date/Time]>

- Std = Time zone (for example EST for Eastern Standard Time).
- Offset = time difference between the timezone and the UTC (Universal Time Coordinator).
- Dst = summertime zone (for example EDT for Eastern Daylight Time).
- Second Offset = time difference between the summer time and the UTC.
- Date/ Time, Date/ Time = beginning and end of summertime.
 - date format = Mm.n.d (d day of n week in the m month)
 - time format = hh:mm:ss in 24-hour format.

Note that a week always starts on a Sunday and the number for Sunday is 0.

Example:

North Carolina is located in the Eastern Time Zone. Eastern Standard Time (EST) is 5 hours behind UTC (StdOffset = EST-5), the Eastern Daylight Time (EDT) is 4 hours behind UTC (DstOffset = EDT-4). Summertime for the year 2006 begins at two a clock, on a Sunday, the first week in April (M4.1.0/2). The summertime ends at two a clock, on a Sunday, the fifth week in October (M10.5.0/2).

<String = EST-5EDT-4,M4.1.0/2,M10.5.0/2>

- 6 Click "OK".

8.1.5 Configure Logging

There are three ways to collect logs, see the table below.

TCP	The syslog entries are transmitted using a TCP connection.
SYSLOG	The entries are reported to a "syslogd" server in the network, which is responsible for further evaluation or storage of the entries.
HTTP	The syslog entries are transferred to a web server where they can be further processed. Each individual syslog entry is transmitted as form data to the web server in HTTP GET format.

Store the Syslog Entries using a TCP Connection

- 1 Select General > Logging
- 2 Select "TCP" in the *Type* drop-down list.
- 3 Enter the "IP address" of the logging server in the *Address* text field.
- 4 Enter the "Port" of the logging server in the *Port* text field.
- 5 Click "OK".

Store the Syslog Entries in a Syslogd

- 1 Select General > Logging.
- 2 Select "SYSLOG" in the *Type* drop-down list.
- 3 Enter the "IP address" of the syslogd in the *Address* text field.
- 4 Enter the desired syslogd message class in the *Class* text field.
- 5 Click "OK".

Store the Syslog Entries on a Web Server

- 1 Select General > Logging.
- 2 Select "HTTP" in the *Type* drop-down list.
- 3 Enter the "IP address" in the *Address* text field.
- 4 Enter the "Port" in the *Port* text field.
- 5 Enter the "relative URL of the form programme" on your web server in the *Path* text field.
- 6 Click "OK".

Note: The IPBS/IPBL will make an *HTTP GET* request to the web server on the registered URL followed by the URL-encoded log entry.

Example:

Enter the value "/cdr/ cdrwrite.asp" in the "URL-Path" field if a page is on the web server with the name "/cdr/cdrwrite.asp" with a form that expects the log message in the "msg"

parameter. In this example, the IPBS/IPBL will make a *GET /cdr/cdrwrite.asp?event=syslog&msg=logmsg* request to the server.

Forward Alarms and Events

It is possible to forward alarms and events to an external server destination.

- 1 Select General > Logging.
- 2 Enter the IP Address of the IPBS/IPBL where you want to have an overview of all faults in the *External HTTP Server Address* text field.
- 3 Enter the HTTP server port in the *External HTTP Server Port* text field. The default value is 80.

8.1.6 Configure the HTTP settings

Traditionally IPBS/IPBL has been administered over the network via the http protocol (default port 80).

In a secure system (see the IP Security chapter) IPBS/IPBL should be administered via the https protocol (default port 443). If for some reason port 443 is not to be used, you can use another port for the local https server and then access the IPBS/IPBL via this port.

The screenshot shows the 'Ascom IP-DECT Base Station' configuration window with the 'HTTP' tab selected. The interface includes a navigation bar with tabs: Info, Admin, Update, NTP, Logging, HTTP, HTTP Client, SNMP, and Certificates. The HTTP settings section contains the following fields and options:

- Force HTTPS:** A checkbox that is currently unchecked.
- Disable HTTP basic authentication:** A checkbox that is currently unchecked.
- Password protect all HTTP pages:** A checkbox that is currently unchecked.
- Port:** A text field containing the value '80'.
- HTTPS-Port:** A text field containing the value '443'.
- Allowed stations:** Two empty text fields separated by a slash (/).
- Active HTTP sessions:** A section with a table showing session details.

From	To	No
172.20.14.77	/HTTP0/mod_cmd.xml	2

At the bottom of the window are 'OK' and 'Cancel' buttons.

Figure 24. Configure the HTTP Settings

- 1 Select General > HTTP
 - Select the *Force HTTPS* check box to allow only HTTPS sessions and all HTTP requests are redirected as HTTPS requests.
 - Select the *Disable HTTP basic authentication* check box to require all administrative and programmatic clients to support HTTP digest authentication.
 - Select the *Password protect all HTTP pages* check box to password protect all HTTP pages.
 - Enter "Port number" in the Port text field. The IPBS/IPBL is by default administered over the network via the TCP port 80 (http). If port 80 is not to be used another port can be set up for access. Set this value to 0 to disable http traffic (recommended). Attempts to contact the device using the http protocol will result in an *Unable to connect* message.
 - Enter "HTTPS Port" in the HTTPS Port text field. To access IPBS/IPBL securely, use the TCP port 443 (https). Set this value to anything except zero (0) to enable

- https traffic. The default value is 443. The value zero (0) disables https traffic which is not recommended.
 - Enter "Network Base Adresss" / "Network Base Mask" in the *Allowed stations* text fields to only allow access only from matching network, for example: 172.16.0.0/255.255.0.0
 - In the *Active HTTP sessions* field all ongoing HTTP traffic is displayed.
- 2 Click "OK".

8.1.7 Configure the HTTP Client settings

A list of URL that require authentication can be specified.

- 1 Select General > HTTP Client.
- 2 Enter the "URL" in the *URL* text field.
- 3 Enter "User" and "Password" in the *User* and *Password* text fields.
- 4 Click "OK".

A new row will be shown and more URLs can be added.

8.1.8 SNMP

Faults can be reported in the IP-DECT system via the Simple Network Management Protocol (SNMP). The SNMP framework has three parts:

- An SNMP manager: the system used to control and monitor the activities of network hosts using SNMP.
- An SNMP agent: the software component within the managed device that maintains data for the device and reports data, as needed, to managing systems.
- A MIB: The Management Information Base (MIB) is a virtual information storage area for network management information.

The agent and MIB reside on a network device (for example, router, access server, or switch). To enable the SNMP agent on the IPBS/IPBL, the relationship between the manager and the agent must be defined.

The screenshot shows the 'Ascom IP-DECT Base Station' configuration window with the 'SNMP' tab selected. The interface includes the following fields and controls:

- Community:** A text field containing the value 'public'.
- Device Name:** An empty text field.
- Contact:** An empty text field.
- Location:** An empty text field.
- Authentication Trap:** A checkbox that is currently unchecked.
- Trap Destinations:** A section containing an empty text field.
- Allowed networks:** A section with two sub-fields: 'Address' and 'Mask', both of which are empty text fields.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom of the form.

Figure 25. Configure SNMP Settings

- 1 Select General > SNMP

- 2 Enter a name in the *Community* field if you are not using the standard community name (public). The community text string acts like a password to regulate access to the agent on the Base Station.
- 3 Enter a device name in the *Device Name* field. This field is optional and serves only informational purposes.
- 4 Enter the name and phone number of the contact person in the *Contact* field. This field is optional and serves only informational purposes.
- 5 Enter a location in the *Location* field. This field is optional and serves only informational purposes.
- 6 Select the *Authentication Trap* check box to enable the sending of authentication traps. Access via SNMP is only possible if the correct Community Name is entered. If enabled a trap will be generated in the event of access with an incorrect Community Name.
- 7 Enter the IP address of the desired trap destinations in the *Trap Destinations* field. SNMP traps will be sent to all destinations.
- 8 Enter the IP address and mask of the networks that are allowed to send SNMP requests. All networks are allowed if the field is empty.
- 9 Click "OK".

8.1.9 Certificates

The *Certificates* tab is part of IP Security in IP-DECT. For more information on IP Security, see chapter [4 IP Security](#) on page 14.

Select Configuration > General > Certificates.

As described in [Certificate Handling Options](#) on page 16, there are three possible certificate options:

- 1 Default device certificate, see [Default Device Certificate](#) on page 53.
- 2 Self-signed certificates, see [Self-signed Certificates](#) on page 54.
- 3 Certificates signed by a Certificate Authority (CA), see [Certificate Signing Request \(CSR\)](#) on page 55.

The following table describes the different functions.

Field name	Description
• Subject	Click the hyperlink (under the <i>Subject</i> header) to display certificate details in a window.
• PEM	Click the <i>PEM</i> hyperlink (under the <i>Download</i> header) to download the certificate in PEM format.
• DER	Click the <i>DER</i> hyperlink (under the <i>Download</i> header) to download the certificate in DER format.

- **Create New** The *Create New* hyperlink is used for two purposes:
 - [Self-signed Certificates](#) on page 54
 - [Certificate Signing Request \(CSR\)](#) on page 55
- **Upload** Use the Upload function to upload a certificate file to the device.
 - 1 Click the *Browse* button
 - 2 Select a certificate file
 - 3 Click the *Upload* button to upload the file to the device.

Note: The Upload function requires a previously issued CSR to exist.

Default Device Certificate

This section corresponds to option 1 in [Certificate Handling Options](#) on page 16.

If the default device certificate is missing for the device it will be generated, together with a key pair, when the IPBS is upgraded to version R3. The default certificate contains the MAC address of the device and will be valid for 10 years.

If the self-signed certificate is deleted and the device is restarted, a new certificate and key pair will be generated.

HTTPS is deactivated during the generation (creation) of the certificate.


The default certificate is a self-signed certificate. This means that certificates cannot be verified and thus the user/administrator will be prompted by the web browser to accept the certificate before it can be used. From this point on within the browser session (as long as the certificate is not changed) communication between the browser and the device is possible without further accept operations from the user/administrator.

If the device certificate is replaced or regenerated the user/administrator has to manually accept the new certificate.


Self-signed Certificates

This section corresponds to option 2 in [4.2.2 TLS Certificates](#) on page 16.

- 1 Select Configuration > General > Certificates.

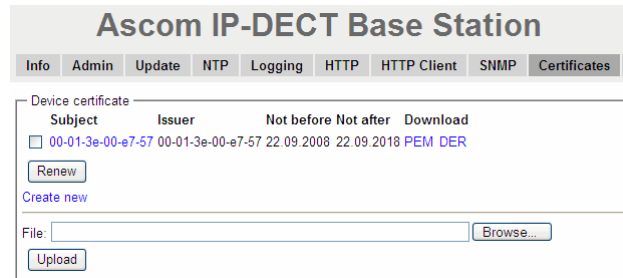

- 2 Click the *Create New* hyperlink in the *Device Certificate* section. A window will open.
- 3 In the window, select "Self-signed certificate" in the *Type* drop-down list.

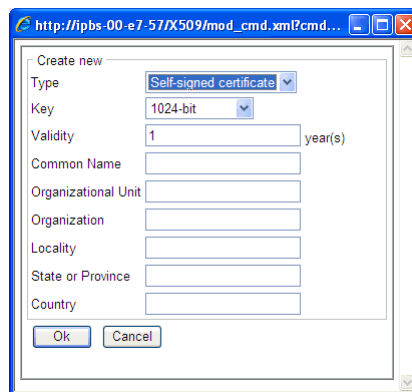

- 4 Select/Enter the following settings:


Field name	Description
• Validity	Enter the default validity in years. This is a mandatory field.
• Key	Select either the desired key strength (1024-bit, 2048-bit, 4096-bit) or select to reuse the old key pair (this is not recommended).
• Common Name	Enter the domain name or IP address for the device. This is the same value as entered in the web browser when accessing the device.

- 5 Click "OK".
- 6 A new key pair and a certificate will be created. This may take up to one hour depending on the key strength selected. During this time the device will be fully operational with the exception of https not working and the certificate tab pane not being visible.

Certificate Signing Request (CSR)

This section corresponds to option 3A & 3B in [4.2.2 TLS Certificates](#) on page 16. This will be the most common options for IP-DECT systems. For more information on CSRs see [Certificate Authorities](#) on page 14.

- 1 Select Configuration > General > Certificates.
- 2 Click the *Create New* hyperlink in the *Device Certificate* section. A window will open.

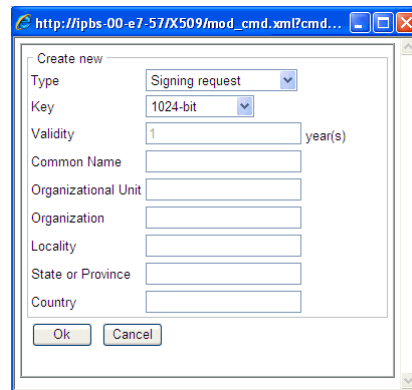

- 3 In the window, select "Signing Request" in the *Type* drop-down list.
- 4 Select/Enter the following settings:

Field name	Description
• Validity	This is an read-only information field indicating a default mandatory validity of 1 year. The time length of the validity is defined by the CA.
• Key	Select the desired key strength (1024-bit, 2048-bit, 4096-bit) or select to reuse the old key pair (this is not recommended).
• Common Name	Enter the domain name or IP address for the device. This is the same value as entered in the web browser when accessing the device.

- 5 Click "OK". The windows closes.

A key pair and a CSR file will be created. This may take up to one hour depending on the key strength selected. During this time the device will be fully operational with the exception of https not working and the certificate tab pane not being visible.

When the CSR file has been generated it is visible in the *Signing Request* section of the *Certificates* page.

- 6 Download the CSR file by clicking the PEM or DER link in the *Signing Request* section.
- 7 Send the CSR file to your CA.
- 8 If successful your CA will send back a digitally signed certificate file. This file should now be uploaded.
- 9 Select the certificate file.
- 10 Click "Upload".

Note: If the CSR file generated in step 5 is deleted before receiving the reply from the CA (in step 8) it will not be possible to upload the signed certificate file in step 10. The system will automatically delete the CSR file when step 10 has completed.

8.2 LAN

This section describes how to do the following configurations and settings.

- Set DHCP mode
- Set IP static address
- Set dynamic IP address
- Set link type
- Configure VLAN
- View LAN statistics

Note: The IPBL has two LAN ports. LAN1 port must be used in the IP-DECT system (LAN2 port is for administration only).

8.2.1 Set DHCP Mode

The IPBS/IPBL can have different DHCP modes, see the table below.

Disabled	Used if the IPBS/IPBL should have a static IP address.
Client	The IPBS/IPBL acts as a DHCP Client, if there is a DHCP server in the network it will be assigned an IP address
Automatic	In automatic DHCP mode the IPBS/IPBL will act as a DHCP client on power up. If the IPBS/IPBL is restarted by shortly pressing the reset button it will get the IP address 192.168.0.1 and the netmask 255.255.255.0 for the LAN1 port.

Change DHCP mode following the steps below.

- 1 Select LAN > DHCP.
- 2 Select DHCP mode in the *Mode* drop-down list.
- 3 Click "OK".
- 4 Reset in order to make the changes take effect if "Client" or "Automatic" is set, see [8.16 Reset](#) on page 113.

8.2.2 Set a Static IP Address

It is necessary for the Master and the Standby Master to have static IP addresses. The Radios can have dynamic IP addresses retrieved from the network DHCP server.

Ask the network administrator to reserve an IP address for the Master and Standby Master.

- 1 Select LAN > DHCP.
- 2 Select "Disabled" in the *Mode* drop-down list.
- 3 Click "OK".
- 4 Do NOT reset the device yet. Set a static IP address first.
- 5 Select LAN > IP.
- 6 Enter "IP Address", "Network Mask", "Default Gateway" and "DNS Server" addresses provided by the network administrator in the text fields.

You can also enter an alternative DNS Server in the *Alt. DNS Server* text field and select the *Check ARP* check box to detect and prevent ARP poisoning attacks.

- 7 Click "OK".
- 8 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.
- 9 Start the web-based configuration, using the static IP address.

8.2.3 Dynamic IP address via DHCP

The Radios can have dynamic IP address allocation if the network has an DHCP server.

- 1 Select LAN > DHCP.
- 2 Select "Client" in the *Mode* drop-down list.
- 3 Click "OK".
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

Note: If the DHCP lease time is shorter than the time-to-live of the name/IP address association in the Windows Internet Name Service (WINS) server, it may cause a mismatch, and a wrong device may be reached if its WINS name is used.

8.2.4 Link

The link setting should be set to "auto" under all normal circumstances.

8.2.5 Configure VLAN

Identity and priority settings for VLAN are done in the "LAN > VLAN" sub menu.

Note: It is necessary to have a VLAN with the same ID as configured in the IPBS/IPBL otherwise it will not be possible to access the IPBS/IPBL.

8.2.6 View LAN Statistics

To view statistics of LAN events: Select LAN > Statistics

To reset the ethernet statistics counters: Click the *clear-stat* button.

8.3 IP

8.3.1 Configure IP Settings

The following settings can be done in the IP settings sub menu:

ToS priority, RTP Data and VoIP Signalling:	Determines the priority from the ToS field in the IP header. This function can be used if the router can use ToS priority control. Hexadecimal, octal or decimal values can be used; 0x10, 020 and 16 are all equivalent. There are two fields for ToS priority, one for RTP Data and one for VoIP Signalling ^a . Other types of traffic (for example http and ldap) are not prioritized and use 0x00. Note: Remember that the same value should be set in the ToS field for all devices.
RTP ports:	If the ports fields are left blank, the ports 16384 to 32767 will be used.

a. VoIP Signalling includes roaming, handover, registrations towards the IP-PBX etc.

- 1 Select IP > Settings.
- 2 Enter the ToS priority value (recommended value is "0xb8") in the *ToS Priority - RTP Data* text field.
- 3 Enter the ToS priority value (recommended value is "0x68") in the *ToS Priority - VoIP Signalling* text field.
- 4 Select which ports to use for RTP traffic by entering the first port in the *First UDP-RTP Port* text field.
- 5 Enter the number of ports to use in the *Number of Ports* text field.
- 6 Click "OK".

8.3.2 Routing

View the IP routing by Select IP > Routing.

8.4 LDAP

The Lightweight Directory Access Protocol (LDAP) protocol is required for systems in which the server and a replicating client access a joint user database.

The joint user database contains information about the users registered in the system. It also contains the system configuration, that is the configurations made under the "DECT" menu.

This section describes how to do the following configurations and settings.

- Configure LDAP Server
- Check LDAP Server Status
- Configure LDAP Replicator
- Check LDAP Replicator Status


8.4.1 Configure LDAP Server

The IP-DECT system needs an LDAP server in some configurations. If the VoIP gateway is setup as an LDAP server the Master should be setup as an LDAP replicator, see [8.4.3 Configure LDAP Replicator](#) on page 61.

Setup the IPBS/IPBL as an LDAP server

Note: The selected user name and password must be the same in both the Master and the Standby Master.

- 1 Select LDAP > Server.
- 2 Add a user, for example ldap-user, in the *User* text field.
- 3 Enter a password in the *Password* text field.
- 4 Select the *Write Access* check box.
- 5 Click "OK".

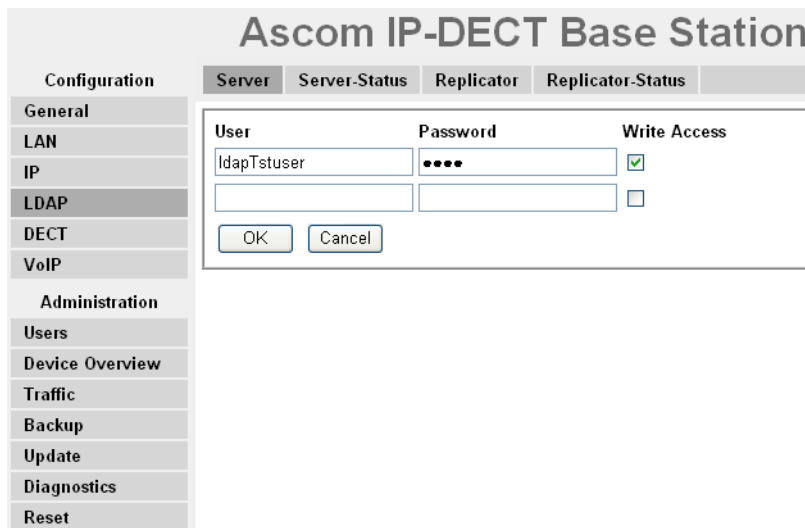

The screenshot shows the 'Ascom IP-DECT Base Station' configuration window. On the left is a sidebar with a 'Configuration' menu containing 'General', 'LAN', 'IP', 'LDAP' (selected), 'DECT', and 'VoIP'. Below this is an 'Administration' menu with 'Users', 'Device Overview', 'Traffic', 'Backup', 'Update', 'Diagnostics', and 'Reset'. The main area has tabs for 'Server', 'Server-Status', 'Replicator', and 'Replicator-Status'. The 'Server' tab is active, showing a form with three fields: 'User' (containing 'ldapTstuser'), 'Password' (masked with dots), and 'Write Access' (a checked checkbox). There are 'OK' and 'Cancel' buttons at the bottom of the form.

Figure 26. Setting LDAP User Name and Password

8.4.2 Check LDAP Server Status

- 1 Select LDAP > Server Status

The following information can be checked:

- connections - Total number of active connections to the LDAP server
- write connections - Number of write-enabled connections
- rx search - Number of received search requests
- rx modify - Number of received change requests
- rx add - Number of added objects
- rx del - Number of deleted objects
- rx abandon - Number of lost connections
- tx notify - Number of sent change notifications
- tx error - Number of sent error notifications
- tx error 49 - Number of sent error notifications due to invalid credentials
- tx error 50 - Number of sent error notifications due to insufficient access rights

8.4.3 Configure LDAP Replicator

LDAP Replicators are usually configured in the following cases:

- User data is replicated from the Master to the Standby Master. The replicator is configured on the Standby Master (Full Directory Replication)
- User data is replicated from the Active Directory (AD) to the Master. The replicator is configured on the Master
- User data is replicated from the PBX to the Master. The replicator is configured on the Master (Full Directory Replication)

Configure Full Directory Replication

- 1 Select LDAP > Replicator.
- 2 Select "Full Replication" in the *Type* drop-down list.
- 3 Select the *Enable* check box.
- 4 Enter the IP address to the LDAP server in the *Server* text field.
- 5 Enter the IP address to the alternative LDAP server in the *Alt. Server* text field.
Note: If this IPBS/IPBL is configured as a standby LDAP server, enter "0.0.0.0" in the *Alt. Server* text field.
- 6 Select a filter method from the *Filter Type* drop-down list
 - Dect Gateway Name - Enter the name of the DECT gateway to limit the replication to users of a certain group
 - LDAP Filter - Enter an LDAP filter to limit replication to certain LDAP objects
- 7 Enter the LDAP User name and Password in the *User* and *Password* text fields.
- 8 Click "OK".

Note: In the case of Master to Standby Master Full Directory Replication, do not register new Portable Devices when the LDAP Server is down even if there is a Standby LDAP Server in the system.

Configure Active Directory Replication

During Active Directory (AD) replication the configured LDAP replicator retrieves only relevant data.

AD replication is a one-way replication where data is only transferred from the AD to the IP-DECT but not from the IP-DECT to the AD. Data originating from the AD cannot be modified in the IP-DECT system, but it is possible to change or add those user attributes locally that are not replicated.

Note: If AD replication is enabled, existing local users are replaced with corresponding users in the AD, and some local attributes may be deleted. Contact Ascom Technical Support if you would like to enable AD replication with existing local users.

For AD Server configuration settings, see [Configure AD Server](#) on page 64.

- 1 Select LDAP > Replicator.
- 2 Select "Active Directory Replication" in the *Type* drop-down list.
- 3 Select the *Enable* check box.
- 4 Enter the IP address to the AD in the *Server* text field.

- 5 Enter a Distinguished Name (DN) to configure a search base for AD users.
The user information is usually replicated so It is recommended to write "CN=Users, DC=DomainName" where "DomainName" is the name of the domain on the AD server.
You can also click "Show Options..." to see some naming contexts on the configured server.
- 6 Enter an LDAP filter to retrieve only the relevant LDAP objects from the AD.
A default (objectclass=user) filter is offered, but it is recommended to assign all IP-DECT users to a group within the AD. For example, the following filter can be entered to retrieve only IP-DECT users.
"(&(objectClass=user)(memberOf=CN=grp_ipdect,CN=Users,DC=DomainName))"
where "grp_ipdect" is the group created for IP-DECT users, "Users" is the default folder for users and "DomainName" is the name of the domain on the AD server.
- 7 Enter the user name and the password of a user who has read access to the AD in the *User* and the *Password* text fields. It is recommended to choose a user with Enterprise Administrator rights.
- 8 Configure In Maps and Out Maps for Attribute mapping. Attribute mapping describes how the obtained information from the AD is handled within the IP-DECT system. For more information see [Attribute Mappings](#) on page 62.
- 9 Click "OK".
- 10 After proper configuration check the Replicator Status by selecting LDAP > Replicator Status. The state of the Active Directory Replication should be "Up" and the state of the remote directory should be "Completed".

Ascom IP-DECT Base Station

Configuration: Server, Server-Status, **Replicator**, Replicator-Status, Expert

General, LAN, IP, **LDAP**, DECT, VoIP, UNITE, Administration, Users, Device Overview, Traffic, Gateway, Backup, Update, Diagnostics, Reset

Replication Type
Type: Active Directory Replication

Active Directory Replication

Enable: ☒

Server: 172.20.9.110

DN: CN=Users, DC=DomainName [Show options...](#) CN=Users, DC=DomainName

LDAP Filter: (&(objectClass=user)(memberOf=CN=grp_ipdect,CN=Users,DC=DomainName))

User: username username

Password:

In Maps

Source Attribute	Assignment Pattern	Description
cn	%cn	
ipPhone	%tel	

Out Maps

Dest. Attribute	Destination Value
cn	%cn
e164	%tel

OK Cancel

Figure 27. Configure Active Directory Replication

Attribute Mappings

The following attributes are generally used to configure attribute mappings:

IP-DECT designator	IP-DECT attribute name	AD attribute name	Description
Long Name	cn	cn	Common name, mandatory and must be unique
Name	h323	userPrincipalName	User name
Number	e164	telephoneNumber, ipPhone, mobile	Business or mobile phone number, mandatory and must be unique
Display	dn	displayName, givenName, sn	Displayed name, first name or surname

In Maps

In Maps define which attributes of the incoming objects are replicated and how the attributes are used in the IP-DECT system. In Maps can be configured with the following text fields:

- Source Attribute - The name of the AD attribute to be replicated. Only those users are replicated who have the defined source attributes. See [AD attribute name](#) on page 63 for examples.
- Assignment Pattern - A regular expression that assigns AD attributes to local temporary variables. A local temporary variable can have any name starting with a % sign, for example %tel. Regular expressions are written in a formal language that is widely used in Unix environments. For more information, see regular expression manuals on the internet.
- Description - Short explanation of what is configured with regular expressions

If there are several in maps for one attribute, all maps are handled in the order of appearance. To change the order of appearance click the "Move Up" or "Move Down" icons on the left side of the In Maps window.

Out Maps

Out Maps define how the local temporary variables configured for In Maps are assigned to the internal IP-DECT attributes. Out Maps can be configured with the following text fields:

- Dest. Attribute - The name of the IP-DECT attribute. See [IP-DECT attribute name](#) on page 63 for examples.
- Destination Value - The name of the local temporary variable

Example

In Maps	
Source Attribute	Assignment Pattern
cn	%cn
ipPhone	%tel=/\0/:[^\+](.*)\$
ipPhone	%dsp=/Gbg\0/:\031.*

Out Maps	
Dest. Attribute	Destination Value
cn	%cn
e164	%tel
dn	%dsp

Figure 28. Attribute mapping example

In the example above regular expressions are used to remove non-numerical characters from the phone number (second line of In Maps). The third line of In Maps defines a local temporary variable (dsp) which stores all numbers starting with 031 with "Gbg" added before them. This is shown in the Display attribute as assigned in the Out Maps.

It is recommended to configure a default value for some attributes to avoid the retention of old information in the IP-DECT database. In the example below the display attribute is assigned an empty string if that attribute is not defined in the AD. The Source Attribute in the third line of In Maps is *cn* because it should be an attribute that is always present in the AD.

Example

In Maps	
Source Attribute	Assignment Pattern
ipPhone	%tel
cn	%cn
cn	%dn="/"
displayName	%dn

Out Maps	
Dest. Attribute	Destination Value
cn	%cn
e164	%tel
dn	%dn

Figure 29. Default value assignment

Configure AD Server

The IP-DECT system supports only simple binding authentication. However, the default registry setting for Microsoft Active Directory 2003 does not allow simple binds, so it may be necessary to change Windows Registry settings to use AD replication.

- 1 In Windows, select "Run..." in the Start menu.
- 2 Enter "regedit" and click "OK" to start the Windows Registry Editor.
- 3 In the Editor go to the
"HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\NTDS\Parameters\
LDAPServerIntegrity" key.
- 4 Click on the key with the right mouse button and click "Modify".
- 5 Change the key value of 2 to the value of 1.
- 6 Click "OK".

8.4.4 Check LDAP Replicator Status

- 1 Select LDAP > Replicator-Status.
The following information can be checked:
 - Server - The IP address and port of the LDAP server.
 - Active Directory Replication - Current state of replication. Four states are possible: *Stopped, Starting, Up, Down*
 - remote - State of replication in the source directory. Three states are possible: *Stopped, Active, Completed*
 - notify - Number of change notifications received from the server
 - paged - Number of objects received from AD server in response to paged search requests
 - no match - Number of objects received that are not matching the configured LDAP filter condition
 - discarded - Number of objects discarded because no suitable map is found
 - local - State of replication in the destination directory. Three states are possible: *Stopped, Active, Completed*
 - notify - Number of change notifications sent to the server
 - add - Number of locally added objects
 - del - Number of locally deleted objects
 - modify - Number of locally modified objects
 - pending - Number of local objects waiting to be sent to the server

8.4.5 Expert tool

The Expert function should only be used after consultation with Ascom Technical Support.

8.5 DECT

This section describes how to do the following configurations and settings.

- Change DECT user name and password
- Change Subscription Method
- Configure Authentication Code
- Select Tone system
- Set Default Language
- Set Frequency Band
- Enable/Disable Carriers
- Enable/Disable Local R-Key Handling
- Enable/Disable No Transfer on Hangup
- Configure Coder
- Configure Supplementary Services
- Select Master Mode
- Configure Gatekeeper
- Select Mobility Master mode
- Connect Mobilty Master to other Mobility Master(s)
- Enable/Disable Radio
- Enter IP address to the Pari Master and the Standby Pari Master
- Multiple Radio Configuration
- Assign PARI
- Enter SARI
- Configure Air Synchronization

Ascom IP-DECT Base Station

Configuration: **System** | Suppl. Serv. | Master | Mobility Master | Radio | Radio config | PARI | SARI | Air Sync

General

System Name: DECT_M1_MCa

Password:

Confirm Password:

Subscriptions: With System AC

Authentication Code: 0118

Tones: SWEDEN

Default Language: Swedish

Frequency: Europe

Enabled Carriers: 0 1 2 3 4 5 6 7 8 9

Local R-Key Handling: ☒

No Transfer on Hangup: ☐

Coder: G711A Frame (ms): 20 Exclusive ☐ SC ☐

OK Cancel

Figure 30. The DECT System configuration page

8.5.1 Change System Name and Password

The system name and password must be the same for all IPBS/IPBLs throughout the system. Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

Note: If Ascom VoIP Gateway is the LDAP server, the password in the IPBS/IPBL must be identical to the Ascom VoIP Gateway (PBX/Password).

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Write a system name in the *System Name* text field.
- 3 Enter a new password in the *Password* text field. Repeat the password.
- 4 Click "OK".

8.5.2 Change Subscription Method

The IP-DECT system can be set to use the following subscription methods:

- With User AC
- With System AC
- Disable

Select subscription method:

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Select subscription method in the *Subscriptions* drop-down list.
- 3 Click "OK".

8.5.3 Configure Authentication Code

If allow anonymous subscription method is selected it is needed for the IP-DECT system to have an authentication code configured, select a code consisting of 4 to 8 numbers (0-9).

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Enter an authentication code in the *Authentication Code* text field.
- 3 Click "OK".

8.5.4 Select Tones

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Choose tones in the *Tones* drop-down list.
- 3 Click "OK".

8.5.5 Set Default Language

If the handset does not send language information to the system, this setting determine which language that is displayed for some text messages (for example hung-up and disconnected).

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Choose language in the *Default Language* drop-down list.
- 3 Click "OK".

8.5.6 Set Frequency Band

The IPBS/IPBL can operate in the following frequency bands:

- 1880 - 1900 MHz, Europe, Africa, Middle East, Australia, New Zealand and Asia
- 1910 - 1930 MHz, South America
- 1920 - 1930 MHz, North America

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Select frequency area in the *Frequency* drop-down list.
- 3 Click "OK".
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.7 Enable Carriers

The IPBS/IPBL has 5 carriers for the North American frequency band and 10 carriers for the other frequency bands. Under all normal circumstances all carriers should be enabled.

To enable or disable carriers:

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Select/clear the *Enabled Carriers* check boxes.
- 3 Click "OK".

8.5.8 Local R-Key Handling

With this option enabled keypad information is handled locally. If this option is disabled keypad information is sent transparently to the IP-PBX. Local R-key handling is further described in [Appendix C](#).

- 1 Select DECT > System.

Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 To enable, select the *Local R-Key Handling* check box.
- 3 Click "OK".

8.5.9 No Transfer on Hangup

If enabled it will not be possible to do a transfer by hanging up the phone. R4 must be pressed (see [Appendix C](#)).

- 1 Select DECT > System.
Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.
- 2 To enable, select the *No Transfer on Hangup* check box.
- 3 Click "OK".

8.5.10 Configure Coder

Select the preferred coder, and enter the desired frame length. If exclusive is selected for the coder the IPBS/IPBL is forced to use that coder. With Silence Compression enabled no information is sent during pauses in the conversation, this is used to save bandwidth.

Note: When exclusive is enabled for a coder it might be impossible to make calls outside the IP-DECT system.

- 1 Select DECT > System.
Note: To access the System tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.
- 2 Choose the applicable coder in the *Coder* drop-down list.
Note: The G726-32 coder is not supported by SIP.
- 3 Enter the sample time in milliseconds in the *Frame* text field.
- 4 Choose Exclusive enabled or disabled by selecting/clearing the *Exclusive* check box.
- 5 Choose Silence Compression enabled or disabled by selecting/clearing the *SC* check box.
- 6 Click "OK".

8.5.11 Configure Supplementary Services

The supplementary services determine how to handle a call if for example busy or not answered by the user.

- 1 Select DECT > Suppl. Serv.
Note: To access the Suppl. Serv. tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.
- 2 Select the *Enable Supplementary Services* check box to activate the supplementary services below. The default *Activate* and *Deactivate* feature codes are preset.
Note: To disable a specific service, select the *Disable* check box in front.

Feature	Description
Call Forwarding Unconditional	Forwards incoming calls to a given number in all cases
Call Forwarding Busy	Forwards incoming calls to a given number if the Portable Device is busy
Call Forwarding No Reply	Forwards incoming calls to a given number if the call is not answered or there is no coverage
Do Not Disturb	Sets the Portable Device in busy mode
Call Waiting	A second incoming call during a call is indicated with a call waiting tone

Feature	Description
Call Completion Busy Subscriber	Notifies the caller when a busy number becomes available and reinitiates the call Only works on H.323
Logout User	Logs out the user and the Portable Device becomes anonymously subscribed.
Clear Local Settings	Clears all locally stored feature settings and all features are deactivated

- Enter the Message Center Number in the *Fix Message Center No.* field.
The *MWI enabled* check box is only relevant if the field above is left blank. In this case select the *MWI enabled* check box to send a notification to your own number instead of the Message Center Number.
Note: For some IP-PBXs no configuration is necessary for this service.
- Enter the number of the message center in the *Local Clear of MWI* field to clear the message waiting indication locally when dialling the number.
- Click "OK".
- Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

The screenshot shows the 'Ascom IP-DECT Base Station' configuration window with the 'Suppl. Serv.' tab selected. The 'Enable Supplementary Services' checkbox is checked. Below it, there are fields for 'Activate', 'Deactivate', and 'Disable' for various services. The 'MWI enabled' checkbox is also present.

	Activate	Deactivate	Disable
Call Forwarding Unconditional	*21*\$#	#21#	<input type="checkbox"/>
Call Forwarding Busy	*67*\$#	#67#	<input type="checkbox"/>
Call Forwarding No Reply	*61*\$#	#61#	<input type="checkbox"/>
Do Not Disturb	*42#	#42#	<input type="checkbox"/>
Call Waiting	*43#	#43#	<input type="checkbox"/>
Call Completion Busy Subscriber	5	#37#	<input type="checkbox"/>
Logout User	#11*\$#		<input type="checkbox"/>
Clear Local Setting	*00#		<input type="checkbox"/>
Fix Message Center No.			MWI enabled <input type="checkbox"/>
Local Clear of MWI	.		

OK Cancel

Figure 31. Supplementary services

8.5.12 Select Mode

- Select DECT > Master.
- Select in the *Mode* drop-down list:
 - "Active", if this IPBS/IPBL is the Master.
 - "Standby", if this IPBS/IPBL is the Standby Master.
 - "Deployment" is used only for coverage test. The speech from the handset is looped back to the handset.

- 3 If you have selected the "Standby" mode enter the primary Master IP address in its text field.
- 4 Click "OK".
- 5 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.13 Set Master Id

- 1 Select DECT > Master.
- 2 Enter a Master id in the *Master Id* field. The id must be unique for each Master in a multiple Master system. The Standby Master must have the same id as the Master.
- 3 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.14 Enable Pari Function

The Pari Master is responsible for assigning PARIs, being part of the same external handover domain, to the Radios associated. A Radio will always be given the same PARI, based on the PARI-mac-address-association.

- 1 Select DECT > Master.
- 2 If this is the Pari Master, select the *Enable Pari function* check box.
Note: Only one Master per handover and sync domain can have the Pari function enabled.
- 3 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.15 Configure Gatekeeper

The Master need to know the address to the system gatekeeper.

- 1 Select DECT > Master.
- 2 In the drop-down list, select "H.323" or "SIP" protocol.
If "H323" protocol is selected, continue with step 3 and 4. Otherwise, jump to step 5.
- 3 Enter the address to the gatekeeper in the *Gatekeeper IP address* text field.
- 4 Enter the address to the alternative gatekeeper in the *Alt-Gatekeeper IP address* text field.
Note: As an alternative to the *Gatekeeper IP Address*, the *Gatekeeper ID* can be used.
- 5 **Note:** Step 5 to 7 applies to SIP protocol.
Enter the IP address or host name and optionally port of proxy (e.g. proxy1.example.com:5060) to the SIP proxy (registrar) in the *Proxy* text field.
- 6 Enter the IP address or host name and optionally port of proxy (e.g. proxy2.example.com:5060) to the alternative SIP proxy (registrar) in the *Alt. Proxy* text field.
- 7 If used, enter the domain address in the *Domain* text field.
- 8 Enter the maximum internal number length in the *Max. internal number length* text field.
- 9 To enable "Enbloc Dialling", select the *Enbloc Dialling* check box.
With this option enabled the keystrokes on the handsets are buffered in the IPBS/IPBL for a short period of time before sent to the IP-PBX (use this when the IP-PBX

does not support overlap sending). If disabled the keystrokes are immediately sent to the IP-PBX.

- 10 To enable "DTMF through RTP Channel", select the *DTMF through RTP channel* check box.

If enabled, DTMF digits are sent as RTP payload directly to the other endpoint. If disabled, the DTMF is sent in the signalling channel.

- 11 If you in step 2 selected "SIP" protocol, enable or disable the following options in the *SIP Interoperability Settings* section:

Registration time-to-live

This is the Expires-header in the REGISTER message. The default is 120 seconds. To enable this option, enter a value specified in seconds in the "Registration time-to-live" field.

If the system has many users (more than 1000), it is recommended to set the time-to-live value to 600 seconds for IPBLs to avoid system overload.

Hold Signalling

Some IP-PBXs require special way of hold signalling. In the "Hold Signalling" list field, select one of the following:

inactive: No media stream is sent or received.

sendonly: Media stream is sent only and not received.

sendonly with 0.0.0.0: Special case of *sendonly* where also the media IP address is set to 0.0.0.0.

Hold before Transfer

If this option is enabled, the consultation call is put on hold before transfer. Some IP-PBXs require this option so that both called parties are put on hold before the transfer is carried out.

To enable this option, select the "Hold before Transfer" check box.

Accept Inbound Calls not Routed via Home Proxy

If this option is enabled it could be possible for inbound calls to bypass call restrictions configured in the IP-PBX. If it is disabled a 305 Use Proxy response will be sent.

To enable this option, select the "Accept inbound calls not routed via home proxy" check box.

Register with number

If this option is enabled, number will be used for registrations towards the IP-PBX instead of name. Name will be used for authentication.

To enable this option, select the "Register with number" check box.

- 12 Click "OK".
- 13 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.16 Registration for Anonymous Devices

Portable Devices registered anonymously can make emergency calls through an extension reserved for anonymous users.

Note: Call restrictions must be configured in the PBX to allow for emergency calls only.

This option also provides a solution for the case when the Master, running on an IPBS with local power or an IPBL, loses IP connectivity without the local host Radio losing its connection to the Master. The Portable Devices locked to this Radio become isolated from the system without any notification.

- 1 Select DECT > Master.

- 2 Enter the registration name and number to the PBX in the *Registration Name / Number* text fields.
- 3 Select the "Deactivate Master if no connection" check box to make the Master deactivate itself if the anonymous registration to the PBX fails. As a result the local host Radio will fail to register to the Master, and Portable Devices, depending on their type, can move to another Radio that is operable.

Note: It is not recommended to use this option for a Master without a Standby Master.

- 4 Click "OK".

Note: A simpler and reliable way to handle this case is to deactivate the local host Radio on the Master.

8.5.17 Select Mobility Master Mode

In a system with two or more Masters (Multiple Master system), a Mobility Master must be configured. For more information on Multiple Master Systems, see the document *System Planning, Ascom IP-DECT System, TD 92422GB*.

- 1 Select DECT > Mobilty Master.
- 2 Select in the *Mode* drop-down list:
 - "Active", if this IPBS/IPBL is the Mobility Master.
 - "Standby", if this IPBS/IPBL is the Standby Mobility Master.
- 3 If you have selected the "Standby" mode: Enter the primary Mobility Master IP address in its text field.
- 4 Write a login name in the *Name* text field.
- 5 Enter a password in the *Password* text field.
- 6 Click "OK".
- 7 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.18 Connect Mobilty Master to other Mobility Master(s)

- 1 Select DECT > Mobilty Master.
- 2 Write a name in the *Name* text field.
- 3 Enter a password in the *Password* text field.
- 4 Enter the address to the other Mobility Master in the *IP Address* text field.
- 5 Enter the address to the Standby Mobility Master for the other Mobility Master in the *Alt. IP Address* text field.
- 6 Click "OK".
- 7 Repeat the above steps to connect to additional Mobility Masters.
- 8 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.19 Connect Master to a Mobility Master

In a system with several Masters, all Masters must be connected to the Mobility Master.

- 1 Select DECT > Master.
- 2 Write the name for the Mobility Master in the *Name* text field.
- 3 Enter the password for the Mobility Master in the *Password* text field.

- 4 Enter the address to the Mobility Master in the *IP Address* text field.
- 5 Enter the address to the Standby Mobility Master in the *Alt. IP Address* text field.
- 6 Click "OK".
- 7 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.20 Enable the Radio

- 1 Select DECT > Radio.
- 2 Clear the *Disable* check box.

8.5.21 Enter IP Address to the Pari Master and the Standby Pari Master

All IPBS/IPBLs need to know the IP address of the Pari Master and the Standby Pari Master.

- 1 Select DECT > Radio.
- 2 Write the name for the Pari Master in the *Name* text field.
- 3 Enter the password for the Pari Master in the *Password* text field.
- 4 Enter the address to the Pari Master in the *Pari Master IP Address* text field. If this is the Pari Master, enter 127.0.0.1.
- 5 Enter the address to the Standby Pari Master in the *Standby Pari Master IP Address* text field. If this is the Standby Pari Master, enter 127.0.0.1.
- 6 Click "OK".
- 7 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.5.22 Multiple Radio Configuration

The PARI Master can configure the same Radio settings for all Radios in the system. All settings configured in the Radio Config page replace the local Radio settings.

- 1 Select DECT > Radio Config.
Note: To access the Radio Config. tab, the Pari function has to be enabled, see [8.5.14 Enable Pari Function](#) on page 71.
- 2 Configure alarm and event forwarding, see [Forward Alarms and Events](#) on page 50.
- 3 Configure automatic firmware update, see [8.1.3 Configure Automatic Firmware Update](#) on page 47.
- 4 Configure NTP settings, see [8.1.4 Configure the NTP Settings](#) on page 48.
- 5 Configure IP settings, see [8.3.1 Configure IP Settings](#) on page 59.
- 6 Click "OK".

8.5.23 PARI

The PARI is a part of the broadcast identity, which uniquely identifies an IPBS/IPBL. This PARI is automatically assigned to each IPBS/IPBL in the system. But if more than one Ascom IP-DECT system operates within the same coverage area, the systems need to have a unique system identity in the PARI assigned in order to differentiate the systems.

To see the occupied system IDs of other Ascom IP-DECT systems within the coverage area, perform an RFP scan, see [8.12 Backup](#) on page 103.

- 1 Select DECT > PARI.
Note: To access the PARI tab, the Pari function has to be enabled, see [8.5.14 Enable Pari Function](#) on page 71.
- 2 Select a number between 1 and 36. If this is not done the IPBS/IPBL will randomly select a number.
- 3 Click "OK".
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

Note: The RFPI, which the Pari is a part of, can be used for localization of a Portable Device making a personal alarm. To ensure that RFPIs are system unique, use different System ID's for each Pari Master.

8.5.24 SARI

The SARI is the broadcast identity, which uniquely identifies an IP-DECT system. The SARI is added in the Pari Master. It is possible to add more than one SARI (guest SARIs). This is necessary if you want to join two separate IP-DECT systems and allow Portable Devices to roam into each other's system. The advantage is that the Portable Devices in the two different IP-DECT systems need not be reregistered to a common SARI.

Note: Several guest SARIs have an impact on the system performance, so it is recommended to use the same SARI across all PARI Masters in the system. If this is not feasible, you can add up to 10 SARIs.

- 1 Select DECT > SARI.
Note: To access the SARI tab, the Pari function has to be enabled, see [8.5.14 Enable Pari Function](#) on page 71.
- 2 Enter the SARI number in the *SARI* text field.
- 3 Click "OK".
- 4 You can add optional guest SARI numbers in the empty field.
- 5 Click "OK". All RFPs are reinitialized to broadcast also the added guest SARI.

8.5.25 Configure Air Synchronization

This section only applies to the IPBS.

Mixed System

If IPBSs and IPBLs are mixed in the same coverage area, all IPBSs must be set as "Slave". It is not necessary to configure which RFP to synchronize with, this is handled automatically.

IPBS System

The IPBSs use the DECT interface to synchronize, one IPBS is assigned the role as "Air Sync Master". It is not necessary to configure which IPBS to synchronize with, this is handled automatically. For more information on air synchronization, see *System Description, Ascom IP-DECT System, TD 92375GB*.

Normally only one Air Sync Master is allowed in one site. If however the site contains for example two buildings and no IPBS in one building is possible to synchronize to any IPBS in the other building, in this situation an Air Sync Master may be used in each building. But if there is air sync coverage between the buildings only one Master is allowed in one of the

buildings. If two Masters are configured within the same coverage area two different sync systems will be created instead of one. This will make handover and roaming between the systems impossible. As a consequence the air sync slaves will lose synchronization frequently.

Configure Air Sync mode:

- 1 Select DECT > Air Sync.
- 2 Select in the *Sync mode* drop-down list:
 - Master, if this IPBS is the Air Sync Master.
 - Backup Master, if this IPBS is the Air Sync Backup Master.
 - Slave, if this IPBS is an Air Sync Slave.
- 3 Click "OK".

Enable LED Indication of Air Sync

LED indication of air sync quality is enabled by selecting the LED Indication check box. This indication is used to indicate the air sync quality when planning or troubleshooting the system, see [Verify the Air Sync Coverage](#) on page 76.

Verify the Air Sync Coverage

- 1 Configure an IPBS to be air sync slave, to synchronize to the Base Station in the site survey tool (SST). Different B-ARIs can be assigned to the SST. Depending on the B-ARI different sync RFPIs have to be used in the IPBS.

B-ARI	Sync RFPI
10007504701	1004B2F120
10007504614	1004B2EE20
10007504613	1004B2ED20
10007504612	1004B2EC20
10007504310	1004B2BA20

- 2 Assign SARI, see [8.5.24 SARI](#) on page 75.
- 3 Assign a static IP address, see [8.2.2 Set a Static IP Address](#) on page 57.
- 4 Enable Master. The Radio is using the local Master.
- 5 Enable LED indication of the air sync, see [Enable LED Indication of Air Sync](#) on page 76.
- 6 Power the IPBS using a battery pack.
- 7 Move the SST to the planned location of the Sync Master. Move the IPBS to the planned IPBS locations with air sync hop 1 and check the upper LED (LED2, see also [LEDs](#) on page 4). The upper LED should be off or green, if it is fixed amber or flashing amber, the air synchronization is inadequate.
- 8 Move the SST to a location with air sync hop 1 and verify that the IPBS has good air sync coverage at IPBS locations with air sync hop 2.

Repeat step 8 for all air sync hops needed.

Select Synchronization Source for IPBS in Slave Mode

An automatic selection mode is available allowing the IPBS to automatically select another IPBS as a host base. The IPBS automatically creates and updates a list of IPBSs, within the coverage area.

A general criterion in the automatic selection mode is that an evaluation must be done on the bearer. The numbers of incorrect A-fields are accumulated during 100 frames. This value is called the Frame Error Rate (FER). If the FER value is above 90 the bearer can not be used to start retrieve sync information from. However due to the nature of radio environment the FER value may later increase above 90.

FER value	Description
< 90	In this case the active sync bearer is only replaced if: Alternative sync bearer with lower HOP value is found. Even if an alternative bearer with better FER and RSSI is found this is only selected if the HOP value is lower.
> 90	In this case the active sync bearer is only replaced if: Another bearer with lower HOP value is found. OR Another bearer with same HOP value is found and with BER < 90.
= 100	Assume the slave has locked to a RFP with hop value n. When the RFP have had FER = 100 on the active sync bearer for 80 seconds it is allowed to sync to a RFP with hop value n+1. After another 40 seconds it is allowed to sync to a RFP with hop value n+2, etc. After 9 minutes with FER = 100 the "Sync lost counter" is increased and a restart of the air sync procedure is done. ("Sync lost counter" may increase for a number of other reasons also)

Startup of Master IPBS

When a Master starts up it searches for other IPBSs within the same system during 30 seconds. If any IPBS is found the values for slot, frame, multiframe and PSCN is received and applied to the Master. After receiving all these values or after the timeout of 30 seconds the Master enters the Master state.

In Master state the values are updated locally during all further operation of the Master IPBS and no synchronization to other IPBSs in the same system is done.

With this method it will be possible to restart only the Master in the system. The remaining slaves will be able to maintain synchronization for a few minutes during restart of the Master. The Master will adjust itself to the other IPBSs at startup. The slaves will notice the Master is back and the sync will be received from the Master.

If no IPBS within the same system is detected during the first 30 seconds at startup initial values will be selected and the IPBS will enter Master state with these values.

Sync Backup Master

Only one Sync Master IPBS needs to be configured for a system. But if this single IPBS fails the entire system will fail. It is therefore possible to configure a Sync Backup Master IPBS in the system.

If a Backup Master IPBS is configured this IPBS must be positioned next to the ordinary Sync Master. A good value for RSSI is between -30 and -50 dBm.

A Sync Backup Master IPBS will start to search for an active Sync Master within the coverage for 1 minute. If a Sync Master is found during this first minute it will start up in

slave mode. In slave mode it will continuously search for the Master IPBS and if the Master is not found it will enter the Master mode. If no Master is found during the first minute of search it will immediately start up in Master mode.

Configure Synchronization to Another DECT System

An IPBS that is configured as a Sync Master can be configured to synchronize to another DECT system. If the site contains multiple DECT systems disturbance between the systems can be avoided if the systems are synchronized. Synchronization between the systems is done by configure an alien RFPI in the Sync Master.

The synchronization using alien RFPI is done on a "best effort" basis. If the alien system is powered down during operation of the IP-DECT system the IP-DECT system will still continue to operate. Also if the alien system is not found during startup of the Sync Master it will start to operate anyway. When configure an alien RFPI at least all carriers that are enabled in the alien RFPI must be enabled in the IP-DECT system.

When configure an alien RFPI and an alternative alien RFPI this must be different RFPIs on the same alien system, not different RFPIs on different alien DECT systems.

Note: If an alien RFPI is configured on an existing IP-DECT system it may take several hours before the system is synchronized to the alien system.

Configure an alien RFPI in the Air Sync Master:

- 1 In the Air Sync Master IPBS, select DECT > Air Sync.
- 2 Enter the alien RFPI in the *Alien RFPI* text field.
- 3 Enter an alternative alien RFPI in the *Alt. Alien RFPI* text field (optional).
- 4 Click "OK".

Configure Air Sync Backup Master

A backup Air Sync Master may be configured to take over the Air Sync Master role in case of failure or power down of the original Air Sync Master. The Backup Master must be placed close to the original Sync Master. The Backup Master will start to operate as a Sync Master in case the Sync Master has not been heard within 5 minutes. As soon as the Sync Master is heard again the Backup Master will start to operate as a Sync Slave.

Note: If the IP-DECT system is configured to synchronize to another DECT system this synchronization will be lost during the time the original Air Sync Master is not operating.

A Backup Master is normally not needed for short interruptions on the Sync Master (restart, software upload, etc.).

Normally no RFPI needs to be configured when using an Backup Master but if it is configured this must be the RFPI of the Sync Master.

Configure Air Sync Slave

Normally no configuration is needed for the air sync slaves. The air sync slaves can be configured to synchronize to a specific IPBS (a specific sync RFPI) in the IP-DECT system. This is normally not needed, but if a sync RFPI is configured care must be taken not to create sync rings.

Configure RFPI in the air sync slaves (optional):

- 1 In the air sync slave, select DECT > Air Sync.
- 2 Enter the sync RFPI in the *Sync RFPI* text field.
- 3 Enter an alternative sync RFPI in the *Alt. Sync RFPI* text field (optional).
- 4 Click "OK".

Example:

The following example is a description of a not allowed air sync ring:

- Base Station A configured to listen to B
- Base Station B configured to listen to C
- Base Station C configured to listen to A

8.6 VoIP

This section only applies if the SIP protocol is used in the system.

8.6.1 Add instance id to the user registration with the IP-PBX

This might simplify administration with some IP-PBXs.

- 1 Select VoIP > SIP.
- 2 To enable, select the "Add instance id to the user registration with the IP-PBX" check box.
- 3 Click "OK".

8.6.2 Session Timer (initial value)

If set, a keep-alive mechanism will be used to detect if a call is still valid as defined by rfc 4028. This is normally handled by the IP-PBX and then not necessary to be defined here.

- 1 Select VoIP > SIP.
- 2 To enable, enter a time (sec.) in the "(Session Timer initial value)" field.
- 3 Click "OK".

8.7 UNITE

8.7.1 Configure Messaging

If an IMS/WSM is to be used in the IP-DECT system, enter the IP address following the steps below.

- 1 Select UNITE > SMS.
Note: To access the SMS tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.
- 2 Enter the address to the IMS/WSM in the *IP Address* text field.
- 3 Click "OK".

If the communication between the Master and the IMS/WSM should be encrypted, do as follows:

- 1 Select the *Encryption* check box.
Note: When selecting or clearing the *Encryption* check box, it may take up to a couple of minutes until the IMS/WSM is fully operational.
Note: The IMS/WSM support for encryption is depending on the IMS/WSM software version.

8.7.2 Device Management

If a specific Device Manager (e.g. WSM) is to be used in the Ascom IP-DECT system, enter the IP address to the Device Manager following the steps below. To set the Master to search for an existing Device Manager on the network, go to [8.7.3 Service Discovery](#) on page 81.

- 1 Select UNITE > Device Management.

Note: To access the Device Management tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Enter the address to the Device Manager in the *Unite IP Address* text field.
The IP address for the Device Manager that the Master is currently connected to is shown under *Active Settings*.
- 3 Click "OK".

8.7.3 Service Discovery

If no Device Manager (e.g. WSM) has been selected to be used in the Ascom IP-DECT system, see [8.7.2 Device Management](#) on page 81, then the Master will automatically search for an existing Device Manager on the network. To set the Master to search in a specific domain on the network or to stop the search, follow the steps below.

- 1 Select UNITE > Service Discovery.

Note: To access the Service Discovery tab, the Master mode has to be activated, see [8.5.12 Select Mode](#) on page 70.

- 2 Do one of the following:
 - To stop the Master to search for a Device Manager, select the *Disable* check box.
 - To set the Master to search for a Device Manager in a specific domain on the network, enter the domain id in the *Domain ID* text field. The domain id must be the same as the one entered in the Device Manager.
- 3 Click "OK".

8.7.4 Send Status Log

It is possible to send alarm and event reports to the Unite system. For example directly to the ESS fault handler or the UNA (Unite Node Assistant) which in turn forwards the alarm event according to its distribution list.

- 1 Select UNITE > Status Log.
- 2 Enter the address to the server where the Status Log should be sent in the *Unite IP Address* text field.
- 3 Enter the Resource Identity/service in the *Unite Resource Identity* text field. If this field is left empty then the default will be UNA (Unite Node Assistant).

8.8 Users

This section describes the Users sub menu and how to do the following:

- Add a user.
- Search for user information.
- Show all registered users in the IP-DECT system.

8.8.1 Add a User

For information on how to add users to the IP-DECT system, see [7.12 Add Users](#) on page 43.

8.8.2 Search for User Information

It is possible to search for users registered in the system by name or extension number. Search for a user following the steps below:

- 1 Select Users > Users.
- 2 Enter the name or number to search for in the text field. It is possible to enter only the beginning of the name or number.
- 3 Click "show".

8.8.3 Show all Registered Users in the IP-DECT System

- 1 Select Users > Users.
- 2 Click "show".

8.8.4 Show Anonymous

The IPEI number is displayed on anonymous registered handsets.

- 1 Select Users > Anonymous.

8.9 Device Overview

8.9.1 Radios

Information about the devices in the IP-DECT system.

- 1
- Select Device Overview > Radios.

Mobility Masters									
Masters		Radios		Air Sync					
Static Registrations									
Name ↑	RFPI	IP Address	Sync	LDAP	Device Name	Version	Connected Time		
IPBS-00-fd-aa	101490300A				R - Halley				
IPBS-01-11-2a	9014901008	172.20.14.231	Slave	OK -	M1,R-Halley [3.0.25/3.1.4/-]	[3.1.4/3.0.25/IPBS1-A3/2B]	0d 11h 49m 42s	Move Delete	
IPBS-01-11-2b	9014902009	127.0.0.1	Master	OK -	MM1,PM0,R-Halley [3.0.25/3.1.4/-]	[3.1.4/3.0.25/IPBS1-A3/2B]	0d 11h 49m 41s		
Uninitialized Registrations									
Name ↑	IP Address	Device Name	Version			Connected Time			
IPBS-01-2b-e1	172.20.14.14	Ascom IP-DECT Base Station	[3.0.26/3.0.26/IPBS1-A3/3A]			0d 11h 49m 43s	Add		

Figure 32. Device Overview in the Master IPBS

Name	The unique identification name. The name syntax is ipbs-xx-xx-xx (or ipbl-xx-xx-xx), where xx-xx-xx should be replaced with the last 6 hexadecimal digits of the MAC address.
RFPI	Radio Fixed Part Identity.
IP Address	The IP address, click on the IP address to access the configuration GUI of that IPBS/IPBL.
Sync	The current synchronization status. Should be "Master OK" or "Slave OK" if synchronized.
LDAP	The LDAP status, can be "" (blank), "-", "up", "server" or "down". Should be "-", "up" or "server".
Device Name	The name entered in the general menu.
Version	The current software version.
Connected Time	The elapsed time since connected to the Master.

Add Radios

In the Uninitialized Registrations section, uninitialized Radios not registered to a PARI Master are shown.

- 1
- Select Device Overview > Radios
- 2
- Click "Add" to add the Radio to the Master.
- 3
- In the *Add Radio* window enter a name for the device. You can also add a Standby Master IP Address.
- 4
- Click "OK".
- 5
- The Radio restarts and it establishes a connection to the PARI Master only.

Delete Radios

In the Static Registrations section, initialized Radios no longer registered to the PARI Master are shown.

- 1 Select Device Overview > Radios
- 2 In the Static Registrations section, click "Delete" to delete the Radio.
The Radio's RFPI is now released and can be reused. All other RFPIs in use are not affected.

Move RFPIs

In the Static Registrations section, initialized Radios no longer registered to the PARI Master are shown. If it's vital that the new device keeps the RFPI for the broken device e.g. alarm localization purposes, move the RFPI for the broken device to the new device registered to the PARI Master.

- 1 Connect the replacing device.
- 2 Add the Radio to the PARI Master, see [Add Radios](#) on page 83.
- 3 Select Device Overview > Radios
- 4 In the Static Registrations section, click "Move" for the Radio that is broken.
- 5 In the *Move RFPI* window, select in the Destination section the new Radio that you want to move the broken Radio's RFPI to.
- 6 Click the *Move* button.
Existing RFPI on the new Radio is replaced by the broken Radio's RFPI. The new Radio's RFPI is now released and can be reused. All other RFPIs in use are not affected. The broken Radio will be deleted from the Static Registrations section.

8.9.2 Air Sync

This section only applies to the IPBS.

Air Sync status is displayed in the Device Overview > Air Sync menu. For explanation on the information shown for the active and the alternative sync bearers, see the table below.

RFPI	Radio Fixed Part Identity is the Id number of the sync bearer.
Carrier	The carrier used for air synchronization
Slot	The slot used for air synchronization
Hop	The number of hops from the Sync Master to the sync bearer
RSSI	Received Signal Strength Indication
FER	Frame Error Rate, a value between 0 and 100%. Should be below 90% to be able to keep the synchronization.

8.9.3 RFPs

This section only applies to the IPBL.

Information about the DECT devices connected to the IPBL. For explanation on the information, see the table below.

- 1 Select Device Overview > RFPs.

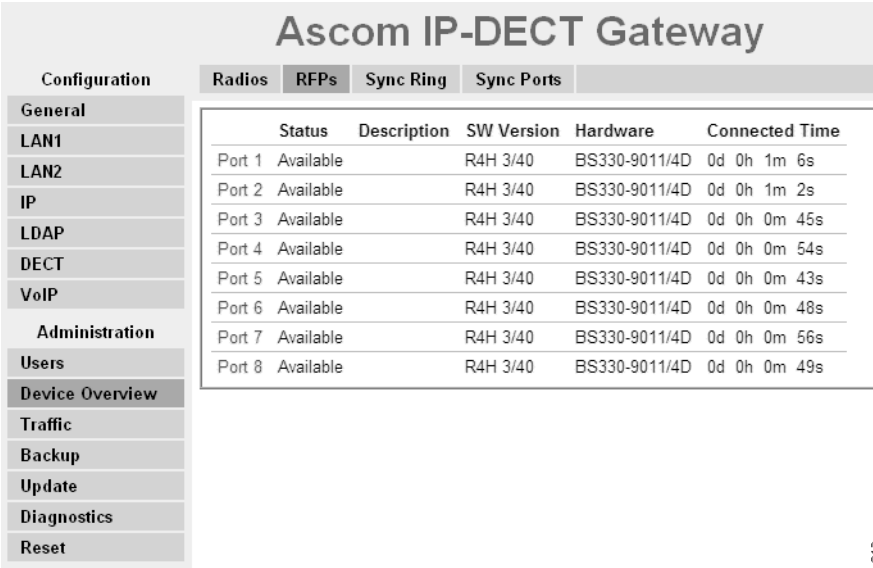


Figure 33. Connected RFPs to the IPBL

- 2 Click the applicable port to open the *RFP details* pop-up window.

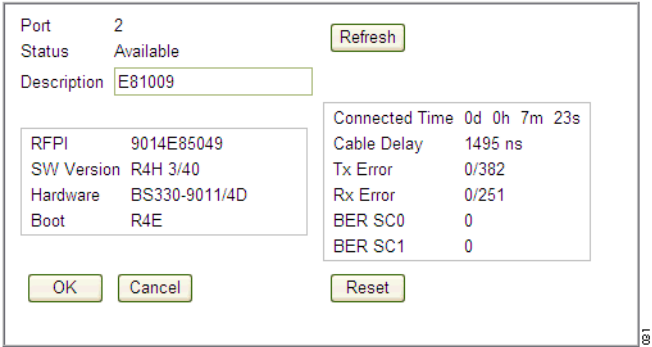


Figure 34. RFP Details

Port	The port used in the IPBL.
Status	Current status of the IPBS connected to the IPBL.
Description	A short description to help identify the IPBS.
RFPI	Identity number.
SW Version	The current software version.
Hardware	The hardware version.
Boot	RFP boot version.
Connected Time	The elapsed time since the RFP connected to the IPBL.
Cable Delay	The delay caused by the cable.
Tx Error	The number of transmitting errors.
Rx Error	The number of receiving errors.
BER SC0	Bit Error Rate SC0. Normal value: 0.
SER SC1	Bit Error Rate SC1. Normal value: 0.

Note: If BER differs from 0, inspect the RFP cable.

- 3 The following actions are available:
- Click "OK" to save your settings and close the pop-up window.
 - Click "Cancel" to close the pop-up window.
 - Click "Refresh" to update the information.
 - Click "Reset" to reset the RFP.

8.9.4 Sync Ring

This section only applies to the IPBL.

A wire map of the synchronization ring is available in the GUI. The identities (IPBL-xx-xx-xx) of the IPBLs and the position in the ring is displayed. If the ring is broken it is possible to locate where. Click the IP address to access another IPBL.

- 1 Select Device Overview > Sync Ring.

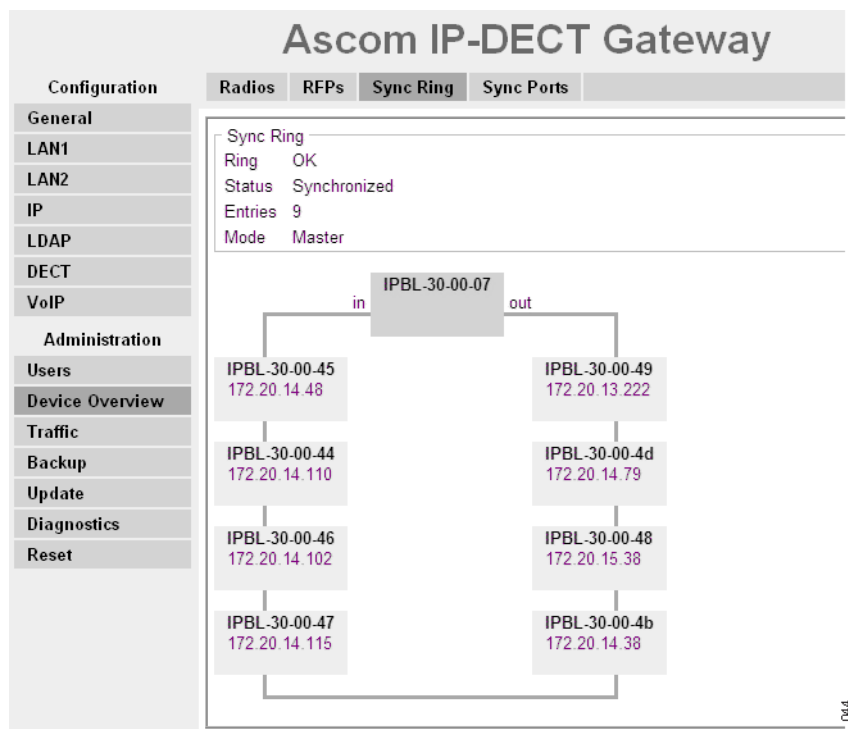


Figure 35. Example on a Sync Ring

8.9.5 Sync Ports

This section only applies to the IPBL.

Displays the current status of the synchronization ports.

- 1 Select Device Overview > Sync Ports.

Status	The current status of the port.
Sync Offset	The synchronization offset for the IPBL.
Cable Delay	The delay caused by the cable.
Sync Lost Counter	The number of times synchronization lost.
Communication	The present status of communication.
Connected to	The IP address of the IPBL connected.
Tx Error	The number of transmitting errors.
Rx Error	The number of receiving errors

8.10 Traffic

Traffic information is displayed in the Traffic sub menu. For the Master the traffic information for the IP-DECT system is displayed as well as traffic information for the Radio itself (if this Radio is enabled).

8.10.1 Display All Ongoing Calls in the System

All ongoing calls in the IP-DECT system can be displayed by selecting Traffic > Master Calls in the Master. See the table below for information about the different statistics fields.

Master	
Calls In	The number of incoming calls to the Master.
Calls In Delivered	The number of connected incoming calls in the Master.
Calls Out	The number of outgoing calls in the Master.
Handover	The number of handovers in the Master.
Handover Canceled	The number of failed handovers in the Master.
Abnormal Call Release	The number of abnormal call terminations.

8.10.2 Display Calls

All ongoing calls on an IPBS/IPBL can be displayed by selecting Traffic > Radio Calls. See the table below for information about the different statistics fields.

Radio	
Calls In	The number of incoming calls to the Radio.
Calls Out	The number of outgoing calls from the Radio.
Handover	The number of handovers in the Radio.
Handover Canceled	The number of failed handovers in the Radio. Note: There can be several reasons for uncompleted handovers occurring. This will in most cases not cause dropped or disconnected calls.

8.10.3 Handover

During call, all ongoing handovers in the IP-DECT system can be displayed by selecting Traffic > Handover in the Master.

8.11 Gateway

IPBS/IPBL has the option to act as a SIP registrar. In fact IP-DECT has several gateway interfaces that independantly from each other can handle device registrations.

The gateway functionality is mainly intended for FXO operation (for more information on FXO in IP-DECT see *Configuration Manual FXO in Ascom IP-DECT System TD92529GB*) but other uses are possible. Gateways can be used to register to another device such as a gatekeeper in a PBX.

SIP interfaces can be used to obtain, for example, a trunk line from a SIP Provider. This solution still requires handset VoIP registrations to be managed in IP-DECT - this is not performed by the SIP provider.

8.11.1 General

- 1 Select Gateway > General.

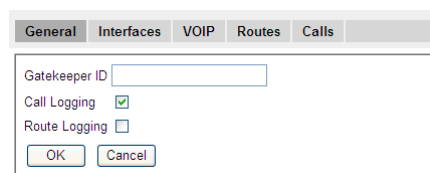


Figure 36. Gateway - General

- 2 Select/Enter following settings.

Field name	Description
• Gatekeeper ID	The Gatekeeper Identifier. This is used with VOIP interfaces (GWn) configured as "Gatekeeper/Registrar" as Gatekeeper Identifier (H.323) or Registrar Name (SIP), see 8.11.4 Gatekeeper Interfaces on page 96. If multiple gatekeepers are installed in a network this can be used to find the right gatekeeper using Gatekeeper Discovery. If a PBX is enabled on the same system a different Gatekeeper Identifier must be used for Gateway and PBX.
• Call Logging	Select this check box to enable the output of syslog information of the calls made via the gateway.
• Route Logging	Select this check box to enable the output of syslog information of the used voice routes of the gateway.

- 3 Click "OK".

8.11.2 Interfaces

Select Gateway > Interfaces.

General	Interfaces	SIP	GK	Routes	Calls
Interface CGPN-In CDPN-In CGPN-Out CDPN-Out State Alias Registration					
TEST +					

Figure 37. Gateway - Interfaces

This page shows the gateway's interfaces organized into columns. The individual columns are explained in the table below.

Column	Values	Description
Interface		The descriptive name of the interface. Click this name to open a page, on which all settings can be configured. For more information, see TEST Interface on page 91.
CGPN In, CDPN In, CGPN Out, CDPN Out		CGPN In, CDPN In, CGPN Out and CDPN Out mappings. Click the "+" sign next to the interface name to bring up mapping details. For more information see Call Number (CGPN/CDPN) Mappings on page 94.
State		The current state of the interface at protocol level. Possible states are: <i>Up</i> , <i>Down</i> .
Alias		The H.323 call name and the E.164 call number.
Registration		If a terminal has successfully registered with an SIP or TEST interface, then this is indicated in this column through specification of the IP address <Name of the interface:Call number:IP address>.

TEST Interface

Normally there is one non-configurable, internal TEST interface called *TEST*, usable only as the destination for a call. If a call is received on this interface, the on hold music stored in the non-volatile memory is played. Incoming calls must be in G.729A or G.723 format; other formats are not supported. Suffix dialling digits are ignored.

8.11.3 SIP Interfaces

- 1 Select Gateway > SIP.
- 2 Click on one of the SIP interfaces (*SIP1* - *SIP4*) under the *Interface* heading.
A new window opens.

Figure 38. SIP Interface Selection

- 3 Select/Enter following settings:

Field name	Description
• Name	Enter a name for the SIP interface
• Disable	Select the <i>Disable</i> check box to disable the Interface
• ID	Enter the registration ID followed by the SIP provider domain name preceded by an @ (for example 8111111e0@sipgate.de).
• Proxy	The IP address of the SIP provider to where the SIP messages (REGISTER, INVITE, etc.) are to be sent.
• STUN Server	Only necessary if the SIP server is outside the private network. Note: STUN Server has not been tested and is not officially supported by the Ascom IP-DECT System.

Authorization

- Username Username for authorization (only if different from the registration ID).
- Password / Retype The password for authorization must be specified here (Password) and confirmed (Retype).
- Registration Select "None" in the drop-down list, which is the default value.

Media Properties

- General Coder Preference Select the applicable coder in the drop-down list.
- Framesize Enter the sample time in milliseconds.
- Silence Compression Select this check box to enable silence compression.
- Exclusive Select this check box to accept only preset coders.
- Local Network Coder Select the preferred coder in the drop-down list for a local network address.
- Enable T.38 Select this check box to enable T.38 Fax-over-IP protocol.
- Enable SRTP Select this check box to enable encrypted media streams.
- Media Relay Select this check box to allow RTP-DTMF interoperability between H.323 and SIP devices
- No DTMF Detection Select this check box to send DTMF tones in-band through the media channel but not as separate signalling messages.

SIP Interop Tweaks

- Proposed Registration Interval [s] Set in seconds, default is 120 seconds.
A value too low increases the network load.
- Accept INVITE's from Anywhere Check this box **to accept invites from anywhere, not only from the proxy configured.**
- From Header when Sending INVITE Interoperability option for outgoing calls. This controls the way CGPN is transmitted to the SIP provider.
Possible values are:
 - *Fixed AOR* - The From header contains the fixed registration URI (AOR). The actual calling party number and name will be transmitted inside the P-Preferred-Identity header (RFC 3325).
 - *AOR with CGPN as display* - The From header contains the fixed registration URI (AOR) with the calling party number as display string in front of the AOR.
 - *CGPN is user part of URI* - The From header contains an URI with the calling party number as user part (left from @).

- Identity Header when Sending INVITE
Interoperability option for outgoing calls. This controls the way CGPN is transmitted to the SIP provider.
Possible values are:
 - *CGPN is user part of URI* - The Identity header contains an URI with the calling party number as user part (left from @).
 - *Fixed AOR* - The Identity header contains the fixed registration URI (AOR). The actual calling party number and name will be transmitted inside the P-Preferred-Identity header (RFC 3325).
- Reliability of Provisional Responses
This controls the way the option tag "100 rel" is offered.
Possible values are:
 - Supported - The tag is an optional extension.
 - Required - The tag is a mandatory extension.
 - Disabled - The tag is not offered.

4 Click "OK".

Call Number (CGPN/CDPN) Mappings

For every interface, it is possible to store mappings for *CGPN In*, *CDPN In*, *CGPN Out* and *CDPN Out* (explained in the table below), enabling call numbers and call number formats to be adjusted for incoming and outgoing calls.

Call Number Mappings Table

Map name	Description	Used to
CGPN In	Calling Party Number In	edit the calling number of incoming calls
CDPN In	Called Party Number In	edit the called number of incoming calls
CGPN Out	Calling Party Number Out	edit the calling number of outgoing calls
CDPN Out	Called Party Number Out	edit the called number of outgoing calls

- 1 Select Gateway > Interfaces.
- 2 For the interface that you want to set up call number modifications on, click the "+" sign next to the interface name. A new window opens and call number mapping can be made for the interface.

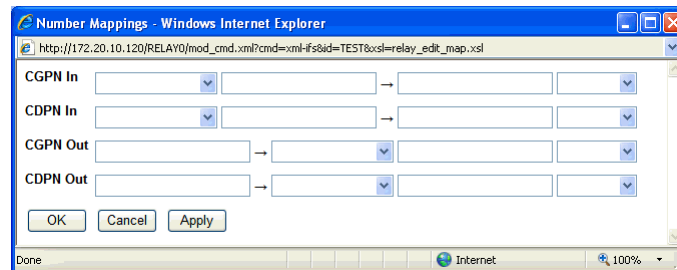


Figure 39. Call number mapping for SIP interfaces

- 3 Select one of the following mapping lines.

Field name	Description
• CGPN in	if you want to edit the calling number of incoming calls. Digits used for the headmatch on the received number. In addition to the normal dialling digits (0..9,*,#) the following characters have special meaning: R If 'R' is used as first digit of the number only numbers with 'presentation restricted' match. In this case the 'presentation restricted' property is cleared if 'R' is not used on 'Number Out'. ? Can be used at any place inside the number and means that any received digit matches.
• CGPN out	If you want to edit the calling number of outgoing calls.
• CDPN in	If you want to edit the called number of incoming calls.
• CDPN out	If you want to edit the called number of outgoing calls.

- 4 On each mapping line, a *Call Number Type* can be selected from the *Call Number Type* drop-down list (found on the righthand side of the lines in [Figure 39](#)).

Note: This step is optional.

Possible values are:

- Unknown: The mapping applies to unknown, external calls
- ISDN: The mapping applies to external calls
- Private: The mapping applies to internal calls

- 5 On each mapping line, a *Call Number Format* can be selected from the *Call Number Format* drop-down list (found on the lefthand side of the lines in [Figure 39](#)).

Note: This step is optional.

The table below describes of the possible values:

Call Number Formats Table

Name	Description	Typical use	Abbreviataion
Unknown	Unspecified	Called number in outgoing calls	u
Subscriber	Call number in local network	Number called in incoming calls.	s
National	Call number with area code.	Calling number from home country.	n
International	Call number with country code and area code.	Calling number from abroad.	i
Abbreviated:	Unusual.		a
Network-specific	Unusual.		x

- 6 Click "OK".

8.11.4 Gatekeeper Interfaces

Gatekeeper (GK) interfaces are channels to the world of Voice over Internet Protocol (VoIP). If your IP-DECT system needs to communicate with other devices via VoIP, access to these devices can be configured as a Gatekeeper interface.

Note: Normally the Master connects to a PBX via H.323/SIP endpoint registrations. In that case, no configuration in this section is needed.

These can be different types of equipment:

- Remote PBX
- Ascom VoIP Gateways
- VoIP terminal equipment
- VoIP terminal adapters to connect analogue terminals or a IPBS
- Third-party VoIP Gateway, as a gateway to telephone switches or, for example, into the SS7 network
- Further gatekeepers for call control
- VoIP PC programs

Each Gatekeeper interface defines access to a group of devices, which are all treated similarly. This allows, for example, all VoIP devices at one location to be configured via a single Gatekeeper interface. Since IP-DECT allows the definition of 12 different groups, it is able to communicate in all with several hundred VoIP devices.

- 1 Click Gateway > GK.

General	Interfaces	SIP	GK	Routes	Calls		
Interface	CGPN-In	CDPN-In	CGPN-Out	CDPN-Out	Alias	Registration	Product
GW1						+	
GW2						+	
GW3						+	
GW4						+	
GW5						+	
GW6						+	
GW7						+	
GW8						+	
GW9						+	
GW10						+	
GW11						+	
GW12						+	

Figure 40. GK interfaces

- 2 Click the interface name. A new window opens.

Figure 41. GK interface configuration

- 3 Select/Enter following settings.

Field name	Description
<ul style="list-style-type: none"> Name 	Enter a name for the route.
<ul style="list-style-type: none"> Disable 	Select the <i>Disable</i> check box to disable the route
<ul style="list-style-type: none"> Protocol 	<p>Select one of the values below in the <i>Protocol</i> drop-down list. Possible values are:</p> <ul style="list-style-type: none"> - <i>H.323</i> - Selecting "H.323" (default) results in the GUI displaying a H.323 registration section and a <i>H.323 Interop Tweaks</i> section, both described below. - <i>SIP</i> - Selecting "SIP" results in the GUI displaying a SIP registration section and a <i>SIP Interop Tweaks</i> section. See 8.11.3 SIP Interfaces on page 91 for a description of these sections.
<ul style="list-style-type: none"> Mode 	<p>Select one of the values below in the <i>Mode</i> drop-down list. Possible values are:</p> <ul style="list-style-type: none"> - <i>Gateway without Registration</i> - connects to the VoIP interface (gateway) to the configured gatekeeper without a registration. - <i>Register as Endpoint</i> - registers as VoIP terminal with the configured gatekeeper. - <i>Register as Gateway</i> - registers as VoIP gateway with the configured gatekeeper. - <i>Gatekeeper / Registrar</i> - accepts registrations from other VoIP devices. - <i>ENUM</i> - registers an ENUM connection with the relevant interface.

- Gatekeeper address (primary) IP address of the remote VoIP device
- Gatekeeper address (secondary) It is important to enter an alternative gatekeeper IP address, especially when using redundant systems.
- Mask Enter network mask
- Gatekeeper Identifier In general, you can operate without Gatekeeper ID if only one gatekeeper is operated in your network or if Gatekeeper discovery is not used.

Authorization

Use these settings if log on to another gatekeeper is needed.

- Password The Password corresponds to the H.235/SIP password required for logging on to the remote gatekeeper.
- Retype Confirm password

Alias list

- Name Define the H.323/SIP name required to identify yourself with the gatekeeper. This is the "Long name" on the PBX *Show* area.
- Number Usually the gateway only registers with a H.323/SIP name and not with an E.164 address (i.e. with a telephone number). Refer to the documentation for the gatekeeper you want to register.

Media properties

For information on these settings see [Media Properties](#) on page 92.

H.323 Interop Tweaks

- No Faststart Enable if the H245 Faststart procedure is to be disabled.
- No H.245 Tunneling A TCP connection of its own is established for the voice data connection negotiation. Only recommended if compatibility problems occur with third party products.
- Suppress HLC Suppresses the transmission of "high layer compatibility" information elements on the interface.
- Suppress FTY Suppresses the transmission of "facility information elements" on the interface.
- Suppress Subaddress Suppresses the transmission of "Subaddresses" on the interface.

4 Click "OK".

Call Number Mappings

Call number (CGPN/CDPN) mappings are described in [Call Number \(CGPN/CDPN\) Mappings](#) on page 94.

8.11.5 Routes – Configuration

Call routing determines which calls are able to be accepted by the gateway and where they are to be switched.

- 1 Select Gateway > Routes.
All configured routes are shown in a routing table.

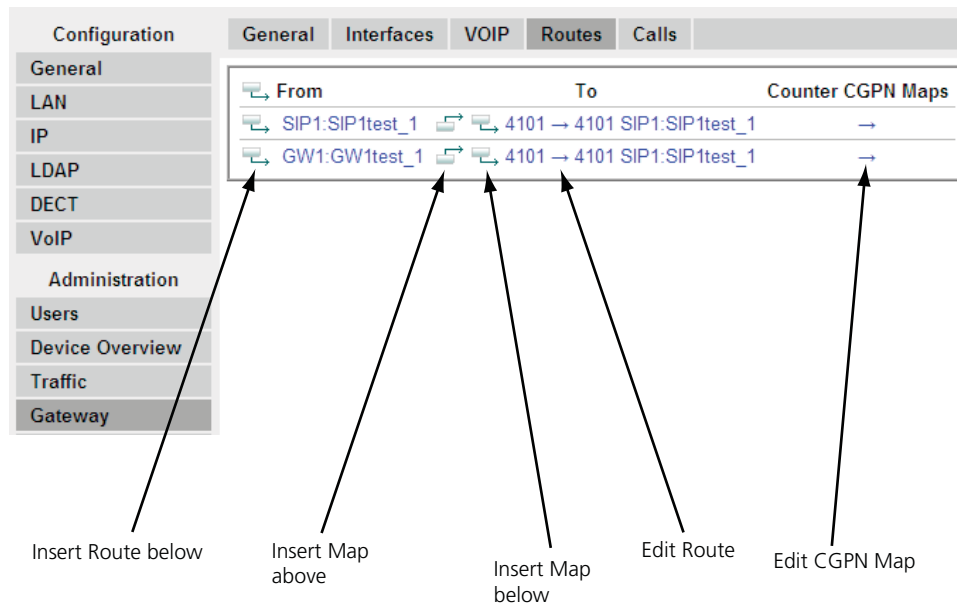


Figure 42. Clickable symbols in the Routes view

- 2
 - a. If no routes have been configured, click on the in front of From.
 - b. Add a new route by clicking on the leftmost in the route which you want to insert the new route after.

Note the order of the routes here. The new route is always inserted after the current entry. A new window opens.

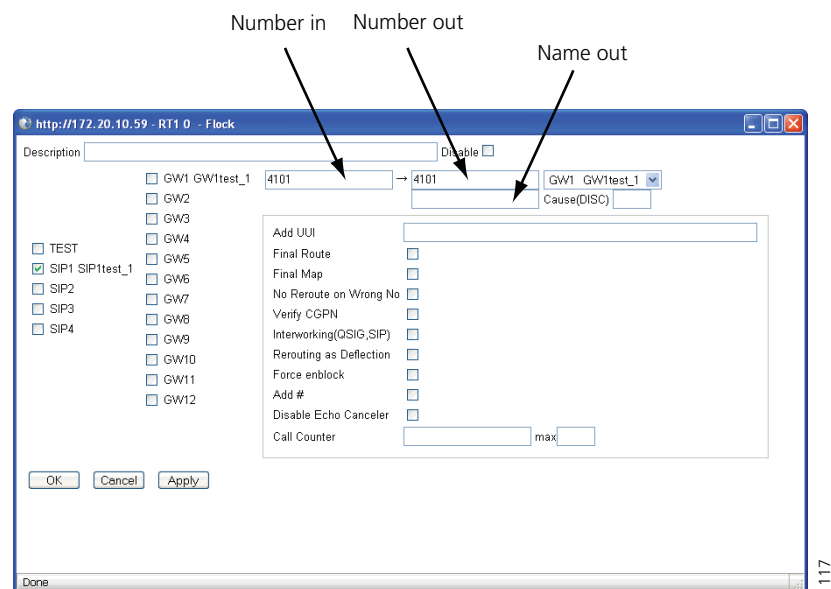


Figure 43. New route window

- 3 Select the check boxes of the VoIP interfaces in the left area, to mark them as valid sources for this route. Select interfaces which have been configured.
- 4 In the drop-down list in the right area, select the destination to which the calls are to be connected. Select interfaces which have been configured.

5 Select/Enter the following settings:

Field name	Description
<ul style="list-style-type: none">• Description	Enter a name for the route. This will help you maintain an overview later on.
<ul style="list-style-type: none">• Number in	<p>Enter the dial prefix the route shall be valid for. Number in can be used in two ways: Pre and Post dial. We can use the following special characters here:</p> <ul style="list-style-type: none">- the period .- the question mark ?- and the exclamation mark ! <p>42.3 ignores the 3 and will use any number in starting with 42, of length 4</p> <p>42?3 will allow the following numbers [4203,4213,4223,4233,4243,4253,4263,4273,4283,4293]</p>
<ul style="list-style-type: none">• Number out	<p>Enter the replacement for the dial prefix that you specified in the "Number in" field. Simply copy the dial prefix into this field if the call number is to be adopted unchanged.</p> <p>Add an "!" to the number if a route is to apply to a certain number and all of the digits subsequently dialled are to be ignored.</p>
<ul style="list-style-type: none">• Name out	
<ul style="list-style-type: none">• Add UUI	If manufacturer-specific data is to be transmitted in the signalling channel, for example, the URL for an announcement, this URL (e.g. "http://www. ...") can be entered here.
Leave all the remaining fields blank, in the normal case.	
<ul style="list-style-type: none">• Final Route	Enable if the routing shall stop here
<ul style="list-style-type: none">• Final Map	Enable if the mapping shall stop here.
<ul style="list-style-type: none">• Exclude from Auto-CGPN	Enable if you want certain routes to be excluded from this process.
<ul style="list-style-type: none">• Verify CGPN	
<ul style="list-style-type: none">• Interworking (QSIG)	Enable to support supplementary services (such as name display, call transfer, call diversion etc.)u between the H.323 network and a QSIG network.
<ul style="list-style-type: none">• Force enblock	
<ul style="list-style-type: none">• Add #	A # can be transmitted to mark the end of the call number. This is required for devices, such as from Cisco, which are unable to identify the end of a number properly.
<ul style="list-style-type: none">• Disable Echo Canceler	
<ul style="list-style-type: none">• Call Counter	A name for resource management can be entered.
<ul style="list-style-type: none">• Max	Limits the number of permitted calls for a route.

6 Click "OK"

If, by way of exception, the route for a Map entry is to be configured with a different destination than that specified in the route's destination field, you can select this from the Destination field of the "Map".

Add CGPN map

- 1 Select Gateway > Routes.
- 2 For the interface, that you want to add a CGPN map, click the "->" sign under the CGPN map heading.



Figure 44. Add CGPN map

A new window opens.

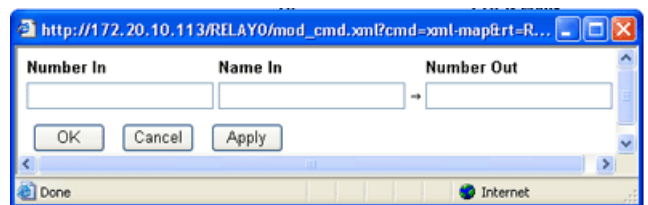


Figure 45. Number In – Number Out

- 3 Under "Number in" define the number type and -prefix that you wish to have replaced. The number type is denoted using the abbreviation from the *Call Number Formats Table* (see [Call Number Formats Table](#) on page 95).
- 4 Define the substitution under "Number out".
- 5 Click "OK".

Note: All call numbers in **IP-DECT** are always processed in "unknown" format. That is why the result of a number replacement for incoming calls, always is of the type "unknown" and the call number type of outgoing calls to be replaced is likewise always "unknown". Accordingly, you cannot specify a number type for replacements of incoming numbers in the "Number out" field and for replacements of outgoing numbers in the "Number in" field.

8.11.6 Show Active Calls

Select Gateway > Calls.

On this page you can see the currently active calls on all configured gateway interfaces. Calls from the IP-DECT Master does not normally display here.

The individual columns are explained in the table below.

Column	Format	Values	Description
--------	--------	--------	-------------

Interfaces	sif:cgpn:cgnm - >dif:cdpn:cdnm/ ccn		<p>Sif: Interface for incoming call.</p> <p>Cgpn: calling number, before routing.</p> <p>Cgnm: calling name before routing.</p> <p>Dif: Interface for the outgoing call.</p> <p>Cdpn: called number after routing.</p> <p>Cdnm: called name after routing.</p> <p>ccn: Name of the call counter used for this route (call counter name).</p>
Protocols	AProtocol/BProtocol		The protocol used on the calling and the called side.
Coders	ACoders/BCoders Coder,ms (round, jitter)		<p>Encoder used from A to>B or B to></p> <p>Coder: voice compression used.</p> <p>ms: packeting used.</p> <p>round: Transmission duration in ms.</p> <p>jitter: Variance of transmission delay in ms.</p>
Numbers	Caller->Called	<p>Caller</p> <p>Called</p>	<p>The number of the caller as transmitted to the call destination.</p> <p>The number dialled.</p>
Uptime	d:h:m:s		The uptime of the call in days, hours, minutes and seconds.
State		<p>Dialling</p> <p>Alerting</p> <p>Connected</p> <p>Clearing</p>	<p>Dialling is in progress.</p> <p>The dialled distant terminal is being called.</p> <p>The call is connected.</p> <p>The call has been terminated by one of the two parties.</p>

8.12 Backup

The IPBS/IPBL configuration can be downloaded and saved on a disc or a server. This is useful when identical configuration should be applied to several IPBS/IPBLs, for example when configuring the Radios in a system. For information on how to load a saved configuration on the IPBS/IPBL, see [8.14 Update](#) on page 106.

- 1 Select Backup > Config.
- 2 Click "download".
Click "download with standard password" to save the configuration with the default system password.
- 3 Click "Save" in the dialogue window and browse to the place where the configuration should be saved.
- 4 Click "Save".

8.13 Upgrade from IPBS/IPBL software version 2.x.x to 3.x.x

This section describes how to upgrade the IPBS/IPBL from software version 2.x.x to 3.x.x.

8.13.1 IPBS Upgrade

This section describes how to upgrade the IPBS from software version 2.x.x to 3.x.x.

- 1 Update the firmware to 2.4.0 or later. See [8.14.2 Update Firmware](#) for more information on how to update the firmware.
- 2 Reset in order to make the changes take effect, see [8.16 Reset](#).
- 3 Update the firmware to 3.x.x. See [8.14.2 Update Firmware](#) for more information on how to update the firmware.
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#).
- 5 Update the boot file to 3.x.x. The new boot file version contains a built-in webserver, so there is no need to use the Gwload tool (a tftp-style client used to repair a broken firmware) if the IPBS is unreachable through the web GUI. See [8.14.3 Update the Boot File](#) for more information on how to update the boot file.
- 6 Reset in order to make the changes take effect, see [8.16 Reset](#).

8.13.2 IPBL Upgrade

This section describes how to upgrade the IPBL from software version 2.x.x to 3.x.x.

- 1 Update the boot file to 413. See [8.14.3 Update the Boot File](#) for more information on how to update the boot file.
- 2 Update the firmware to 2.4.0 or later. See [8.14.2 Update Firmware](#) for more information on how to update the firmware.
- 3 Reset in order to make the changes take effect, see [8.16 Reset](#).
- 4 Update the firmware to 3.x.x. See [8.14.2 Update Firmware](#) for more information on how to update the firmware.
- 5 Reset in order to make the changes take effect, see [8.16 Reset](#).
- 6 Update the boot file to 3.x.x. The new boot file version contains a built-in webserver, so there is no need to use the Gwload tool (a tftp-style client used to repair a broken firmware) if the IPBL is unreachable through the web GUI. See [8.14.3 Update the Boot File](#) for more information on how to update the boot file.
- 7 Reset in order to make the changes take effect, see [8.16 Reset](#).

8.13.3 Configuration

The following configuration settings should be changed in the GUI after updating the firmware to version 3.x.x.

- 1 Disable LDAP replication for all Radios except in the case of Standby Master to Master Replication. Select LDAP > Replicator and make sure that the *Enable* check box is not selected.

- 2 Select DECT > Radio and enter the name and password for the Pari Master.

If the device is configured as a Master:

- 3 Select DECT > Master and select the *Enable Pari function* check box.
- 4 Select UNITE > SMS and enter the address to the IMS in the *IP Address* text box.

If SIP protocol is used:

- 5 Select DECT > Master.
- 6 Enter the IP address to the SIP proxy (registrar) in the *Proxy* text field.
- 7 Enter the IP address to the alternative SIP proxy (registrar) in the *Alt. Proxy* text field.
- 8 Select the *Enbloc Dialing* check box.
- 9 Select the *Allow DTMF through RTP* check box.
- 10 Select the *Register with number* check box.

If H.323 protocol is used:

- 11 Select DECT > Master
- 12 Enter the address to the gatekeeper in the *Gatekeeper IP Address* text field.

If the device is configured as a Standby Master:

- 13 Enter the address to the Master in the *Primary Master IP Address* text field.

- 14 Reset in order to make the changes take effect, see [8.16 Reset](#).

8.13.4 Downgrade from software version 3.x.x to 2.x.x

If a system with 3.x.x firmware and boot file is downgraded to a 2.x.x version, the HTTP server part of the boot code is removed.

If the firmware is downgraded to version 2.x.x, the LDAP replication must be activated again.

- 1 Select LDAP > Replicator.
- 2 Select the *Enable* check box to activate LDAP replication.

8.14 Update

This section describes how to do the following configurations and settings.

- Update Configuration
- Update Firmware
- Update the Boot File
- Update the RFPs

8.14.1 Update Configuration

A previously saved configuration can be loaded and activated on the IPBS/IPBL. See [8.12 Backup](#) on page 103 for information on how to save a configuration.

- 1 Select Update > Config.
- 2 Click "Browse..." and browse to the saved configuration.
- 3 Click "Upload".
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.14.2 Update Firmware

The software can be updated. Follow the steps below to update IPBS/IPBL with the firmware. Download firmware from the IP-DECT system provider.

Note: If this operation is interrupted, the firmware in the device will be defect. If a firmware upload is for any reason interrupted, the firmware must be uploaded again. Do not execute a reset before the firmware upload is complete. For information on how to load new firmware if the IPBS/IPBL is unreachable through the web GUI, see [10.1 Load Firmware Using the Gwload Tool](#) on page 116.

- 1 Select Update > Firmware.
- 2 Click "Browse..." and browse to the firmware file.
- 3 Click "Upload"
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.14.3 Update the Boot File

- 1 Select Update > Boot.
- 2 Click "Browse..." and browse to the boot file.
- 3 Click "Upload".
- 4 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

8.14.4 Update the RFPs

This section only applies to the IPBL.

The firmware can be updated. Follow the steps below to update RFP. Download firmware from the IP-DECT system provider.

In the RFP status list, information on connected RFPs are displayed.

- 1 Select Update > RFPs.
- 2 Click "Browse..." and browse to the RFP update file.
- 3 Click "Upload".

The screenshot shows the 'Ascom IP-DECT Gateway' web interface. On the left is a navigation menu with options: Configuration, General, LAN1, LAN2, IP, LDAP, DECT, VoIP, Administration, Users, Device Overview, Traffic, Backup, Update (highlighted), Diagnostics, and Reset. The main content area is titled 'Upgrade RFP Software'. It includes a 'Firmware File' field with the path '\\seprjawiklas\sw\rfp\Worf4_GAP_R4H.S2', an 'Update start time' section with radio buttons for 'Immediate' (selected) and 'Scheduled', and a date/time picker showing April 6, 00:00. There are checkboxes for 'In sequence' and 'When idle'. Below this is an 'RFP Status' table with columns: Port, Status, Description, SW version, and Upgrade. The table lists 8 ports, with ports 1-3 being 'Available' and ports 4-8 being 'Disconnected'. Each row has a checkbox in the 'Upgrade' column. At the bottom are 'Start' and 'Cancel' buttons.

Port	Status	Description	SW version	Upgrade
1	Available		R4H 3/40	<input type="checkbox"/>
2	Available	E81009	R4H 3/40	<input type="checkbox"/>
3	Available	E8403A	R4H 3/40	<input type="checkbox"/>
4	Disconnected	9014E8302B		<input type="checkbox"/>
5	Disconnected			<input type="checkbox"/>
6	Disconnected			<input type="checkbox"/>
7	Disconnected			<input type="checkbox"/>
8	Disconnected			<input type="checkbox"/>

Figure 46. Upgrade the RFP

- 4 Select "Immediate" or "Scheduled" update.
 - 5 Select "In sequence" check box to update the selected RFPs one by one.
 - 6 Select "When idle" check box to start the update when the RFP is idle.
 - 7 Mark the applicable RFPs to be updated.
 - 8 Click "Start" to upgrade the selected RFPs.
- The RFP restarts after the upload is finished.

8.15 Diagnostics

8.15.1 Logging

The IPBS/IPBL can generate a number of logs which can be useful when supervising and troubleshooting the IP-DECT system. For information on how to collect the log files, see [8.1.5 Configure Logging](#) on page 49. For a description of each log, see the table below.

Setting	Description
TCP	Logs generated upon TCP connection set-ups in the H.225 / H.245 protocol.
Gateway Calls	Logs generated by calls that go through the gateway interface.
Gateway Routing	Logs generated by calls that are routed through the gateway interface.
H.323 Registrations	Logs generated upon RAS registration.
SIP/UDP Registrations	Logs generated upon SIP registration.
DECT Master	Logs generated by the Master software component in the IPBS/IPBL.
DECT Stack	A low level DECT log, intended for support departments.
Config Changes	Logs generated upon configuration changes in the IPBS/IPBL or the IP-DECT system.

- 1 Select Diagnostics > Logging.
- 2 Select which logs to generate by selecting the check box next to the log name.
- 3 Click "OK".
- 4 View the logs by clicking the "syslog" link. The logs are updated in real-time.

8.15.2 Tracing

The information gathered from the trace functionality is mainly used for troubleshooting in case of failure in the system. The trace information is intended for the support departments.

It is possible to trace traffic information on the LAN for troubleshooting purposes.

- 1 Select the *Enable* check box in the Remote PCAP section to enable the use of a network protocol analyzer program, for example Wireshark.
The *Trace* check box in the Remote PCAP section is mainly used by the R&D department to follow the desired network attributes.
- 2 Select the *TCPIUDP Traffic* check box in the IP section to capture traffic information.
- 3 Click "OK".

8.15.3 Alarms

All active alarms are displayed here. An alarm is a fault that affects the normal service of the IP-DECT system and may require action from personnel to correct it. An IP-DECT Master can collect alarms from Radios and it can display all active alarms in the system. If an object is removed from the system, object-related alarms are automatically cleared after

a timeout period of 30 minutes. Active alarms are also cleared if the related object is restarted.

For a description of the attributes, see the table below.

Attribute	Description
Time	The date and time when the alarm is issued.
Code	A unique number that identifies the alarm. Click the code to get more detailed information about the alarm. For a list of possible codes and their descriptions, see 10.2 Fault Code Descriptions on page 116.
Severity	It has three possible states: <ul style="list-style-type: none">• Critical - Immediate action is required. It is displayed, for example, if a managed object goes out of service.• Major - Urgent action is required. It is displayed, for example, if the capability of the managed object is severely degraded.• Indeterminate - Level of severity cannot be determined
Remote	The IP Address of the object that reported the alarm. Click the IP address to access the object.
Source	The software module that reported the alarm. Together with the code it uniquely identifies an alarm.
Description	A textual description of the alarm.

8.15.4 Events

A history of alarms and errors is displayed here including active alarms. Click "Clear" in the top-right corner to clear the list of alarms and errors.

For a description of the attributes, see the table below.

Attribute	Description
Time	The date and time when the alarm, error is issued or cleared.
Type	The status of the fault. It has four possible states: <ul style="list-style-type: none">• Alarm - Alarms displayed in red are active alarms• Alarm cleared - The alarm is already cleared• Alarm timeout - The alarm exceeded the timeout period• Error - Refers to faults that are not active for a specific time.

Code	A unique number that identifies the alarm. Click the code to get more detailed information about the alarm. For a list of possible codes and their descriptions, see 10.2 Fault Code Descriptions on page 116.
Severity	It has three possible states: <ul style="list-style-type: none">• Critical - Immediate action is required. It is displayed, for example, if a managed object goes out of service.• Major - Urgent action is required. It is displayed, for example, if the capability of the managed object is severely degraded.• Indeterminate - Level of severity cannot be determined
Remote	The IP Address of the object that reported the alarm. Click the IP address to access the object.
Source	The software modul that reported the alarm. Together with the oode it uniquely identifies an alarm.
Description	A textual description of the alarm.

8.15.5 Performance

It is possible to check different performance parameters. For a description of the parameters, see the table below.

Parameter	Description
CPU	Shows CPU utilization
CPU-R	Shows utilization of CPU resources allocated by different tasks
MEM	Shows memory utilization
Concurrent calls	Shows the number of ongoing calls
Temperature (only for Gateways)	Shows the temperature of the cabinet
Voltage (only for Gateways)	Shows the power supply voltage level
Current (only for Gateways)	Shows the power supply current consumption

- 1 Select Diagnostics > Performance
- 2 Select the checkbox(es) for the desired performance statistics.
- 3 Click "OK".
- 4 One window shows statistics for the last 24 hours. The maximum possible value is displayed in the top-left corner. Click the left or right arrow buttons to see different time frames.

8.15.6 Config Show

Config Show displays the configuration as a text output.

8.15.7 Ping

The ping function is used to determine the response time from the IPBS/IPBL to a certain IP address. It can be used to analyse the connection between the IP-DECT system components.

- 1 Select Diagnostics > Ping.
- 2 Enter an IP address in the IP Address text field.
- 3 Press "Enter" on the keyboard.

8.15.8 Traceroute

The traceroute function displays how packets travel from the IPBS/IPBL to a certain IP address. The result is an ordered list of IP addresses with the measured round trip time.

- 1 Select Diagnostics > Traceroute.
- 2 Enter an IP address in the *IP Address* text field.
- 3 Press "Enter" on the keyboard.

8.15.9 Environment

This section only applies to the IPBL.

The environment tab gives information power supply and consumption. It also display temperature and fan status.

- 1 Select Diagnostics > Environment.
- 2 The following information is available in the *Power* field:
 - Power supply - AC or DC power port.
 - Voltage - input voltage.
 - Current consumption - total consumption for the IPBL an the connected RFPs.
 - Max 4,0 A when supplied with AC power port
 - Max 5,2 A when supplied with DC power port
- 3 The following information is available in the *Environment* field.
 - Temperature - °C
 - Fan status - OK, not OK

8.15.10 RFP Scan

This section only applies to the IPBS.

To scan for occupied system IDs of other Ascom IP-DECT systems within the coverage area, perform an RFP scan following the steps below.

Note: Executing an RFP scan will terminate all calls on the IPBS.

- 1 Select Diagnostics > RFP Scan
- 2 Click "Start Scanning"

8.15.11 Service Report

To download a service report do the following:

- 1 Select Diagnostics > Service Report.
- 2 Click "download".
- 3 Click "Save" and browse where to save the service report.

8.16 Reset

Some configuration changes requires a reset in order to take effect. A reset reboots the software. There are two ways to perform a reset:

- Idle reset - waits until there are no active calls in the IPBS/IPBL.
- Immediate reset - clears all calls and resets the IPBS/IPBL.

8.16.1 Idle Reset

- 1 Select Reset > Idle Reset.
- 2 Click "OK".
- 3 The IPBS/IPBL will reset when there are no active calls.

8.16.2 Immediate Reset

- 1 Select Reset > Reset.
- 2 Click "OK".
- 3 The IPBS/IPBL will terminate all active calls and reset.

8.16.3 TFTP Mode

Note: When the IPBS/IPBL is in TFTP mode it can only be reached using the gwload utility. This mode should not be used during normal operation.

8.16.4 Boot

When the IPBS/IPBL is in Boot mode it uses a small version of the firmware (minifirmware) which contains only the IP stack and the web interface.

- 1 Select Reset > Boot.
- 2 Click "OK".

8.17 Reset Using the Reset Button

It is possible to do a hardware reset of the IPBS and IPBL by pressing the reset button. The button is accessed through a hole in the back of the IPBS (figure 1 on page 3) and on the front of the IPBL (figure 2 on page 6).

Note: Use a pointed object in an non conducting material to perform a reset.

Short press < 1 sec	Restart
Medium press ~3 sec	Restart in TFTP mode. In TFTP mode the IPBS and IPBL can be accessed only through the gwload application. This mode is intended for support and development departments.
Long press ~ 10 sec Wait afterwards until the LED (LED 1 for IPBS) is steady amber	Factory reset - all configuration parameters will be set to default values.

9 Commissioning

This section describes the visual inspection and tests that must be executed after completing the installation and initialization of the IP-DECT system. The purpose of the visual inspection and tests is to verify that all installation activities have resulted in a correctly functioning system. If it appears that a part is malfunctioning while the system is installed correctly (i.e.: no cabling faults, no configuration faults), the technician must consult the maintenance section included in this manual for fault finding.

9.1 Radio coverage verification tests

The radio coverage verification consists of two tests:

- Base station operation test
- Coverage area test

Note: Be sure that all batteries in the cordless phones are charged before executing the tests.

9.1.1 Base Station Operation Test

The purpose of this test is to check if all base stations are operational.

- 1 Put a cordless phone in the service display mode (DCA mode) , see applicable user manual for the cordless phone.
- 2 Use the base station plan, see *System Planning, Ascom IP-DECT, TD 92422GB*.
- 3 Move close to each base station and check that the cordless phone locks to it (the service display should display the correct number).

After having checked that all base stations are operational proceed with the coverage area test.

9.1.2 Coverage Area Test

The purpose of this test is to verify that there is satisfactory field strength to enable good speech quality everywhere within the covered area (rooms, lift shafts, staircases). This test is executed with two cordless phones and requires two persons.

- 1 Place the cordless phone in the service display mode (DCA mode) and call the other cordless phone. One user of the cordless phone should now start moving around the covered area. Both users must check that a good speech quality is maintained everywhere. Special attention should be paid to areas such as edges of the building and areas behind metal structures where there is a possibility of reduced speech quality.
- 2 Mark areas where cracking sounds or mutes are heard.

9.1.3 Evaluation

After having performed the coverage area test, the results should be evaluated. If the coverage is not sufficient you should review the planning and move or add equipment.

9.2 Cordless Extension Number Test

This test checks for each cordless phone the complete connection from the IP-DECT system to the PBX. Furthermore it checks that the cordless phones' numbers have been

correctly programmed. The test is performed by calling all cordless phone from one specific cordless phone.

- 1 Put all cordless phone together in order of extension number on a table.
- 2 Go off-hook with each cordless phone and check that the dial tone is heard.
- 3 Call with a cordless phone (cordless phone A) all other cordless phones sequentially and check that the cordless phone with the corresponding number on its display rings when called.
- 4 Call cordless phone A and check if it rings.

10 Troubleshooting

10.1 Load Firmware Using the Gwload Tool

If the firmware is corrupt, for example if firmware download is interrupted the IPBS/IPBL could become unreachable by the web GUI. It will not be possible to load new firmware or to start correctly. If this occurs, the IPBS/IPBL runs on the bootcode and the Gwload tool (a tftp-style client used to repair a broken firmware) can be used to upload firmware.

- 1 Download the Gwload software from the IP-DECT system provider.
- 2 Set the IPBS/IPBL in TFTP-mode by performing a medium (~3 sec) hardware reset, see [8.17 Reset Using the Reset Button](#) on page 113.
- 3 Start a command window.
To update with new firmware, execute the following command from the folder where the gwload.exe file is located:
IPBS:
gwload /setip /i <ipaddress> /gwtype 1201 /prot <..path/firmwarefilename> /go
IPBL:
gwload /setip /i <ipaddress> /gwtype 4001 /prot <..path/firmwarefilename> /go
- 4 If there is more than one IPBS/IPBL in TFTP mode, select the unit to update and press enter.

10.2 Fault Code Descriptions

This section lists the possible fault codes and their descriptions.

Description	Code	Device
RFP disconnected	0x000e0001	IPBS/IPBL
RFP malfunctioning	0x000e0002	IPBS/IPBL
RFP disabled	0x000e0003	IPBS/IPBL
RFP software download failed	0x000e0004	IPBS/IPBL
High temperature	0x000f0001	IPBL
High power consumption	0x000f0002	IPBL
Supply voltage low	0x000f0004	IPBL
Supply voltage high	0x000f0008	IPBL
Fan failure	0x000f0010	IPBL
Synchronization ring broken	0x00100001	IPBL
Reference Synchronization Signal Lost	0x00100002	IPBL
Synchronization Lost	0x00100004	IPBL
RFP unsynchronized	0x000e0005	IPBS
Synchronization to alien system lost	0x000e0006	IPBS
Backup synchronization master active	0x000e0007	IPBS
Other DECT system with same sysid detected	0x000e0008	IPBS
Standby Master is active	0x00030001	IPBS/IPBL

Standby Mobility Master is active	0x00030304	IPBS/IPBL
Connection to Radio lost (from Master)	0x00030204	IPBS/IPBL
Connection to Master lost (from MM)	0x00030303	IPBS/IPBL
Connection to Mobility Master lost (from MM)	0x00030301	IPBS/IPBL
Cannot establish connection to Mobility Master	0x00030302	IPBS/IPBL
User registration failure	0x00030002	IPBS/IPBL
Unexpected restart (watchdog/reset/power on)	0x000b0001	IPBS/IPBL
Memory low (90%)	0x00120001	IPBS/IPBL
Emergency registration down (Master)	0x00030003	IPBS/IPBL
Registration down (Gateway)	0x00010002	IPBS/IPBL
Interface down (Gateway)	0x00010001	IPBS/IPBL
Protocol error (Gateway)	0x00010003	IPBS/IPBL
No Media Data received (RTP)	0x00050001	IPBS/IPBL
Excessive loss of data (RTP)	0x00050002	IPBS/IPBL
Wrong Payload Type received (RTP)	0x00050003	IPBS/IPBL
Stun failed (RTP)	0x00050004	IPBS/IPBL
SRTP authentication failed (RTP)	0x00050005	IPBS/IPBL
SRTCP authentication failed (RTP)	0x00050006	IPBS/IPBL
Unexpected Message (H323)	0x00060001	IPBS/IPBL
Status Inquiry (H323)	0x00060002	IPBS/IPBL
NAT discovery failed (SIP)	0x00070001	IPBS/IPBL
Overload (SIP)	0x00070003	IPBS/IPBL
Coder selection failed (SIP)	0x00070004	IPBS/IPBL
Media configuration failed (SIP)	0x00070005	IPBS/IPBL
Certificate validation is disabled until system time is set	0x000c1000	IPBS/IPBL
Interface down	0x00110000	IPBS/IPBL
Interface not configured	0x00110001	IPBS/IPBL
DHCP server not responding	0x00110002	IPBS/IPBL
Invalid UDP-RTP port base/range	0x00110019	IPBS/IPBL
Invalid UDP-NAT port base/range	0x0011001a	IPBS/IPBL
Invalid NAT port base/range	0x0011001b	IPBS/IPBL
Checksum error	0x00110040	IPBS/IPBL
ARP poisoning detected	0x00110041	IPBS/IPBL
Out of TCP/NAT ports	0x00110046	IPBS/IPBL
Out of TCP ports	0x00110047	IPBS/IPBL
TCP checksum error	0x00110048	IPBS/IPBL
TCP bind error	0x00110049	IPBS/IPBL
Out of UDP/RTP ports	0x00110050	IPBS/IPBL
Out of UDP ports	0x00110051	IPBS/IPBL
UDP checksum error	0x00110052	IPBS/IPBL
UDP bind error	0x00110053	IPBS/IPBL
No route to destination	0x0011005a	IPBS/IPBL

No route to destination, if down	0x0011005b	IPBS/IPBL
No route to destination, if unknown	0x0011005c	IPBS/IPBL
No route to destination, if unconfigured	0x0011005d	IPBS/IPBL
No route to destination, no gateway	0x0011005e	IPBS/IPBL
No route to destination, loop	0x0011005f	IPBS/IPBL

11 Related Documents

System Description, Ascom IP-DECT System	TD 92375GB
Data Sheet, IP-DECT Base Station	TD 92370GB
Data Sheet, IP-DECT Gateway	TD 92430GB
System Planning, Ascom IP-DECT	TD 92422GB
Configuration Notes for Cisco Call Manager in Ascom IP-DECT System	TD 92424GB
Configuration Notes for Aastra MX-ONE in Ascom IP-DECT System	TD 92637GB
Configuration Notes for Ascom VoIP Gateway in Ascom IP-DECT System	TD 92642GB
Technical Product Manual, DCT1800-GAP	TD 92093GB

Document History

For details in the latest version, see change bars in the document.

Version	Date	Description
Ver. A	2009-02-02	First released version.
Ver. B	2009-04-15	Updated 8.7 UNITE on page 80 and added information about device management and service discovery.

Appendix A: How to Use the Update Server

A.1 Summary

Automatic update is based on configuration and firmware information stored on a standard web server and retrieved by the devices on a regular basis.

There are 2 modules in the device which work in tandem. The first is known as "UP0" and actually executes the upload and download of configuration information as well as the download of updated firmware. UP0 is controlled by commands as described below.

The second module is known as "UP1". It serves to poll a given website for changed configuration information. If certain conditions are met, UP1 will issue commands to UP0 to perform the requested updates.

UP0 can also receive commands from the "Update clients" page of the PBX Administration user interface.

A.1.1 System Requirements

One or more regular Web Server that can be accessed by all devices are required. This has been tested with Microsoft IIS and Apache, but any regular Web Server should do.

For best results, the Web Server should be able to maintain a large number of HTTP sessions simultaneously, since potentially all devices may attempt a configuration update at the same time. For example, Microsoft's Personal Web Server is not adequate, since it only support 10 simultaneous sessions.

A.1.2 Installation

To be able to upload (save) device configuration information on the web server, it must allow HTTP PUT requests. All other functions require HTTP GET permissions only.

Since all HTTP requests are performed unauthenticated, the website used must allow anonymous read (and potentially write) access. You may want to restrict access to that site to certain network address ranges.

Configure a Microsoft IIS URL to allow PUT commands:

- 1 Create a directory where you want to save configurations to
- 2 Create a virtual directory in Microsoft's IIS manager
- 3 Select "read" and "write" access

No installation is needed on the IPBS/IPBLs.

A.1.3 Configuration

See [8.1.3 Configure Automatic Firmware Update](#) on page 47 on how to configure the IPBS/IPBLs for automatic update.

The URL parameter must point to the site where the file containing the maintenance commands is stored. Note that in this URL, no host names are supported. The web servers IP address must be used.

A.1.4 Setting the UP1 Parameters

The applet saves the configuration in a line starting config change UP1.

The full syntax is:

`config change UP1 /url <url> [/poll <slow>] [/poll-fast <fast>] [/disc]`

If the URL ends with a '/' then a default filename is used based upon the product in question. If for example the URL is "http://1.2.3.4/configs/", it is expanded to "http://1.2.3.4/configs/update-IPBS.htm" (.../update-IPBL).

The product type name used is the one used in the Version line on the devices Info page. Note that the extension is irrelevant, .htm or .txt or no extension at all may be used. On some Web servers, URLs are case sensitive.

The maintenance command file is retrieved initially after the configured poll interval (in minutes) is expired after boot. Short poll intervals can create substantial load on a big network. A value less than 15 minutes (which is the default) is therefore not recommended.

However, for new devices (that is, devices which have been reset to factory settings and never had a successful download of a maintenance command file), the command file is retrieved every minute (for up to 30 minutes). This is done so that a fresh device can quickly retrieve a site depending standard configuration when it is installed. You can change this initial polling interval using the /poll-fast <fast> parameter (this is not recommended).

The /disc parameter can be specified to force the device to close the http sessions used immediately.

When the maintenance command file is retrieved, the commands found in the file are executed in sequence. Theoretically, all commands which can be typed in to a telnet session to the device or which appear in a config file can be used in the maintenance file. However, in most cases, you will use config change commands and commands to the UP0/UP1 modules.

The command file is executed every time it is retrieved (depending on the poll interval). However, in most cases, you don't want it to be executed each time, but only once. For example, if you are about to deploy a certain configuration change to all IPBSs, then you want this change to be done once per IPBS only. This can be achieved by the check command:

`mod cmd UP1 check <final-command> <serial>`

The devices maintain an internal variable UPDATE/CHECK which is initially (or when the device is reset to factory settings) empty. The check command will compare the <serial> parameter with the UPDATE/CHECK variable. If it is equal, any further processing of the command file is cancelled.

If it differs, the remainder of the file will be processed and, after the last command is executed, the UPDATE/CHECK variable will be set to <serial> and the <final-command> will be executed. The following commands are useful values for <final-command>:

ireset	resets the device as soon it is idle
reset	resets the device immediately
iresetn	resets the device as soon it is idle, only if a reset is required
resetn	resets the device immediately, only if a reset is required
ser	this is a no-op

Often, configuration changes shall be made only during certain times (e.g. non-working hours). This can be achieved using the times command:

`mod cmd UP1 times [/allow <hours>] [/initial <minutes>]`

The times command will check the current time against <hours>. If it does not match this restriction, any further processing of the command file is cancelled. <hours> is a comma separated list of hours. Only those hours listed are considered valid times for execution of the command file.

```
mod cmd UP1 times /allow 12,23,1,2,3,4
```

The command above allows command executions only between 12:00 and 12:59 and 23:00 and 4:59 local time (on a 24h clock). Note that if the device has no time set, all command executions will be cancelled.

If the /initial parameter is set, the no commands will be executed within the first <minutes> minutes after the device has been booted. This is done to avoid firmware download and flashing when installing devices.

```
mod cmd UP1 times /allow 12,23,1,2,3,4 /initial 6
```

The command above suppresses any command file processing within the first six minutes after each boot of the device. If /initial is set, new devices (or those that have been reset to factory settings), the command file will be retrieved even if it normally would be suppressed by the /allow parameter. This allows new devices to retrieve a site specific standard configuration quickly.

A.1.5 Setting the UP0 Parameters

To perform a firmware update, use the following command:

```
mod cmd UP0 prot <url> <final-command> <build-serial>
```

The command above downloads the new firmware from <url> and flash it to the device, then <final-command> is executed.

The IPBSs maintain an internal variable UPDATE/PROT which is initially (or when the device is reset to factory settings) empty. The prot command will compare the <build-serial> parameter with the UPDATE/PROT variable. If it is equal, no firmware will be loaded or flashed. If there is no UPDATE/PROT yet (like for a new device), <build-serial> is compared against the build number of the current firmware. After a successful download, UPDATE/PROT is set to <build-serial>. Note that <build-serial> is not checked against the firmware version actually loaded. It is your responsibility to keep this consistent.

If <url> ends with a slash ('/'), then a default firmware filename is added to the URL depending on the type of the device (e.g. ipbs.bin or ipbl.bin).

```
mod cmd UP0 prot http://192.168.0.10/firm/ ireset 1.2.2
```

The command above determines if firmware 1.2.2 is already installed. If not, new firmware will be downloaded from http://192.168.0.10/firm/ipbs.bin (.../ipbl.bin), the UPDATE/PROT variable will be set to 1.1.2 and the device will be reset as soon as it is idle.

Similar to the prot command, the boot command will update the boot code.

```
mod cmd UP0 boot http://192.168.0.10/firm ireset 205
```

The command above determines if boot code 205 is already installed. If not, new boot code will be downloaded from http://192.168.0.10/firm/boot_ipbs.bin (.../boot_ipbl.bin), the UPDATE/BOOT variable will be set to 205 and the device will be reset as soon as it is idle.

Using UP0, device configurations can be saved to a web server.

```
mod cmd UP0 scfg <url>
```

This will cause the device to upload its current config to url This will be done using an HTTP PUT command. url must be writable thus. With url, some meta character strings are replaces as follows:

Sequence	Replacement	Example
#d	Current date and time	20040319-162544
#m	Device mac address	00-90-33-03-0d-f0
#h	Device hardware ID	ipbs-03-0d-f0
#b	Rolling backup index loops over 0 .. n-1 for each backup	5

A.1.6 Setting the RFP_UPDATE0 Parameter

To perform a RFP firmware update, use the following commands.

```
mod cmd RFP_UPDATE0 firmware http://192.168.0.10/Worf4_GAP_R4H.s2
```

The command above specifies the url to the RFP firmware to use.

```
mod cmd RFP_UPDATE0 select 0x2753
```

Specifies which RFPs to update using a hex-encoded bit-mask. Each bit represents an RFP port starting with port 1 at the LSB (0x0001) up to port 16 (0x8000).

0x2753 specifies RFP "1,2,5,7,9,10,11,14" to be updated.

```
mod cmd RFP_UPDATE0 schedule DD.MM.YYYY-HH:MM
```

Specifies when the update shall start. If no date is provided, the update will be immediate when the start command is issued.

```
mod cmd RFP_UPDATE0 start /idle
```

Starts the update or activates the schedule. Normally the /idle command is selected and an update starts only if the RFP is idle.

If multiple RFPs are selected for update, they will be updated one at a time If /sequence command is used.

Example IPBL

This example shows an "update file" for the IPBL.

```
mod cmd UP0 prot http://172.20.8.125/ascom/firmware/ ireset 1.0.0
mod cmd UP0 boot http://172.20.8.125/ascom/boot/ ireset 412
mod cmd UP1 check ser 20070316-1
mod cmd RFP_UPDATE0 firmware http://172.20.8.125/ascom/rfp/Worf123.S2
mod cmd RFP_UPDATE0 select 0xffff
mod cmd RFP_UPDATE0 start /idle
```

Example IPBS

This example shows an "update file" for the IPBS.

```
mod cmd UP0 prot http://172.20.8.128/ascom/firmware/ ireset 1.0.0
mod cmd UP0 boot http://172.20.8.128/ascom/boot/ ireset 412
```

A.1.7 Configuration File Backup

To make a backup of the configuration file, use the following command:

```
mod cmd UP0 scfg <url> [<final-command> <save-serial> [ /force <hours>]]
```

The scfg command uploads the current configuration file to the specified <url>.

Example

```
mod cmd UP0 scfg http://192.168.0.10/configs/saved/#h#b5.txt no-op WEEKLY /force 168
```

The command above saves the device configuration file once a week with a backlog of 5 weeks.

To load a configuration file on the IP-DECT device use the following command:

```
mod cmd UP0 cfg <url> <final-command> <serial>
```

The command loads the configuration file, and all commands in it are executed.

Appendix B: RFP Power Consumption

The tables below show power consumption for a base station connected to the IPBL. The power consumption of the IPBL is approximately 15 W.

Note: The maximum cable length for base stations connected to the IPBL must **not** exceed 1500 meters.

B.1 KRCNB 201/DCT1800

Cable length (metres)	0.4 mm wire size (Ø)		0.5 mm wire size (Ø)		0.6 mm wire size (Ø)	
	0 EPP	1 EPP	0 EPP	1 EPP	0 EPP	1 EPP
0	7.5	7.5	7.5	7.5	7.5	7.5
100	7.9	7.8	7.8	7.7	7.7	7.6
200	8.3	8.0	8.0	7.8	7.8	7.7
300	8.9	8.3	8.3	8.0	8.0	7.8
400	9.8	8.7	8.7	8.2	8.2	7.9
500	11.3	9.2	9.2	8.5	8.4	8.0
600	-	9.8	9.8	8.7	8.6	8.2
700	-	10.7	10.7	9.0	8.8	8.3
800	-	12.3	12.3	9.4	9.1	8.4
900	-	-	-	9.8	9.5	8.6
1000	-	-	-	10.3	9.9	8.8
1100	-	-	-	11.1	10.4	8.9
1200	-	-	-	12.3	11.1	9.1
1300	-	-	-	-	12.1	9.3
1400	-	-	-	-	-	9.6
1500	-	-	-	-	-	9.9
1600	-	-	-	-	-	10.2
1700	-	-	-	-	-	10.6
1800	-	-	-	-	-	11.1
1900	-	-	-	-	-	11.7
2000	-	-	-	-	-	12.7
2100	-	-	-	-	-	-
2200	-	-	-	-	-	-
2300	-	-	-	-	-	-
2400	-	-	-	-	-	-
2500	-	-	-	-	-	-
2600	-	-	-	-	-	-
2700	-	-	-	-	-	-

Table 1 Power consumption (watts) of base stations and cabling when powered with 48 V

B.2 BS3x0

Cable length (metres)	0.4 mm wire size (Ø)		0.5 mm wire size (Ø)		0.6 mm wire size (Ø)	
	0 EPP	1 EPP	0 EPP	1 EPP	0 EPP	1 EPP
0	5.0	5.0	5.0	5.0	5.0	5.0
100	5.2	5.1	5.1	5.1	5.1	5.1
200	5.3	5.2	5.2	5.1	5.1	5.1
300	5.6	5.3	5.3	5.2	5.2	5.1
400	5.8	5.5	5.5	5.3	5.3	5.2
500	6.1	5.6	5.6	5.4	5.4	5.2
600	6.5	5.8	5.8	5.5	5.4	5.3
700	7.1	6.0	6.0	5.6	5.5	5.3
800	8.1	6.2	6.2	5.7	5.6	5.4
900	-	6.5	6.5	5.8	5.7	5.4
1000	-	6.9	6.9	5.9	5.8	5.5
1100	-	7.3	7.3	6.1	5.9	5.6
1200	-	8.1	8.1	6.2	6.1	5.6
1300	-	-	-	6.4	6.2	5.7
1400	-	-	-	6.6	6.4	5.8
1500	-	-	-	6.9	6.6	5.8
1600	-	-	-	7.2	6.8	5.9
1700	-	-	-	7.5	7.0	6.0
1800	-	-	-	8.1	7.3	6.1
1900	-	-	-	9.6	7.8	6.2
2000	-	-	-	-	8.4	6.3
2100	-	-	-	-	-	6.4
2200	-	-	-	-	-	6.5
2300	-	-	-	-	-	6.6
2400	-	-	-	-	-	6.8
2500	-	-	-	-	-	6.9
2600	-	-	-	-	-	7.1
2700	-	-	-	-	-	7.3
2800	-	-	-	-	-	7.6
2900	-	-	-	-	-	7.9
3000	-	-	-	-	-	8.4
3200	-	-	-	-	-	-
3400	-	-	-	-	-	-
3600	-	-	-	-	-	-
3800	-	-	-	-	-	-
4000	-	-	-	-	-	-

Table 2 Power consumption (watts) of base stations and cabling when powered with 48 V

Appendix C: Local R-Key Handling

Local R-key handling assume that the check box for local R-key handling is selected, see [8.5.8 Local R-Key Handling](#) on page 68.

The following R-key functions are available during a call.

Key	Description
R	Put the ongoing call on hold and get a new line. (Dial the number to the second call.)
R0	Send busy signal to the incoming call.
R1	Terminate the ongoing call and switch to call on hold/incoming call.
R2	Switch between ongoing call and call on hold/incoming call.
R3	This function (normally used for three-party conference) is not supported in the IP-DECT System.
R4	Transfer call on hold to ongoing call and disconnect.

Appendix D: Database Maintenance

This section describes how IP-DECT user configuration can be moved from one system to another. By moving users, one IP-DECT system can be split into many systems or several IP-DECT systems can be merged to one single system.

Before database merge you should consider if the IP-DECT R3 Multi Master concept can be used instead and whether it is possible to have several Masters on one site.

D.1 Prerequisites

For all systems involved in the database maintenance procedure:

- It is highly recommended to have the same software version running on all systems.
- If a user is moved to a system with a different SARI, the target system must be configured with multiple SARIs containing the SARI number of the originating system as well as its existing SARI. For more information, see [8.5.24 SARI](#) on page 75.
- The systems must have the same DECT system name and the same DECT system password (configured under DECT > System) as well as the same device password (General > Admin).
- LDAP replication must not be activated.

D.2 Database Maintenance Procedure

- 1 Make sure the Portable Devices that correspond to the moved user data have no contact with the system. Turn off the Portable Devices or switch off the Radio(s) in the area where the Portable Devices are located. Portable Devices should show "No system". Portable Devices may be desubscribed if they have connection to the system during database maintenance.
- 2 Save a configuration file from each Master involved. See [8.12 Backup](#) on page 103.
- 3 Identify user records in the saved configuration files and modify them according to the desired plan. User records are located at the end of the file beginning after the row:

`mod cmd FLASHDIR0 add-view 101 cn=PBX0`
- 4 To remove a user, remove the corresponding line.

To add a user (from another file), insert a line that has been removed from another file. Remove the following attributes:

`(guid;bin=###)`
`(usn=###)`
where ### denotes an arbitrary value.
- 5 Save modifications to the configuration files.
- 6 Make sure that step 1 is met, and upload configuration files to the corresponding entities. See [8.14.1 Update Configuration](#) on page 106.
- 7 Reset in order to make the changes take effect, see [8.16 Reset](#) on page 113.

Removing a User Example

This example shows part of the configuration file. There may also be other attributes in the used system.

Before Removal

```
mod cmd FLASHDIR0 add-view 101 cn=PBX0

mod cmd FLASHDIR0 add-item 101
(cn=1950)(guid;bin=80319FC0E909D311905C00013E00EFC8)(dn=1950)(h323=1
950)(e164=1950)(pbx=<user admin="no"/>)(pbx=<gw name="DECT_CEG"
ipei="002020173394" subs="977e9bfc568c8223197e4195bec9ec28"/>)(usn=14)

mod cmd FLASHDIR0 add-item 101
(cn=1951)(guid;bin=7B7C9D01E909D311905C00013E00EFC8)(dn=1951)(h323=1
951)(e164=1951)(pbx=<user admin="no"/>)(pbx=<gw name="DECT_CEG"
ipei="002020173479" subs="90bd79116daec066105610822cabc1e7"/>)(usn=15)
```

After Removal

```
mod cmd FLASHDIR0 add-view 101 cn=PBX0

mod cmd FLASHDIR0 add-item 101
(cn=1950)(guid;bin=80319FC0E909D311905C00013E00EFC8)(dn=1950)(h323=1
950)(e164=1950)(pbx=<user admin="no"/>)(pbx=<gw name="DECT_CEG"
ipei="002020173394" subs="977e9bfc568c8223197e4195bec9ec28"/>)(usn=14)
```

Adding a User Example

This example shows part of the configuration file. There may also be other attributes in the used system.

Before Addition

```
mod cmd FLASHDIR0 add-view 101 cn=PBX0

mod cmd FLASHDIR0 add-item 101
(cn=1950)(guid;bin=80319FC0E909D311905C00013E00EFC8)(dn=1950)(h323=1
950)(e164=1950)(pbx=<user admin="no"/>)(pbx=<gw name="DECT_CEG"
ipei="002020173394" subs="977e9bfc568c8223197e4195bec9ec28"/>)(usn=14)
```

After Addition

```
mod cmd FLASHDIR0 add-view 101 cn=PBX0

mod cmd FLASHDIR0 add-item 101
(cn=1950)(guid;bin=80319FC0E909D311905C00013E00EFC8)(dn=1950)(h323=1
950)(e164=1950)(pbx=<user admin="no"/>)(pbx=<gw name="DECT_CEG"
ipei="002020173394" subs="977e9bfc568c8223197e4195bec9ec28"/>)(usn=14)

mod cmd FLASHDIR0 add-item 101
(cn=1951)(dn=1951)(h323=1951)(e164=1951)(pbx=<user admin="no"/
>)(pbx=<gw name="DECT_CEG" ipei="002020173479"
subs="90bd79116daec066105610822cabc1e7"/>)
```

The guid;bin and usn attributes are not insterted. The system will create these attributes when the file is uploaded to the device.

Appendix E: Load Balancing

Load balancing can be used in an IP-DECT system when the number of Portable Devices exceeds what an IP-PBX is able to register.

When load balancing the traffic is distributed over several IP-PBXs which can be done in two ways using:

- fixed connections for users on each Master towards *multiple* IP-PBXs.
- dynamic connection for users on each Master towards IP-PBX *network* using DNS services.

E.1 Load Balancing Using Fixed Connection Towards IP-PBXs

When the number of users exceeds what an IP-PBX is able to register, you can load balance using several IP-PBXs where each Master in the IP-DECT system is connected to a fixed IP-PBX.

Note: For redundancy, an alternative gatekeeper/proxy should always be used.

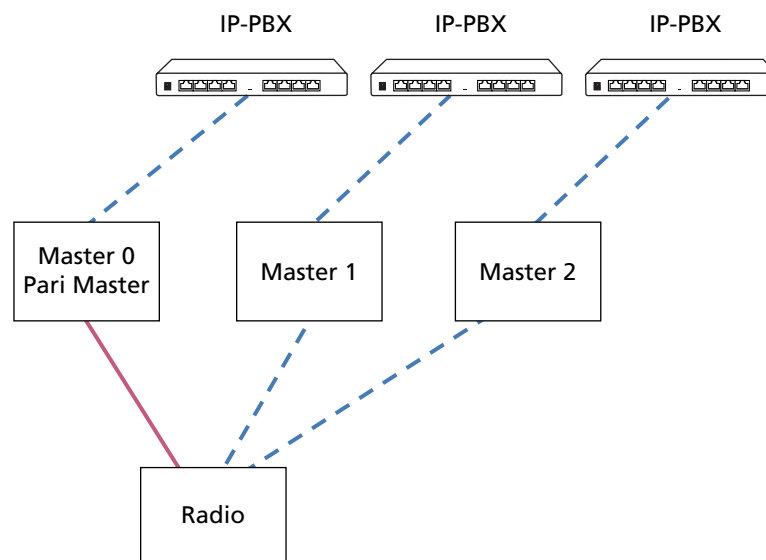


Figure 1. Load balancing using fixed connection towards IP-PBXs.

- 1 Select DECT > Master.
- 2 In the drop-down list, select "SIP" protocol.
- 3 Enter the IP address or host name and optionally port of proxy (e.g. proxy1.ascom-rd.com:5060) to the SIP proxy (registrar) in the Proxy text field.
- 4 To get redundancy: Enter the IP address or host name and optionally port of proxy (e.g. proxy2.ascom-rd.com:5060) to the alternative SIP proxy (registrar) in the Alt. Proxy text field.
- 5 Reset in order to make the changes take effect, see [8.16 Reset](#).

E.2 Load Balancing Using Dynamic Connection Towards IP-PBX Network

When the number of users exceeds what an IP-PBX is able to register, you can use load balancing towards an IP-PBX network. Using DNS services, users on each Master are

dynamically connected towards the IP-PBX network. In addition to the load balancing of the traffic, redundancy is also achieved.

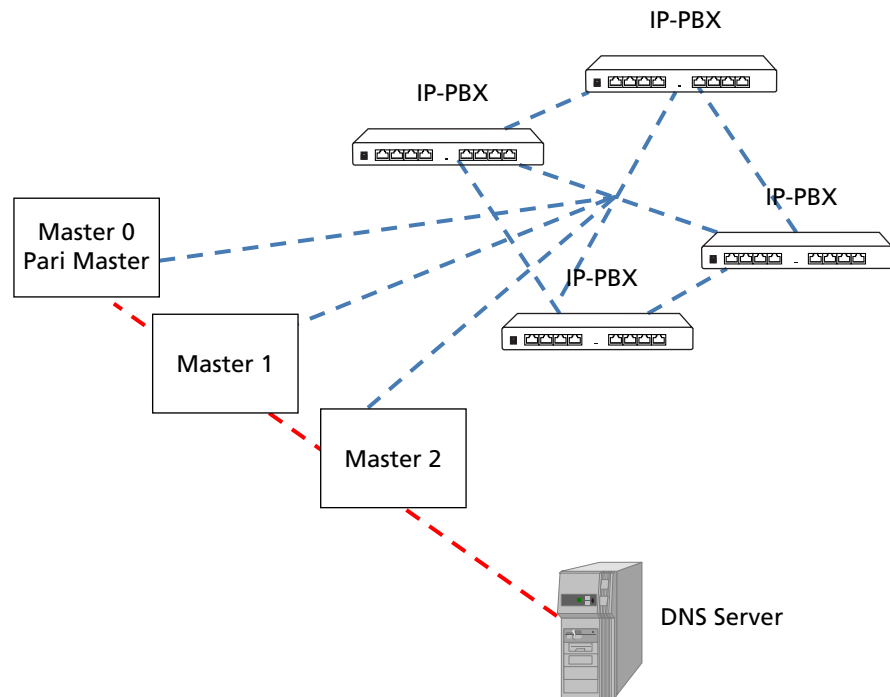


Figure 2. Load balancing using dynamic connection towards IP-PBX network.

E.2.1 How the Load Balancing Works

When you register a Portable Device, a SRV-type query is sent to the DNS server asking for existing SIP proxys (IP-PBXs) in the domain defined in the Master. The DNS server will reply with a list of SRV (Service) records, one for each IP-PBX. Each SRV record contains a priority and a weight value. Lower priority value means more preferred. When there are two or more records with the same priority, then the weight value determines which IP-PBX the user should be dynamically connected to.

A DNS server assign each user a primary and a secondary proxy address using DNS-SRV service mechanism.

E.2.2 Local Site Redundancy

If redundancy is wanted in a remote site, that is you want to be able to make emergency phone call if the WAN connection to the central site goes down, a local site proxy server, e.g. SRST (Cisco), can be used in the remote site, see [figure 3](#) on page 133.

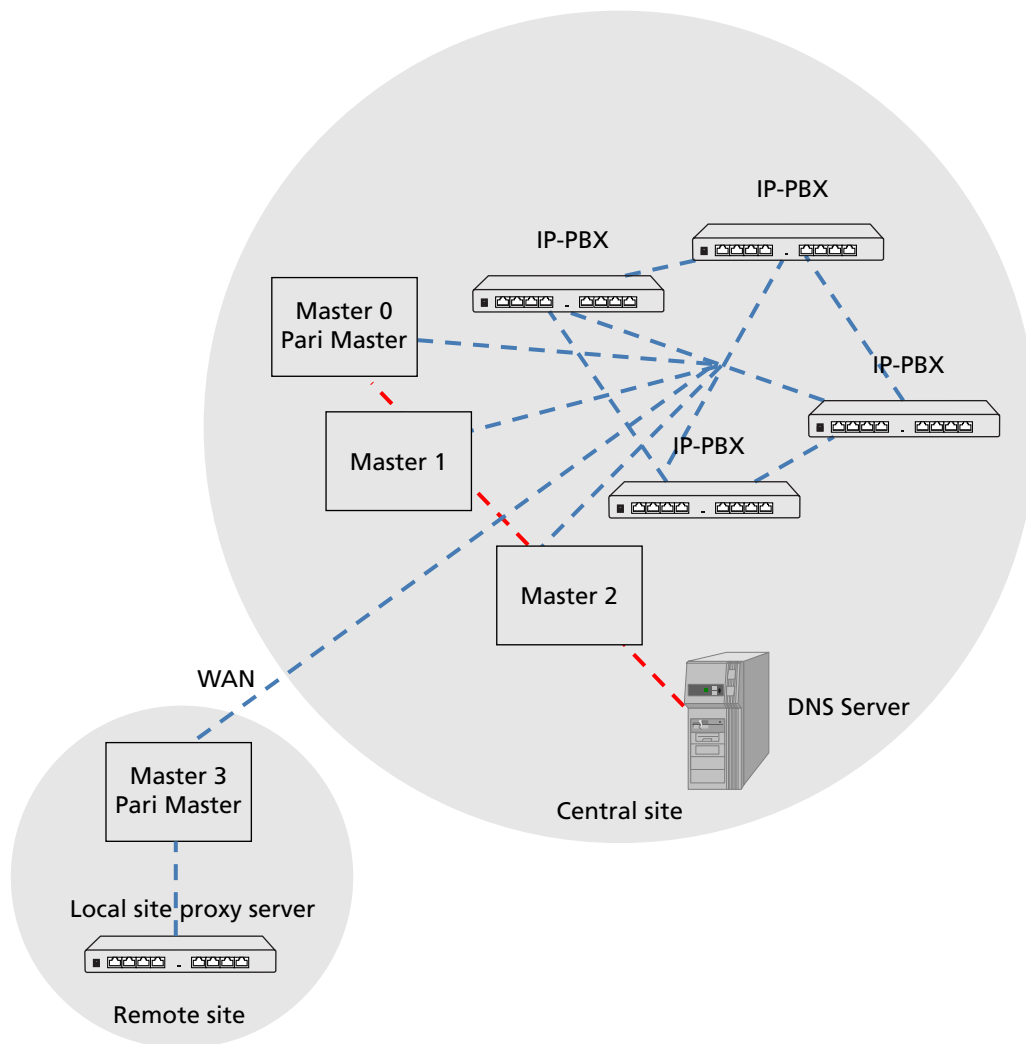


Figure 3. Redundancy in the remote site using a local site proxy server.

E.2.3 About SRV Records

Record format

An SRV record has the form:.

_Service._Proto.Name	TTL	Class	SRV	Priority	Weight	Port	Target
----------------------	-----	-------	-----	----------	--------	------	--------

- **Service:** the symbolic name of the desired service.
- **Proto:** the protocol of the desired service; this is usually either TCP or UDP.
- **Name:** the domain name for which this record is valid.
- **TTL:** standard DNS time to live field.
- **Class:** standard DNS class field (this is always IN).
- **Priority:** the priority of the target host, lower value means more preferred.
- **Weight:** A relative weight for records with the same priority.
- **Port:** the TCP or UDP port on which the service is to be found.
- **Target:** the hostname of the machine providing the service.

An example of an SRV record might look like this:

```
_sip._udp.ascom-rd.com. 86400 IN SRV 0 5 5060 sipserver.ascom-rd.com.
```

This points to a server named sipserver.ascom-rd.com listening on TCP port 5060 for SIP protocol connections. The priority given here is 0, and the weight is 5.

SRV records must contain the fully qualified domain name (FQDN) of the host.

How to set priority and weight

SIP clients always use the SRV record with the lowest-numbered priority value first, and only fall back to other records if the connection with this record's host fails. Thus a service may have a designated "fallback" server, which will only be used if the primary server fails. Only another SRV record, with a priority field value higher than the primary server's record, is needed.

If a service has multiple SRV records with the same priority value, clients use the weight field to determine which host to use. The weight value is relevant only in relation to other weight values for the service, and only among records with the same priority value.

In the following example showing five records, both the priority and weight fields are used to provide a combination of load balancing and backup service.

```
_sip._udp.ascom-rd.com. 86400 IN SRV 10 60 5060 bigbox.ascom-rd.com.  
_sip._udp.ascom-rd.com. 86400 IN SRV 10 20 5060 smallbox1.ascom-rd.com.  
_sip._udp.ascom-rd.com. 86400 IN SRV 10 20 5060 smallbox2.ascom-rd.com.  
_sip._udp.ascom-rd.com. 86400 IN SRV 20 50 5060 backupbox1.ascom-rd.com.  
_sip._udp.ascom-rd.com. 86400 IN SRV 20 50 5060 backupbox2.ascom-rd.com.
```

The first three records with priority 10 are primary servers and the last two records with priority 20 are secondary servers.

For each client, a primary server is selected at random with the help of the weight values 60, 20 and 20. This will distribute all clients on the primary servers according to the weight values.

If a client's primary server goes down, the client will use the secondary server instead, i.e. backupbox1.ascom-rd.com and backupbox2.ascom-rd.com.

E.2.4 Load Balancing Using Dynamic Connection: Master Settings

- 1 Select DECT > Master.
- 2 In the drop-down list, select "SIP" protocol.
- 3 Enter the SIP server's domain address.
- 4 A local site proxy server (IP-PBX), e.g. SRST (Cisco), can be used to make emergency phone call in case that the WAN connection goes down, see [E.2.2 Local Site Redundancy](#) on page 132.
Enter the IP address or host name and optionally port of proxy (e.g. proxy2.ascom-rd.com:5060) to the local site proxy server in the Alt. Proxy text field.
- 5 Reset in order to make the changes take effect, see [8.16 Reset](#).
- 6 Repeat step 1 to 5 for all existing Masters.

E.2.5 Load Balancing Using Dynamic Connection: DNS Server Settings

The example below shows the settings in Microsoft Windows Server where the DNS server is installed.

- 1 From a Microsoft Windows Server with the DNS server installed, open the DNS management tool.
- 2 Right click the domain (or subdomain) you are assigning this service to and select "Other New Records...".

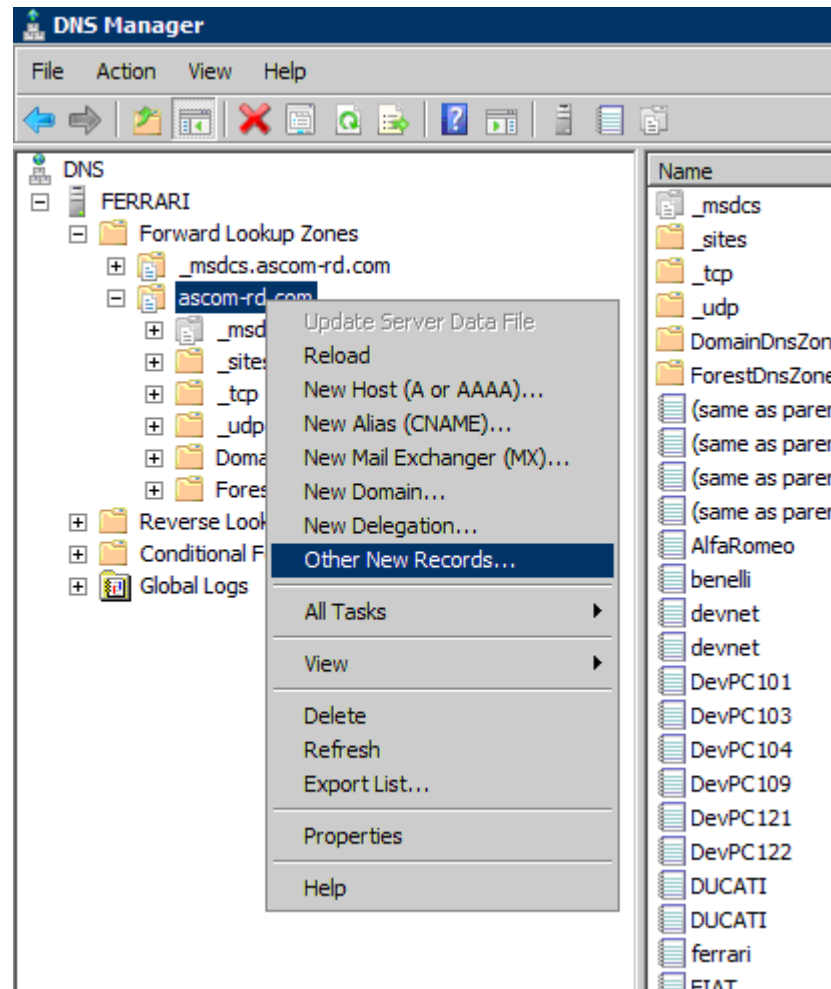


Figure 4. Select "Other New Records...".

- 3 Scroll down to Service Location (SRV) in the list.


- 4 In the "New Resource Record" window, see [Figure 5](#), do as follows:
Enter "_sip" in the *Service* field.
Enter _udp in the *Protocol* field.
Assign a priority and weight. For information on how to set priority and weight, see [E.2.3 About SRV Records](#) on page 133.
Enter "5060" as the port number.
Enter the host name of your SIP server (IP-PBX). Note: The host name must be a fully qualified domain name (FQDN).
Click "OK".

The screenshot shows a Windows-style dialog box titled "New Resource Record". It has a tab labeled "Service Location (SRV)". Inside the dialog, there are several input fields and dropdown menus. The "Domain:" field contains "ascom-rd.com". The "Service:" dropdown menu is set to "_sip". The "Protocol:" dropdown menu is set to "_udp". The "Priority:" field contains "10". The "Weight:" field contains "60". The "Port number:" field contains "5060". Below these fields is a text box labeled "Host offering this service:" which contains "bigbox.ascom-rd.com". At the bottom of the dialog, there is a checkbox with the text "Allow any authenticated user to update all DNS records with the same name. This setting applies only to DNS records for a new name." which is currently unchecked. To the right of the checkbox are three buttons: "OK", "Cancel", and "Help".

Figure 5. New resource record settings

- 5 You can view your new SRV record by clicking on the _udp item under your domain.
- 6 Right click the domain (or subdomain) where the new SRV record is located and select "New Host (A)...".

- 7 In the "New Host" window, see [Figure 6](#), do as follows:
Enter in the *Name* field the host name of your SIP server (IP-PBX).
Verify that the fully qualified domain name (FQDN) is the correct one.
Enter the IP address of your SIP server.
Click "Add Host".

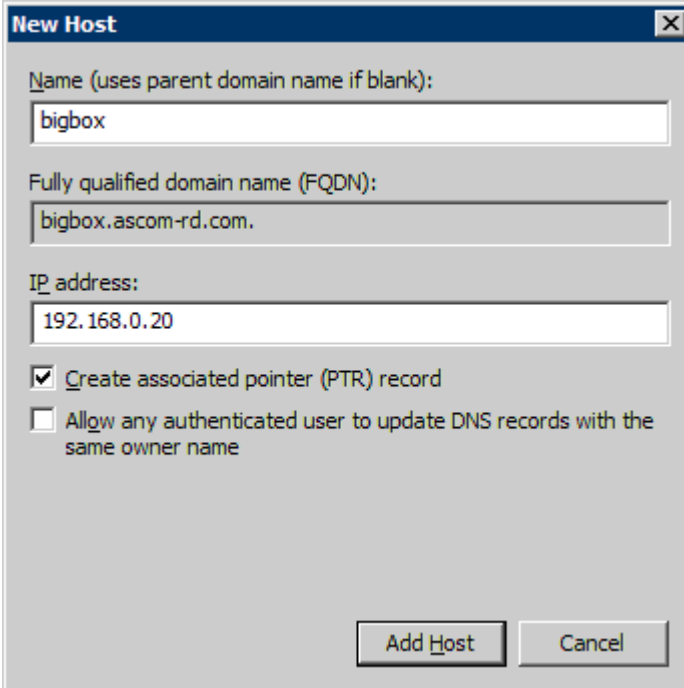

New Host

Name (uses parent domain name if blank):
bigbox

Fully qualified domain name (FQDN):
bigbox.ascom-rd.com.

IP address:
192.168.0.20

☒ Create associated pointer (PTR) record

☐ Allow any authenticated user to update DNS records with the same owner name

Add Host Cancel

Figure 6. New host settings

- 8 Repeat step 1 to 7 for all existing IP-PBXs.